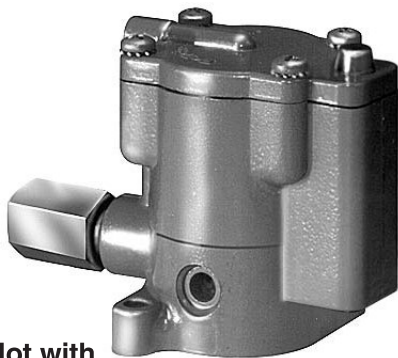
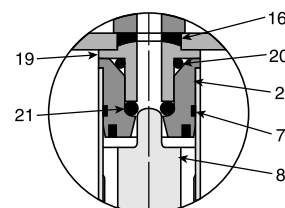
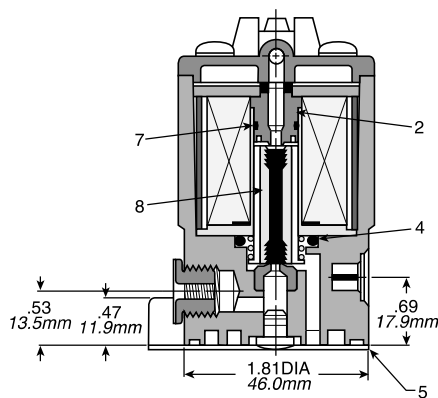
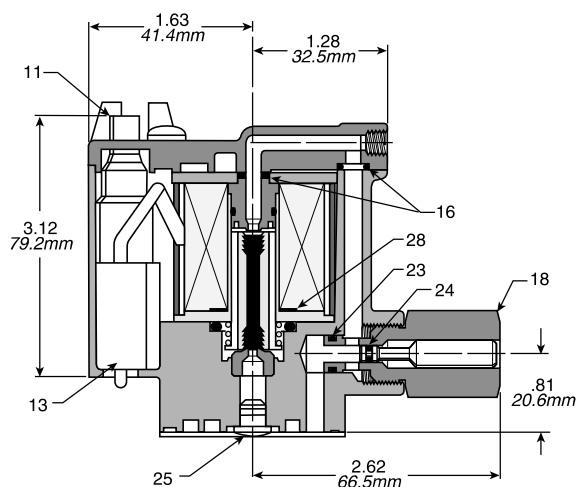


Dimensions - Parts Data**Solenoid Pilot Valve
Plug-In Pilot Valve****Plug-In Pilot with
Indicator Light (120VAC/24VDC)****Replacement Pilots**

Description	Standard Service		Special Service	
	Locking	Non-Locking	Locking	Non-Locking
With Override (120VAC)	K175 9035 53	K175 8035 53	K185 9025 53	K185 8025 53
With Override (Other than 120VAC)	K175 3035	K175 2035	K185 3025	K185 2025

**Special Service
Pilot Only****Standard Pilot Only****Parts List**


Item No.	Part Number	Description
2	K423 005	Top Seat (STD. Service)
	K423 010	Top Seat (SPL. Service)
* 4	H142 13	Seal
* 5	K183 001	Gasket
* 7	H249 69	O-Ring
* 8	K343 002	Plunger (STD. Service)
	K343 001	Plunger (SPL. Service)
11	H191 05	Light (120 AC)
	H191 12	Light (24VDC)
13	K593 125	Coil 120V 60Hz / 110V 50Hz, for Indicator Light**
	K593 071	Coil 120V 60Hz / 110V 50Hz
	K593 081	Coil 240V 60 Hz / 220V 50 Hz
	K593 048	Coil 6VDC / 12V 60Hz
	K593 055	Coil 12VDC
	K593 274	Coil 24VDC, for Indicator Light**
	K593 060	Coil 24VDC

Item No.	Part Number	Description
* 16	H142 01	Seal
18	K152 003	Override Assembly
19	K213005	Insert
* 20	H134 13	O-Ring
* 21	H134 73	O-Ring
* 23	H134 58	O-Ring
* 24	H134 62	O-Ring
* 25	K333 002	Plug
28	K183 108	Gasket

* Parts included with Service Kit

Standard Service Kit K352166

Continuous Duty Kit K352366

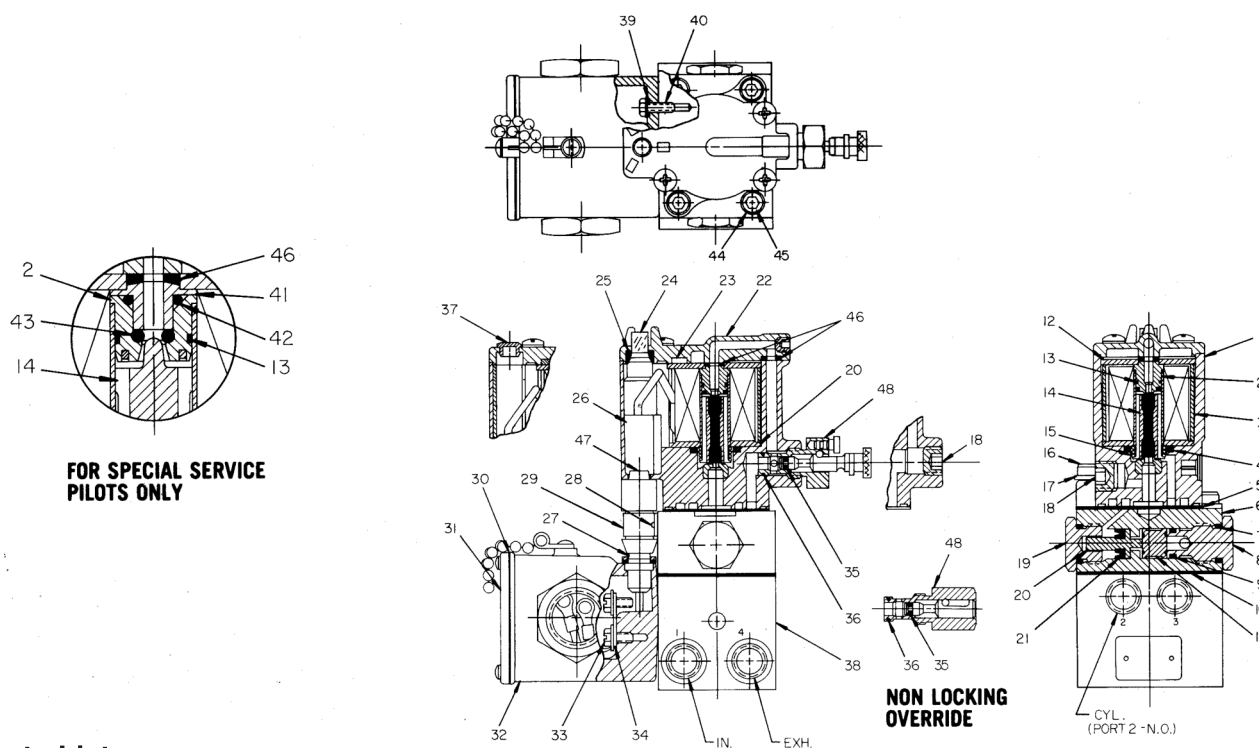

Parts List

Item No.	Part Number	Description
1	K112 074	Body (1/16" Orifice) N.O.
	K112 037	Body (3/32" Orifice) N.O.
	K112 038	Body (1/8" Orifice) N.O.
2	K423 005	Top Seat (1/16" Orifice)
	K423 006	Top Seat (3/32" Orifice)
	K423 004	Top Seat (1/8" Orifice)
	K423 010	Top Seat (Special Service)
3	K443 009	Sleeve
•4	K142 13	Seal
•5	K183 001	Gasket
6	K053 216	Body
•7	H142 07	Seal (2)
8	K033 004	End Cap
•9	H134 24	O-Ring
•10	K183 020	Gasket
•11	K282 001	Shuttle Assembly
12	K323 005	Top Plate
•13	H249 69	O-Ring
•14	K343 002	Plunger (Standard Service)
	K343 001	Plunger (Special Service)
15	K473 001	Spring
16	H100 60	Cap Screw (2)
17	H175 12	Washer (2)
18	K21R02025	Plug (2)
19	K033 003	End Cap
20	K313 003	Piston
21	H129 01	U-Cup
22	K062 016	Cover Assy (Standard Service)
	K062 032	Cover Assy (Special Service)
23	H147 01	Shock Pad (3)
24	H191 05	Indicator Light
25	H663 003	Seal

Item No.	Part Number	Description
26	K593 125	Coil (For Indicator Light) 120V 60Hz / 110V 50Hz
	K593 081	Coil 240V 60Hz
	K593 048	Coil 6VDC
	K593 055	Coil 12VDC
	K593 060	Coil 24VDC
	K593 274	Coil (For Indicator Light) 24VDC
27	H027 44	Plug
28	H104 04	Screw (2)
29	K603 001	Retaining Clamp
30	K183 079	Gasket
31	K062 030	Cover Assembly
32	K203 061	Housing
33	H114 06	Screw (2)
34	K372 002	Grounding Strip Assembly
•35	H134 62	O-Ring
•36	H134 58	O-Ring
37	K333 010	Plug
38	K253 131	Manifold
39	H142 65	Seal (2)
40	H114 07	Screw (2)
41	K213 005	Insert
•42	H134 13	O-Ring
•43	H134 73	O-Ring
44	H175 12	Washer (2)
45	H100 55	Screw (2)
•46	H142 01	Seal (2)
47	H027 15	Connector
48	K152 003	Locking Override
	K162 001	Non-Locking Override
49	K663 004	Grommet (Not Show)

1. • Parts included in Service Instruction K352 061.
2. For Special Service order Service Instruction K352 261.
3. () Quantity req'd.