
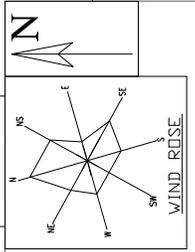


5/210-000-AJ-0 (REV. 04/01)

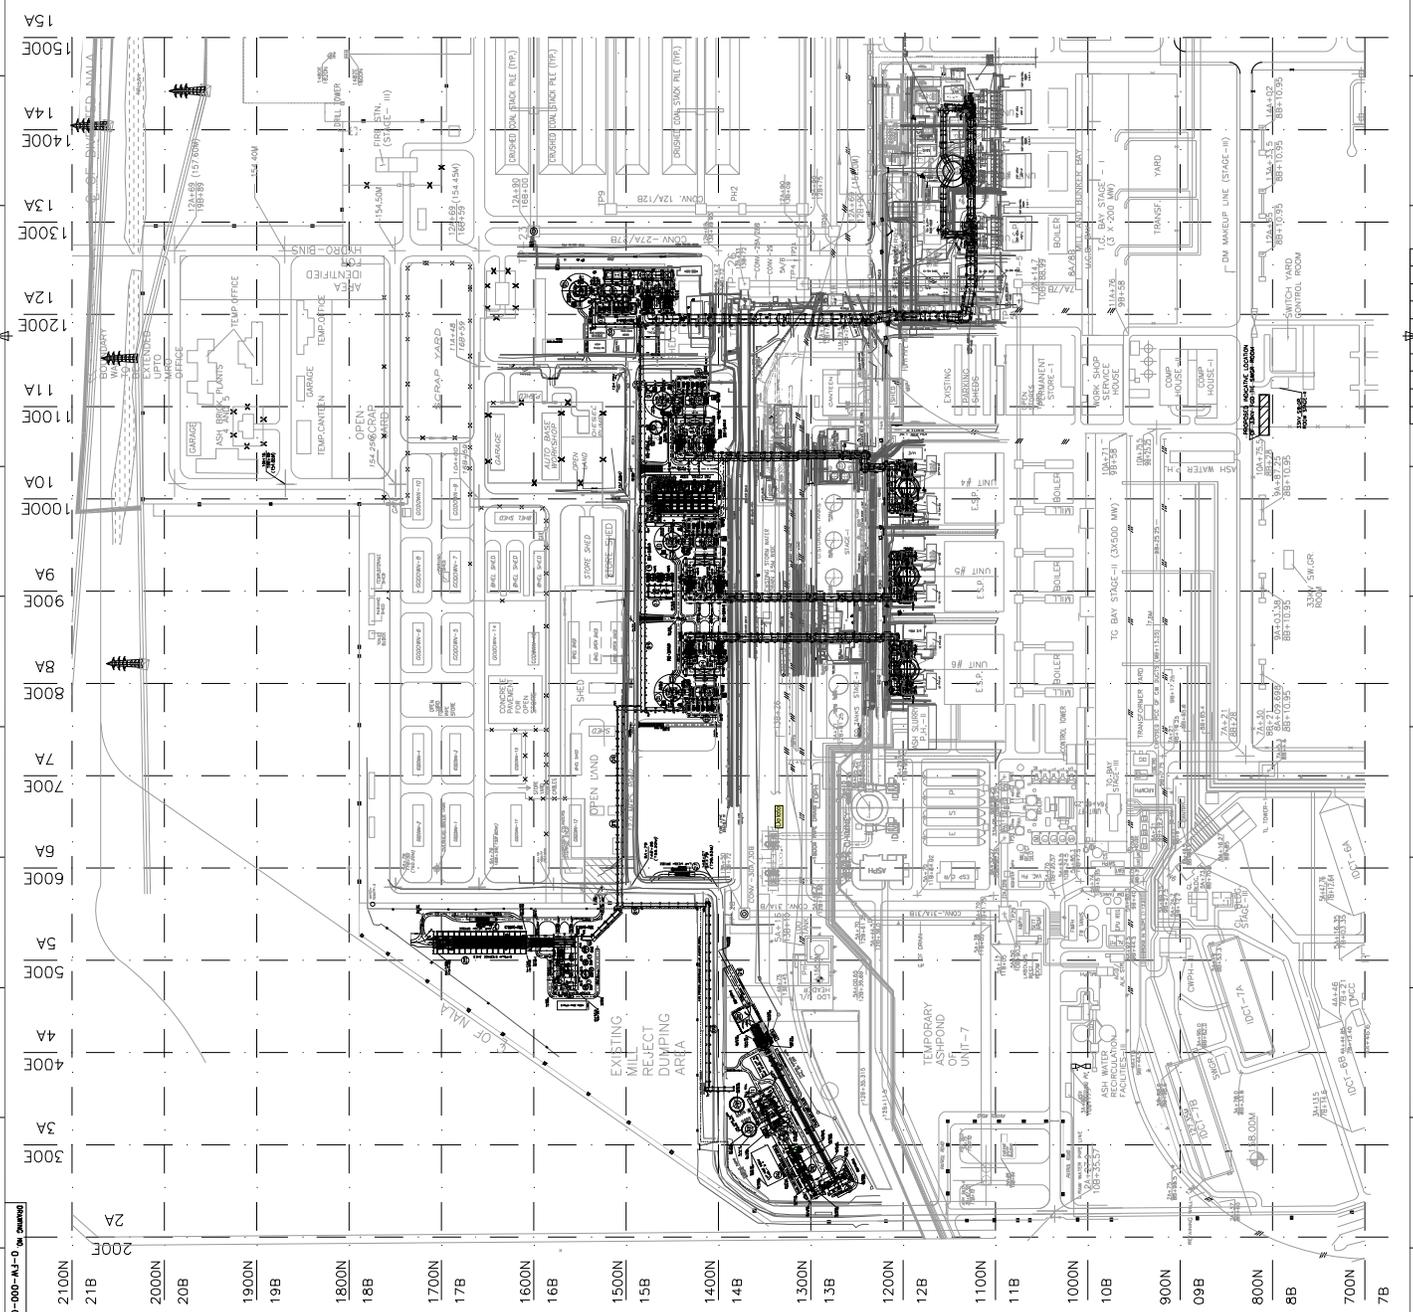

EQUIPMENT/STRUCTURE NO.	DESCRIPTION
01	NEW WET STACK
02	WET LIMESTONE BASED ABSORBER
03	RC PUMPS AND OXIDATION BLOWER HOUSE
04	BOOST UP FANS
05	AUXILIARY ABSORBENT TANK
06	LHP MCC ROOM STAGE-I & II
07	ACM PUMP HOUSE
08	FGO CONTROL ROOM
09	PIPE AND CABLE RACK
10	LIMESTONE STORAGE SILDS
11	BALL MILL BUILDING
12	WET LIMESTONE BALL MILL
13	LIMESTONE SLURRY STORAGE TANKS
14	GYPSUM DEWATERING BUILDING CUM COMPRESSOR HOUSE
15	SECONDARY HYDRO CYCLONE FEED TANK
16	PRIMARY HYDRO CYCLONE FEED TANK
17	WASTE WATER TANK
18	FILTRATE WATER TANKS
19	PROCESS WATER TANKS
20	TRUCK UNLOADER RAMP
21	TRUCK UNLOADER
22	LIMESTONE BELT CONVEYER
23	LIMESTONE STORAGE DAY SILDS
24	LIMESTONE CRUSHER HOUSE
25	GYPSUM STORAGE SHED
26	GYPSUM WEIGH BRIDGE
27	LIMESTONE WEIGH BRIDGE

**NOTES:**  
 1. ALL DIMENSIONS ARE IN MILLIMETRES AND ELEVATIONS IN METRES.  
 2. EL(4)0000 OF MAIN PLANT AREA CORRESPONDS TO RL(+1)52.00.  
 3. LOCATION/SIZES OF VARIOUS FACILITIES/BUILDINGS ARE TENTATIVE.  
 4. FGL OF FGO FACILITIES SHALL BE AS PER LEVEL MARKED IN RESPECTIVE AREA.


**REFER DRG. NOS:**  
 1. 3130-109-PW-B-007  
 2. 3130-109-PW-B-008  
 3. 3130-109-PW-B-009  
 4. 3130-109-PW-B-010  
 5. 3130-109-PW-B-011  
 6. 3130-109-PW-B-012

**GENERAL ARRANGEMENT & DATA SHEET FOR BOOSTER FAN CUSTOMER, NPC LIMITED. GENERAL ARRANGEMENT & DATA SHEET FOR BOOSTER FAN STAGE-I(3X200MM) & STAGE-II(3X200MM)**

NO.	REV.	DATE	BY	CHK.	APP.	ASB.	ASB.	ASB.
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								
33								
34								
35								
36								
37								
38								
39								
40								
41								
42								
43								
44								
45								
46								
47								
48								
49								
50								
51								
52								
53								
54								
55								
56								
57								
58								
59								
60								
61								
62								
63								
64								
65								
66								
67								
68								
69								
70								
71								
72								
73								
74								
75								
76								
77								
78								
79								
80								
81								
82								
83								
84								
85								
86								
87								
88								
89								
90								
91								
92								
93								
94								
95								
96								
97								
98								
99								
100								

PROJECT NAME: BOOSTER FAN STAGE-I(3X200MM) & STAGE-II(3X200MM)  
 PROJECT NO: 5/210-000-01375  
 SHEET NO: 01 OF 01 REV. 02  
 DATE: 04/01/2008

3130-109-PM-B-049

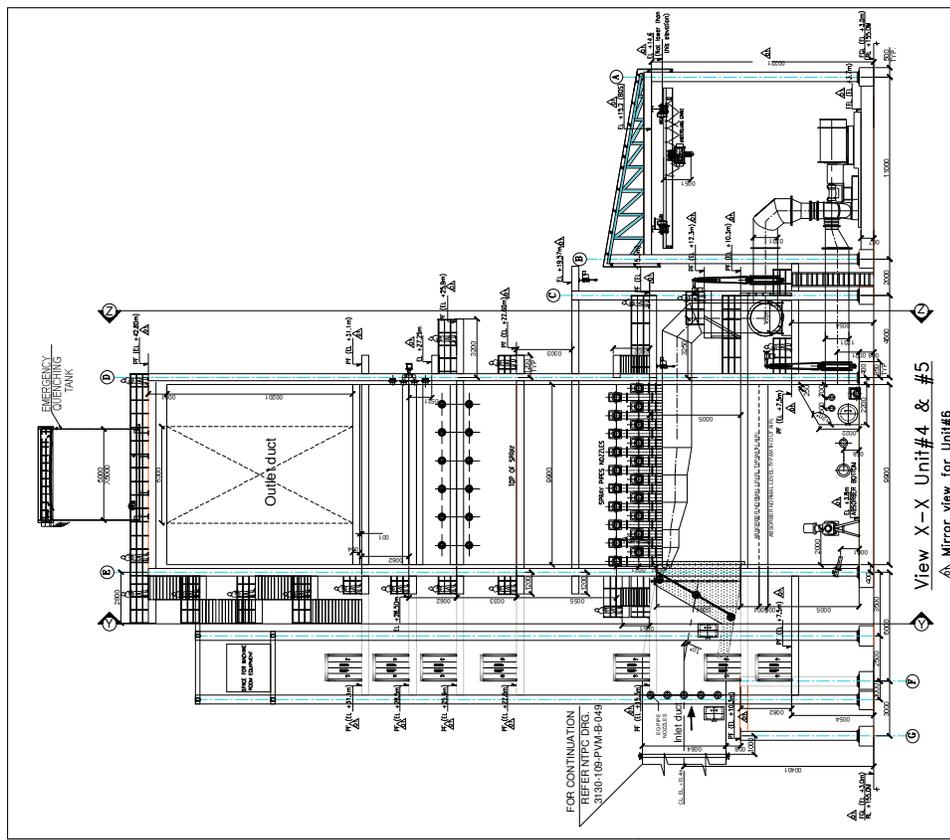

FOR CONTINUATION  
REFER NTPC DRG.  
3130-109-PM-B-049


View X-X Unit #4 & #5  
Mirror view for Units

- LEGEND:-**
- FFL : FINISHED FLOOR LEVEL
  - BSB : BOTTOM OF BASE PAVEMENT LEVEL
  - SLB : SUB GRADE LEVEL
  - PL : PAVEMENT LEVEL
  - TOP : TOP OF CONCRETE
  - CL : CENTERLINE
  - CC : CENTERLINE OF CONCRETE

- NOTES:**
1. ALL DIMENSIONS ARE IN MILLIMETERS.
  2. THIS FLOOR LEVEL = RL 1155.00M. CORRESPONDS TO PLANT ELEVATION WHICH IS GROUND FLOOR OF SIG BUILDING.
  3. DIMENSIONS FOR REFERENCE ON WORKING DRAWINGS TO BE OBTAINED FROM ACTUAL DATA FROM VENDORS.
  4. DIMENSIONS FOR REFERENCE ON WORKING DRAWINGS TO BE OBTAINED FROM ACTUAL DATA FROM VENDORS.
  5. DIMENSIONS FOR REFERENCE ON WORKING DRAWINGS TO BE OBTAINED FROM ACTUAL DATA FROM VENDORS.
  6. DIMENSIONS FOR REFERENCE ON WORKING DRAWINGS TO BE OBTAINED FROM ACTUAL DATA FROM VENDORS.
  7. REFER STANDARD DRAWINGS 3130-109-PM-B-049 & 3130-109-PM-B-048 FOR DETAILS OF STRUCTURE, DIMENSIONS.
  8. DIMENSIONS FOR REFERENCE ON WORKING DRAWINGS TO BE OBTAINED FROM ACTUAL DATA FROM VENDORS.
  9. REFER STANDARD DRAWING NO. EP-0002-411 FOR DETAILS OF EMERGENCY QUENCHING TANK. REFER BIDDING SPECIFICATIONS FOR DETAILS OF DUST SPRAY PIPES.
  10. REFER STANDARD DRAWING NO. EP-0002-411 FOR DETAILS OF EMERGENCY QUENCHING TANK. REFER BIDDING SPECIFICATIONS FOR DETAILS OF DUST SPRAY PIPES.
  11. REFER STANDARD DRAWING NO. EP-0002-411 & EP-0002-412 FOR DETAILS OF DUST SPRAY PIPES.
  12. MINIMUM SHIP USE WITH OF 150MM SHALL BE PROVIDED AS PER NTPC TECHNICAL SPECIFICATION.

- REF. DRAWINGS**
1. 3130-109-PM-F-044 : FGD PLANT LAYOUT
  2. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  3. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  4. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  5. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  6. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  7. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  8. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  9. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  10. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  11. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.
  12. 3130-109-PM-B-049 : GENERAL LAYOUT OF FGD DUCTING.

3130-109-PM-B-049

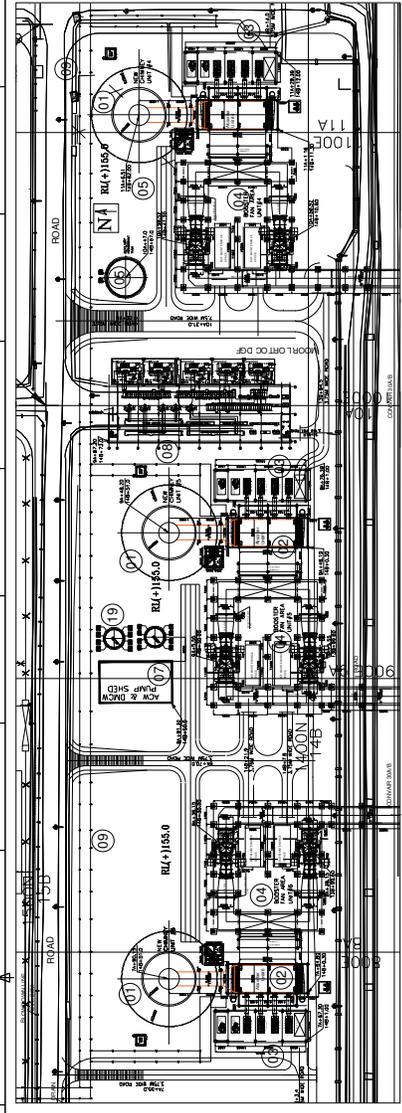

KEY PLAN

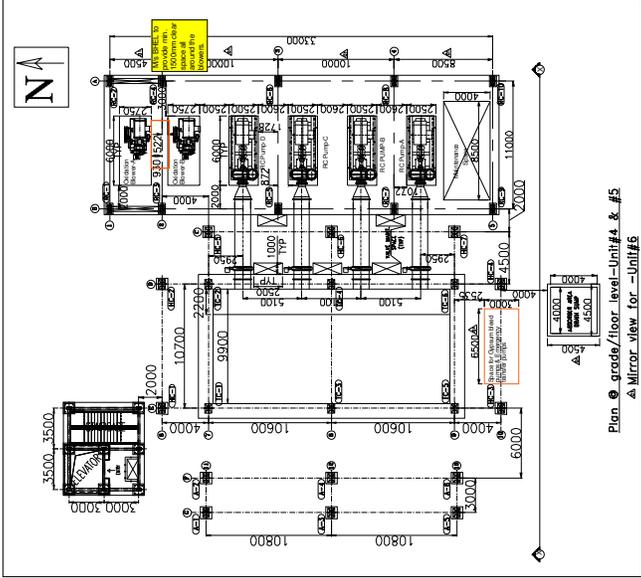


Fig. 9: grade/floor level-Unit#4 & #5  
Mirror view for -Unit#6

PROJECT: NTPC UNIT 4 SUPER THERMAL POWER PLANT  
PROJECT NO.: 3130-109-PM-B-049

NO.	REV.	DATE	DESCRIPTION
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			

CLIENT NO.: 3130-109-PM-B-049  
NTPC Dwg. No.: 3130-109-PM-B-049  
PROJECT: NTPC UNIT 4 SUPER THERMAL POWER PLANT  
PROJECT NO.: 3130-109-PM-B-049  
DRAWN BY: [Signature]  
CHECKED BY: [Signature]  
DATE: [Date]










502520-000-MLT-0

Comments related to the drawing is shown in yellow.

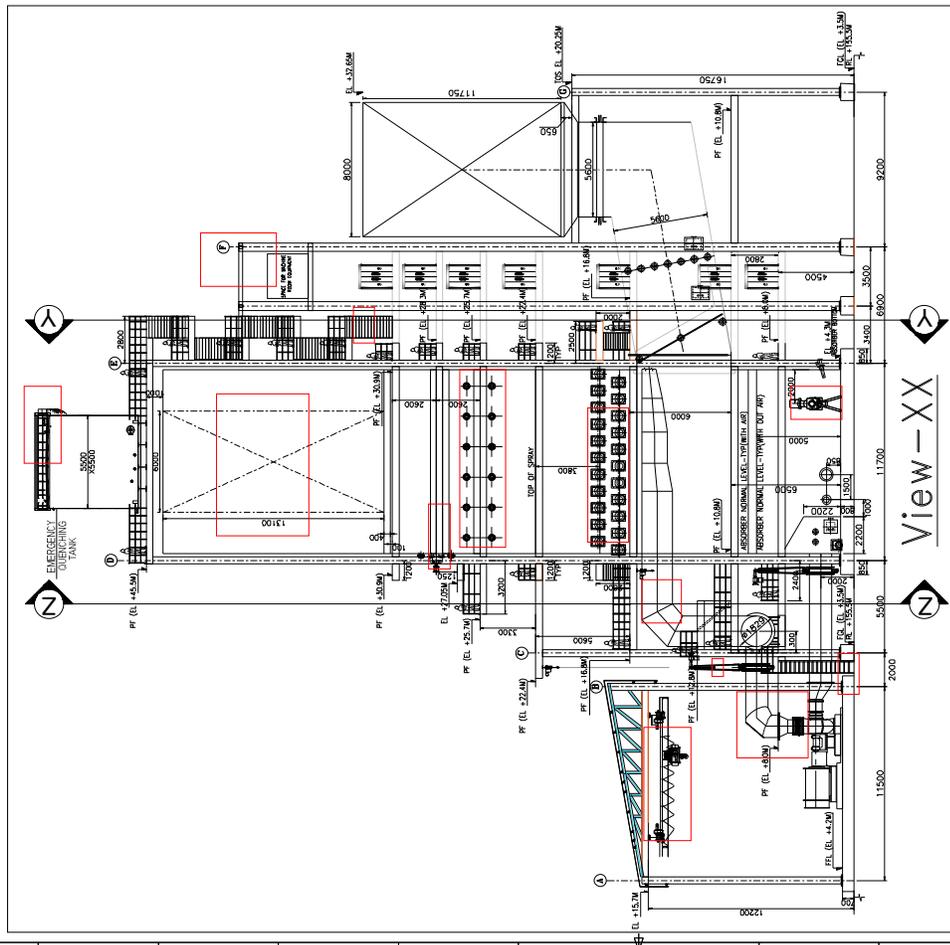


- LEGEND:-**
- FINISHED FLOOR LEVEL
  - TOP OF CONCRETE
  - BOTTOM OF THINNE PLATE LEVEL
  - TOP OF STEEL DECK
  - ROUING SHUTTER AN XMM
  - TOP OF CONCRETE
  - VERTICAL CURVE
  - VERTICAL CURVE

- NOTES:**
1. ALL DIMENSIONS ARE IN MILLIMETERS.
  2. FINISH FLOOR LEVEL = R (150MM) CORRESPONDS TO GRAIN LEVEL WHICH IS GRAIN FLOOR OF SIG BUILDING.
  3. DIMENSIONS ARE TO BE TAKEN FROM THE CENTER LINE OF THE PIPING UNLESS OTHERWISE SPECIFIED.
  4. DIMENSIONS INDICATED FOR REFERENCE ONLY. DIMENSIONS TO BE TAKEN FROM THE CENTER LINE OF THE PIPING.
  5. INDICATED DETAILS OF RC PUMP & OXIDATION BURNERS ARE TENTATIVE AND MAY CHANGE BASED ON ACTUAL DATA FROM VENDORS.
  6. DIMENSIONS OF THE PIPING SHALL BE TAKEN FROM THE CENTER LINE OF THE PIPING UNLESS OTHERWISE SPECIFIED.
  7. REFER STANDARD DRAWING N257-002-411 & 412 FOR DETAILS OF THE ABSORBER.
  8. REFER STANDARD DRAWING N257-002-411 & 412 FOR DETAILS OF THE ABSORBER BOTTOM DRUMS NOZZLE WELDING.
  9. REFER STANDARD DRAWING N257-002-411 FOR DETAILS OF EMERGENCY OVERFLOWING TANK SHEET PILES DETAILS.
  10. REFER STANDARD DRAWING N257-002-411 & 412 FOR DETAILS OF THE DETAILS OF DOCS SPRAY PIPES.
  11. MINIMUM SHOE CORNER WITH OF 150MM SHALL BE PROVIDED AS PER NTPC TECHNICAL SPECIFICATION.

- REQUIREMENTS:**
1. 3130-100-PMM-F-044 : FGD PLANT LAYOUT
  2. 3130-100-PMM-B-049 : GENERAL LAYOUT OF FGD BUILDING.
  3. 3130-100-PMM-F-041 : GENERAL LAYOUT OF Oxidation Blower-System Based Pump, Filterate Water System & Mist Eliminator.
  4. 3130-100-PMM-U-003 : ABSORBER DESIGN BASIS/CRITERIA.
  5. 3130-100-PMM-B-046 : ABSORBER DESIGN BASIS/CRITERIA.
  6. 3130-100-PMM-B-046 : CA & RUC Details of Foundation of Reactor Tank, Filterate tank & Water tank.
  7. 3130-100-PMM-B-012 : Data sheet & General Arrangement for Oxidation Air Blower.

View-XX

Plan @ grade/floor level

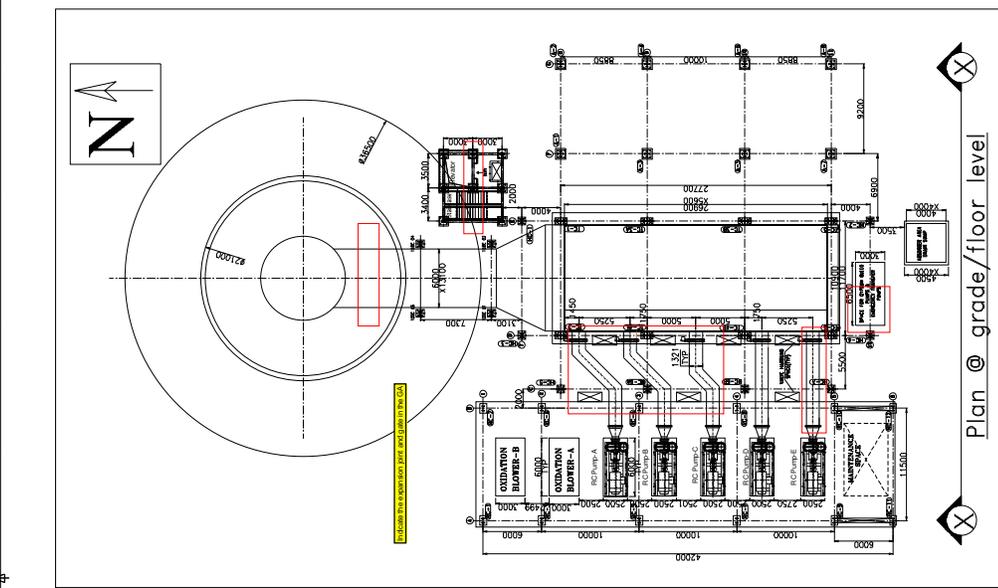

KEY PLAN

**NTPC Dwg. No. 3130-100-PMM-B-010**

**CUSTOMER: NTPC LIMITED SUPER THERMAL POWER PLANT**

**PROJECT: AMALGAMATED SUPER THERMAL POWER PLANT**

**DESIGN: 3130-100-PMM-B-010**

**SCALE: AS SHOWN**

**DATE: 10/01/2010**

**BY: [Signature]**

**CHECKED: [Signature]**

**APPROVED: [Signature]**

**PROJECT MANAGER: [Signature]**

**DESIGNER: [Signature]**

**SCALE: AS SHOWN**

**DATE: 10/01/2010**

**BY: [Signature]**

**CHECKED: [Signature]**

**APPROVED: [Signature]**

**PROJECT MANAGER: [Signature]**

**DESIGNER: [Signature]**

REV	DATE	DESCRIPTION	BY	CHKD	APPD
01		ISSUED FOR APPROVAL			
02		REVISED			
03		REVISED			
04		REVISED			
05		REVISED			
06		REVISED			
07		REVISED			
08		REVISED			
09		REVISED			
10		REVISED			
11		REVISED			
12		REVISED			
13		REVISED			
14		REVISED			
15		REVISED			
16		REVISED			
















15120-00-M-F-0 (REV. 04/2015)




NOTE: TO VERIFY LOCATION OF THE EXISTING FOUNDATION, REFER TO THE FOUNDATION DRAWING SHEET FOR THE EXISTING FOUNDATION.


NOTE: TO VERIFY LOCATION OF THE EXISTING FOUNDATION, REFER TO THE FOUNDATION DRAWING SHEET FOR THE EXISTING FOUNDATION.

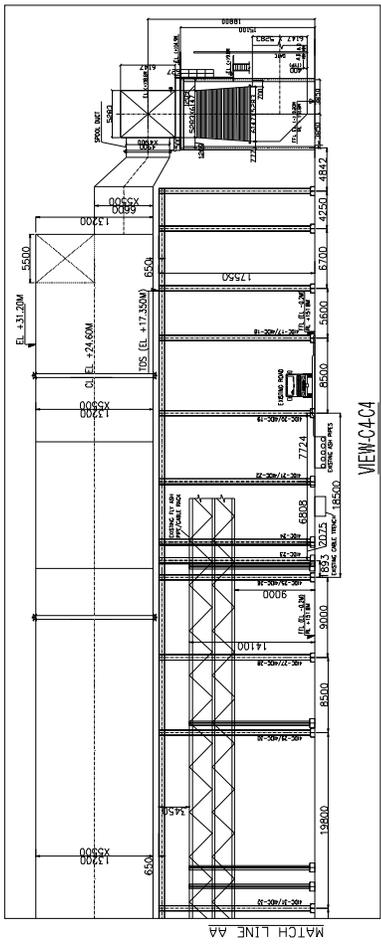


VIEW-C4-C4

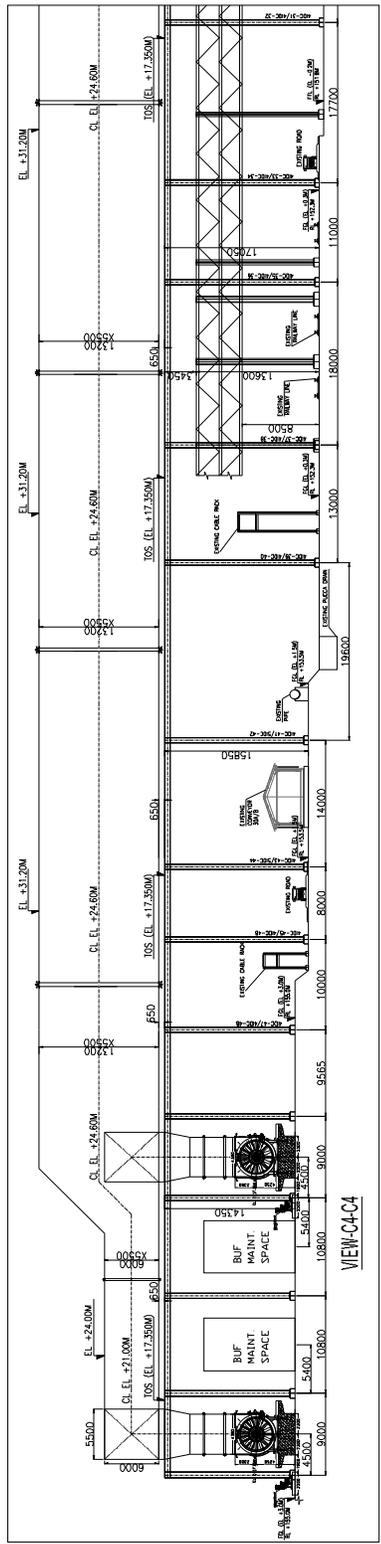


VIEW-C4-C4

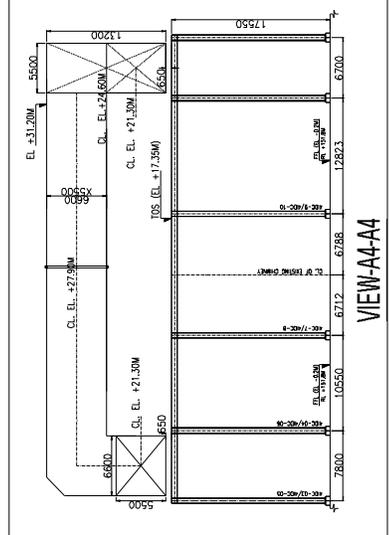

VIEW-A4-A4

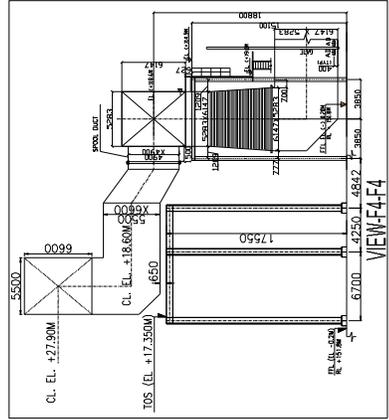

VIEW-F4-F4

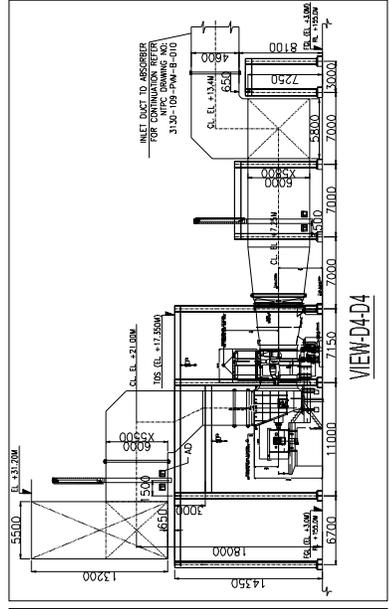

VIEW-D4-D4

NOTES:

1. ALL DIMENSIONS ARE IN MILLIMETERS AND ELEVATIONS IN METERS.
2. EL. (+)0.00 OF MAIN PLANT AREA CORRESPONDS TO EL. (+)162.00.
3. DUCT EDITING SHOWN AROUND SUPPORT COLUMNS ARE INDICATIVE ONLY. REFER RELEVANT FOUNDATION DRAWING FOR EXACT DIMENSIONS OF THE SAME.
4. COLUMN SIZES & ORIENTATION ALONG WITH STRUCTURE ARRANGEMENT ARE SHOWN AS INDICATIVE ONLY. REFER CORRESPONDING STRUCTURE DRAWINGS FOR DETAILS OF THE SAME.

CUSTOMER NO: 606031046511  
 NTPC DRAWING NO: 3130-108-PM-F-048  
 CUSTOMER WORK UNIT: NTPC  
 PROJECT: NTPC  
 STAGE: (S20000) & STAGE: (S30000)  
 SHEET NO: 001 OF 001  
 PROJECT NO: 606031046511  
 SHEET OF 001 DRAWING SHEETS  
 DATE: 02-11-2015  
 02-11-2015 10:44:40 AM










 <b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020						
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>						
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

**FGD Package of Ramagundam STPS Stage – I & II (3x200 MW + 3x500 MW)**

**Painting Scheme for FGD System, Booster Fans, Gates & Dampers**

<b>Prepared By</b>	<b>Reviewed By</b>	<b>Approved By</b>
 14/9/2020 <b>Abdul Ghani,</b> Senior Engineer / QA	 14/9/2020 <b>Arunachalam R,</b> DGM / QA	 14/9/2020 <b>Saketharaman K ,</b> AGM / Quality

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020					
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

### Record of Revisions

Rev No	Date	Details of Revision	
00	21/05/2020	First Submission	
01	26/06/2020	<b>NTPC Comments:</b>	<b>BHEL Replies:</b>
		Furnish Painting scheme for complete Limestone and Gypsum Handling Plant.	Limestone and Gypsum Handling Plants are not in BHEL-Ranipet scope of supply. Painting requirements for these will be submitted by BHEL-ISG during detailed designing.
		BHEL to mention specification clause in every sl no. wherever it is not mentioned.	Mentioned wherever not available.
		Mention the IS clause for handrails as per specification wherever necessary in this document.	IS:4736, referred in NTPC Technical Specification, has been mentioned for hot dip galvanizing of handrails.
		Sl No: 5 of Fans: a) Delete MIO everywhere in this document Titanium dioxide is only option as per spec. b) Please mention With glossy finish as mentioned in spec.	a) MIO deleted wherever Titanium dioxide (TiO <sub>2</sub> ) is specified in the technical specification. b) Glossy finish included.
		Sl Nos: 1, 28 of FGD: For Slurry recirculation pump System, slurry pump and accessories, water pumps, follow clause no 1.04.00 Paints/ Painting, Sub-section -III, Part-A, to provide 300 microns DFT.	Since these products are coming inside building and able to withstand the designed environment with the paint applicable for ECWS, paint specified under CI 7.05.00 of Sub-Section: I- M5 Section-VI, Part-B has been used.
Sl Nos: 4-7 of FGD: For Absorber system base, structures, duct supports, supports for RC pump house, casing bottom, casing top: painting shall be as per clause no 1.04.00 Paints/Painting, Sub-section -III, Part-A.	Since these products are structurals, painting requirements of structural steels specified under CI 31.03.00 of Sec.VI, Part-B, Subsection- IV-D are more appropriate and used accordingly.		

	<b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: <b>PS:RAMA:FGD:G208</b> Rev: 03 Dt: 14/09/2020 NTPC Contract No: <b>CS-3120/3130-109(3)-9-FC-NOA-6845</b> Dt: 22/08/2019 NTPC Doc No: <b>3130-109-PVM-H-001</b> Rev: 03 Dt: 14/09/2020					
	<b>Project</b> <b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

Rev No	Date	NTPC Comments:	BHEL Replies:
01	26/06 /2020	<p>SI Nos: 8, 11 &amp; 12: Absorber system accessories, Emergency quench system, Handling Equipment RC pump, Air oxidation system, Viewing ports (Without glass).</p> <p>1. why different clause is being referred for absorber internal structure and rest of absorber? It is clearly written in specification for components where no specific requirement is stipulated, the painting conforming to the requirements stipulated below shall be provided. (Clause 1.04.00 of Part- A Section VI) to be followed for complete absorber.</p> <p>2. BHEL to note SL no. 11 and 12 are mechanical system not structures so following clause of specification need to be followed. (Clause 1.04.00 of Part- A Section VI)</p>	<p>These products are very small items like nozzles, flanges &amp; inspection doors, viewing ports, etc., and surfaces are exposed to temperature around 80 – 95<sup>o</sup> Celsius. Hence, this painting (Clause 20.03.00 of Part- C Section VI) is meant for protection until erection.</p>
		<p>SI No: 13 – 18 of FGD: What about painting scheme of Duct supports?            1. Bypass duct, Booster fan, Scrubber, Stack            Paint to be changed as "Primer shall be of ethyl silicate zinc primer as per specification requirement".</p>	<p>Duct supports are covered under SI No: 5, 19, 20, 21 &amp; 22. Since these are ducts insulated post erection, the already given paint will ensure protection until erection.</p>
		<p>SI No 24 of FGD: Elevators &amp; Accessories -Follow (Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)</p>	<p>Since it is an equipment which involves thin items like body, doors and electric items, shot blasting cannot be done. Hence, the already provided paint would suffice.</p>
		<p>SI No 28 of FGD: As per clause no 1.04.00 Paints/Painting, Sub-section -III, Part-A, Vendor to provide 300 microns DFT.            Follow above clause for slurry pump and accessories, water pumps.</p>	<p>Since these products are coming inside building and able to withstand the designed environment with the paint applicable for ECWS, paint specified under CI 7.05.00 of Sub-Section: I- M5 Section-VI, Part-B has been used.</p>
		<p>SI No 30 of FGD: Follow (Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D) for SL no.30</p>	<p>Since it is an equipment which involves various electric items and small items like manhole doors, shot blasting cannot be done. Hence, the already provided paint would suffice.</p>

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020					
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

Rev No	Date	NTPC Comments:	BHEL Replies:
01	26/06 /2020	Sl No 35 & 36 of FGD: BHEL to note SL no. 35 and 36 are mechanical system not structures so following clause of specification need to be followed. (Clause 1.04.00 of Part- A Section VI)	Sl No 35: Silo is a tank made of many structural segments. Since, inside SS lining is provided at Site, as a temporary protection until erection, the existing paint has been given. Sl No 36: These are special equipment and shot blasting would affect the performance. Hence, the already provided paint would suffice.
		Sl No 40 of FGD: (Limestone Mill – Inside surface): Which clause has been followed here?	For inside surfaces of mill, since protection is required until erection, the existing paint has been given.
		Sl No 42 of FGD: BHEL to note SL no.42 are mechanical system not structures so following clause of specification need to be followed. (Clause 1.04.00 of Part- A Section VI)	Since these tanks are structural i.e., made-up of several tiers and each tier with many structural segments, painting requirements of structural steels specified under CI 31.03.00 of Sec.VI, Part-B, Subsection- IV-D are more appropriate and used accordingly.
		Sl No 48 of FGD: All valves (Temp <95 deg C) (Clause 20.03.00 of Part- C Section VI)	These products are exposed to temperature around 80 – 95° C. Hence, painting in CI 20.03.00 of Part- C Section VI is provided.
		Sl No 50 of FGD: Supports for cable trays, Air receivers, commissioning & Mandatory spares, Tools & tackles: Follow Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)	These are flimsy/thin structures and shot blasting would affect the performance. Hence, the already provided paint would suffice.
		Sl No 2 of Gates & Dampers: Seal air piping, knife gate valve, mounting bracket and mandatory spares. BHEL to follow piping clause for seal air piping. (cl. 7.05.00 of Section-VI, Part-B, Sub section-I-M5)	This piping does not come under ECWS. However, the already provided paint would suffice.
		Sl No 3 of Gates & Dampers: Knife Gate valve, Mounting bracket, Mandatory spares: As these are mechanical systems follow (Clause 1.04.00 of Part- A Section VI)	Since these are small equipment, the already provided paint would suffice.
		Painting of damaged areas: Change primer to "Zinc rich epoxy or suitable primer with existing paint scheme".	Included.
		Shade number for Aliphatic isocyanate acrylic polyurethane paint to be specified.	Included.
Painting schedule for ECW system not mentioned.	ECWS is not in BHEL-Ranipet scope of supply.		

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme			BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020				
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

Rev No	Date	NTPC Comments:	BHEL Replies:
02	19/08 /2020	Nowhere in this document revision has been marked. BHEL to mark revision everywhere applicable in this document and resubmit the document	Rev: 01 indicated by triangle. $\Delta$ Rev: 02 indicated by circle. $\circ$
		SI Nos 1, 28 of FGD: Painting approval On hold for these equipment, please follow clause no 1.04.00 Part- A Section VI) for mechanical equipment	Incorporated requirements of Cl 1.04.00 Part-A Section VI for SI Nos: 1 & 29.
		SI Nos 11, 12 of FGD: Painting approval On hold for these equipment, please follow clause no 1.04.00 Part- A Section VI) for mechanical equipment	Included for major items (SI Nos: 11 & 13). For minor items (SI Nos: 12 & 14) like nozzle, flanges, etc., existing painting retained.
		SI Nos: 13-18 of FGD: Please follow specification: Primer shall be of ethyl silicate zinc primer as per specification requirement.	Incorporated as per specification for the flue gas swept side of absorber inlet ducts in SI No: 19.
		SI Nos: 35, 36 of FGD: Painting approval On hold for these equipment, please follow clause no 1.04.00 Part- A Section VI) for mechanical equipment	For SI no 37 Lime Stone Silo - Inside: The painting envisaged is until erection only. Once the system is commissioned, paint will peel off completely and application of intermediate and finish paints will become redundant. Therefore, primer is proposed. Also, primer given is of Inorganic Zinc silicate which offers superior protection against corrosion, abrasion and chemical resistance. Hence, we request you to kindly consider and approve the painting envisaged. For SI No 38: These are small & special equipment and shot blasting would negatively affect the performance. Hence, the already provided paint would suffice.
		SI Nos: 42 of FGD: Painting approval On hold for these equipment, please follow clause no 1.04.00 Part- A Section VI) for mechanical equipment	Included for SI No:44.
		For SI N 50 of FGD: Finish coat DFT to be 60 microns and total DFT to be 120 microns.	Included for SI No: 52.

		<b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020				
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>						
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

03	14/08/2020	SI Nos: 3 of Gates & Dampers: Painting approval On hold for these equipments please follow clause no 1.04.00 Part- A Section VI) for mechanical equipments.	BHEL to ensure painting of C&I related items in line with technical specification requirement. Title of this document may also be modified suitably.
		Page 9 of 33(Rev 2 document).C&I related LIE, LIR, Panels and JB's to be included here as well.	for which PGMA's are released by Ranipet Engg. Paint thickness and paint color for items like C&I related LIE,LIR , panels and JB's will be ensured in respective Drawing / Data sheet released by BHEL Ranipet. Therefore, the painting of electrical items is not covered under this painting scheme. This is the practice which is being followed for Auxiliaries as well.
		SI no 16 of FGD, NTPC asked to change paint and DFT.	Incorporated
		SI no 17 of FGD, NTPC asked to delete the painting scheme stating non metallic expansion joint.	Incorporated
		SI no 18 of FGD, NTPC asked to change paint and DFT.	Incorporated
		Page 32 of 33, marked sl no 21 to 26 and 28.	Deleted those sl no as those PGMA's not available for this project.
Page 32 of 33, BHEL is requested again to mark every revision.		Rev: 01 indicated by triangle. △ Rev: 02 indicated by circle. ○ Rev: 03 indicated by square.	





	<b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		<b>BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020</b> <b>NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019</b> <b>NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020</b>					
	<b>Project FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (μm min)
				Paint	DFT (μm min)	Paint	DFT(μm min)	

				<b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 Δ DFT- 100μ	100	<b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25μ <b>Shade:</b> Grey White, RAL9002	25	300
10	Booster fan LOS with lubricant (Clause 1.04.00 of Part- A Section VI)	55 980	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50μ/coat  <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 Δ DFT- 100μ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75μ Δ  <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25μ <b>Shade:</b> Grey White, RAL9002	75  25	300
11	Booster fan actuator (Clause 1.04.00 of Part- A Section VI)	55 983	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50μ/coat  <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 Δ DFT- 100μ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75μ Δ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25μ <b>Shade:</b> Grey White, RAL9002	75  25	300

## 2. FGD System

 <b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		<b>BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020</b> <b>NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019</b> <b>NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020</b>						
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>						
<b>Sl No</b>	<b>Surface Location</b>	<b>PGMA</b>	<b>Surface Preparation</b>	<b>Primer &amp; Intermediate Coats</b>		<b>Finish Coat</b>		<b>Total DFT (µm min)</b>
				<b>Paint</b>	<b>DFT (µm min)</b>	<b>Paint</b>	<b>DFT(µm min)</b>	
1	Slurry recirculation pump System (Clause 1.04.00 of Part- A Section VI) ○	FW 212	Blast cleaning to Sa 2½ ○	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat ○ <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2, DFT- 100µ ○	100 ○  100 ○	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ ○ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213, DFT-25µ <b>Shade:</b> Grey White, RAL9002 ○	75 ○  25 ○	300 ○
2	Absorber System Internals – Structural items (Clause 1.04.00 of Part- A Section VI)	FW 213	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2, DFT- 100µ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213, DFT-25µ <b>Shade:</b> Grey White, RAL9002	75  25	300
3	Mist eliminator and accessories, Absorber baffle grating support, Mist eliminator support& Absorber Spray pipe support - Structural items (Clause 1.04.00 of Part- A Section VI)	FW 215 FW 216 FW 217 FW 218	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 DFT- 100µ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25µ Shade: Grey White, RAL9002	75  25	300





**BHEL, Ranipet - 632 406, India.**  
**Quality Assurance Department.**  
**Painting Scheme**

BHEL DOC No: **PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020**  
 NTPC Contract No: **CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019**  
 NTPC Doc No: **3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020**

Project		FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)						
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	
6	Absorber system casing bottom- Outside surfaces <b>(Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)</b>  Inside surfaces are of C276 cladded sheets. Hence, no paint is envisaged.	FW 221	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-60µm conforming to ISO 8501-1	<b>Primer:</b> One coat of Two component moisture curing zinc (ethyl) silicate primer coat (Min 80% metallic zinc content in dry film, solid by volume minimum 60% ±2). Zinc dust composition and properties shall be as per Type II as per ASTM D520-00 DFT- 70µ  <b>Intermediate:</b> One coat of Two component polyamide cured epoxy with MIO content (containing lamellar MIO Min 30% on pigment, solid by volume min. 80%±2) DFT- 100µ	70  100	<b>Finish:</b> Two coats of two pack aliphatic isocyanate cured acrylic polyurethane paint to IS 13213 solid by volume min.55%±2) DFT- 35µ/ coat <b>Shade:</b> Grey white, RAL 9002 With gloss retention (SSPC paint spec no.36, ASTM D4587, D2244, D523 of level 2 after min. 1000 hrs exposure, gloss less than 30 and colour change less than 2.0Δ E)	70	240
7	Absorber system casing top- Outside surfaces; Absorber system casing intermediate – Outside ○ surfaces <b>(Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)</b>  Inside surfaces are of C276 cladded sheets. Hence, no paint is envisaged.	FW 222; FW 322 ○	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-60µm conforming to ISO 8501-1	<b>Primer:</b> One coat of Two component moisture curing zinc (ethyl) silicate primer coat (Min 80% metallic zinc content in dry film, solid by volume minimum 60% ±2). Zinc dust composition and properties shall be as per Type II as per ASTM D520-00 DFT- 70µ  <b>Intermediate:</b> One coat of Two component polyamide cured epoxy with MIO content (containing lamellar MIO Min 30% on pigment, solid by volume min. 80%±2) DFT- 100µ	70  100	<b>Finish:</b> Two coats of two pack aliphatic isocyanate cured acrylic polyurethane paint to IS 13213 solid by volume min.55%±2) DFT- 35µ/ coat <b>Shade:</b> Grey white, RAL 9002 With gloss retention (SSPC paint spec no.36, ASTM D4587, D2244, D523 of level 2 after min. 1000 hrs exposure, gloss less than 30 and colour change less than 2.0Δ E)	70	240

 <b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		<b>BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020</b> <b>NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019</b> <b>NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020</b>							
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>							
<b>Sl No</b>	<b>Surface Location</b>	<b>PGMA</b>	<b>Surface Preparation</b>	<b>Primer &amp; Intermediate Coats</b>		<b>Finish Coat</b>		<b>Total DFT (µm min)</b>	
				<b>Paint</b>	<b>DFT (µm min)</b>	<b>Paint</b>	<b>DFT(µm min)</b>		
8	Absorber system accessories <b>(Clause 20.03.00 of Part- C Section VI)</b>	FW 223	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)	40	100	
9	Emergency Quench water tank- Outside surfaces <b>(Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)</b>	FW 226	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-60µm conforming to ISO 8501-1	<b>Primer:</b> One coat of Two component moisture curing zinc (ethyl) silicate primer coat (Min 80% metallic zinc content in dry film, solid by volume minimum 60% ±2). Zinc dust composition and properties shall be as per Type II as per ASTM D520-00 DFT- 70µ <b>Intermediate:</b> One coat of Two component polyamide cured epoxy with MIO content (containing lamellar MIO Min 30% on pigment, solid by volume min. 80%±2) DFT- 100µ	70  100	<b>Finish:</b> Two coats of two pack aliphatic isocyanate cured acrylic polyurethane paint to IS 13213 solid by volume min.55%±2) DFT- 35µ/ coat <b>Shade:</b> Grey white, RAL 9002 With gloss retention (SSPC paint spec no.36, ASTM D4587, D2244, D523 of level 2 after min. 1000 hrs exposure, gloss less than 30 and colour change less than 2.0Δ E)	70	240	
10	Emergency Quench water tank- Inside surfaces (For temporary protection, until erection only)	FW 226	Blast cleaning to Sa 2½ (Near white metal) with surface profile 35-50µm	<b>Primer:</b> Two coats of Red Oxide Zinc phosphate primer, DFT-30µ/coat; Total-60µ (Primer is only envisaged as lining is given in inside surfaces of the tank)					
11 ○	Emergency quench system, Handling Equipment RC pump – major items <b>(Clause 1.04.00 of Part- A Section VI)</b> ○	FW 227 FW 249 ○	Blast cleaning to Sa 2½ ○	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat ○  <b>Intermediate:</b> One coat of Two component epoxy based	100 ○  100 ○	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ ○  <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213	75 ○	300 ○	



BHEL, Ranipet - 632 406, India.  
Quality Assurance Department.  
Painting Scheme

BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020  
NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019  
NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020

Project		FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)						
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

				intermediate paint pigmented with Tio2 DFT- 100µ		DFT-25µ Shade: Grey White, RAL9002	25	
12	Emergency quench system, Handling Equipment RC pump – Minor items like nozzles, flanges, pipes & inspection doors, viewing ports (Clause 20.03.00 of Part- C Section VI)	FW 227 FW 249	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)	60	120
13	Air oxidation system, Viewing ports (Without glass) – Major Items (Clause 20.03.00 of Part- C Section VI)	FW 230 FW 239	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 DFT- 100µ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25µ Shade: Grey White, RAL9002	75  25	300
14	Air oxidation system, Viewing ports (Without glass) - – Minor items like nozzles, flanges, pipes & inspection doors, viewing ports (Clause 20.03.00 of Part- C Section VI)	FW 230 FW 239	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)	40	100

 <b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020							
Project		FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)	
				Paint	DFT (µm min)	Paint	DFT(µm min)		
15 ○	Absorber W/D interface, W/D wash system, Slurry distribution system, Oxidation Air distribution system <b>(Clause 1.04.00 of Part- A Section VI)</b>	FW 228 FW 229 FW 243 FW 244	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat	100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ	75	300	
				<b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 DFT- 100µ	100		<b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25µ Shade: Grey White, RAL9002		25
16 ○	Expansion joint between bypass <b>(Clause 20.03.00 of Part- C Section VI)</b>	Flue gas swept surface	FW 251	Power Tool Cleaning to St3 (SSPC-SP3)	Ethyl silicate zinc primer (suitable upto minimum 400 Deg Celsius)	50	--	--	50
		Insulated surfaces		Power Tool Cleaning to St3 (SSPC-SP3)	HR Aluminum paint to IS 13183 Gr.II (upto 400 deg C)	40	NIL	--	40
17 ○	Expansion joint <b>(Clause 20.03.00 of Part- C Section VI)</b>	Flue gas swept surface	FW 252	Non Metallic Expansion Joint					
	Insulated surfaces								
18 ○	Hookup Ducts, Ducts between bypass duct inlet & booster fan <b>(Clause 20.03.00 of Part- C Section VI)</b>	Flue gas swept surface	FW 238, FW 255 ○	Power Tool Cleaning to St3 (SSPC-SP3)	Ethyl silicate zinc primer (suitable upto minimum 400 Deg Celsius)	50	NIL	--	50
		Insulated surfaces		Power Tool Cleaning to St3 (SSPC-SP3)	HR Aluminum paint to IS 13183 Gr.II (upto 400 deg C)	40	NIL	--	40















 <b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020						
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>						
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

36 ○	Limestone Silo- Inside surfaces (Conical portion) (For temporary protection, until erection only) △	FW 731	Blast cleaning to Sa 2½ (Near white metal) with surface profile 35-50µm conforming to ISO 8501-1	<b>Primer:</b> Two coats of Red Oxide Zinc phosphate primer to IS: 12744  (SS lining is inside the Limestone silo conical portion, hence primer is only envisaged; SS lining will be done at Shop itself)	60	NIL	--	60
37 ○	Limestone Silo- Inside surfaces (Cylindrical portion) (For temporary protection, until erection only) △	FW 731	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-60µm conforming to ISO 8501-1	<b>Primer Coat:</b> One coat of two component moisture curing Inorganic Ethyl Zinc Silicate Primer to IS 14946, (Solid by volume- 60% (min)), (Metallic zinc content 80% (min)) DFT = 70 µm per coat (min.) Zinc dust composition shall be Type-II as per ASTM D520-00	70	--	--	70
38 ○	Air cannon silo, Bag filter & Fan assy, Nozzles& Flanges <b>(Clause 20.03.00 of Part- C Section VI)</b>	FW 723 FW 724 FW 725	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)	40	100
39 ○	Limestone silo approach platform, Platform for Pipe racks & Sub pipe racks <b>(Clause 31.06.00 of Sec.VI, Part-B, Subsection- IV-D)</b>	FW 733 FW 766 FW 767	Blast cleaning to Sa 2½/ Acid pickling	Hand rails, Gratings- Hot dip galvanizing to 610gms/sq.m (minimum) as per IS: 4736 and to a coating thickness of 87µm (min).				△
40 ○	Limestone silo approach platform, Pipe racks, Sub pipe racks platform-	FW 733 FW 766 FW 767	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-	<b>Primer:</b> One coat of Two component moisture curing zinc (ethyl) silicate primer coat (Min 80% metallic zinc content in dry	70	<b>Finish:</b> Two coats of two pack aliphatic isocyanate cured acrylic polyurethane paint to	70	240



**BHEL, Ranipet - 632 406, India.**  
**Quality Assurance Department.**  
**Painting Scheme**

BHEL DOC No: **PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020**  
 NTPC Contract No: **CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019**  
 NTPC Doc No: **3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020**

**Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)**

SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	
	Structures other than the above <b>(Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)</b>		60µm conforming to ISO 8501-1	film, solid by volume minimum 60% ±2). Zinc dust composition and properties shall be as per Type II as per ASTM D520-00 DFT- 70µ  <b>Intermediate:</b> One coat of Two component polyamide cured epoxy with MIO content (containing lamellar MIO Min 30% on pigment, solid by volume min. 80%±2) DFT- 100µ	100	IS 13213 solid by volume min.55%±2) DFT- 35µ/ coat <b>Shade:</b> Grey white, RAL 9002  With gloss retention (SSPC paint spec no.36, ASTM D4587, D2244, D523 of level 2 after min. 1000 hrs exposure, gloss less than 30 and colour change less than 2.0Δ E)		
41 ○	Limestone Mill – Outside surfaces <b>(Clause 1.04.00 of Part- A Section VI)</b>	FW 735	Blast cleaning to Sa 2½	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat  <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 DFT- 100µ	100  100	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ  <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25µ Shade: Grey White, RAL9002	75  25	300
42 ○	Limestone mill- Inside surfaces (For temporary protection, until erection only) △	FW 735	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40-60µm conforming to ISO 8501-1	<b>Primer Coat:</b> One coat of two component moisture curing Inorganic Ethyl Zinc Silicate Primer to IS 14946, (Solid by volume- 60% (min)), (Metallic zinc content 80% (min)) DFT = 70 µm per coat (min.) Zinc dust composition shall be Type-II as per ASTM D520-00	70	--	--	70





**BHEL, Ranipet - 632 406, India.**  
**Quality Assurance Department.**  
**Painting Scheme**

BHEL DOC No: **PS:RAMA:FGD:G208** Rev: 03 Dt: 14/09/2020  
 NTPC Contract No: **CS-3120/3130-109(3)-9-FC-NOA-6845** Dt: 22/08/2019  
 NTPC Doc No: **3130-109-PVM-H-001** Rev: 03 Dt: 14/09/2020

Project		FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)						
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	
	Primary Hydrocyclone feed tank, Clarified water tank, Tank internal structure Inside surfaces - (For temporary protection, until erection only)	FW 800 FW 802						
46 ○	Process water pipe accessories, Cooling pipe accessories <b>(CI 10.00.00 of Section-VI, Part-B, Sub-section: I-M3)</b>	FW 751 FW 752	Power Tool Cleaning to St3 (SSPC-SP3)	<b>Primer:</b> Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats) DFT- 25µ / Coat; <b>Intermediate:</b> One coat of Synthetic Enamel intermediate coat to IS 2932; DFT- 50µ	50  50	<b>Finish:</b> Two coats of Synthetic Enamel to IS 2932, DFT- 50µ/ coat <b>Shade:</b> Grey white RAL 9002 Identification Tag: Sea Green Shade no: 217 as per IS 5	100	200
47 ○	Slurry pipe accessories <b>(CI 10.00.00 of Section-VI, Part-B, Sub-section: I-M3)</b>	FW 753	Power Tool Cleaning to St3 (SSPC-SP3)	<b>Primer:</b> Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats) DFT- 25µ / Coat; <b>Intermediate:</b> One coat of Synthetic Enamel intermediate coat to IS 2932; DFT- 50µ	50  50	<b>Finish:</b> Two coats of Synthetic Enamel to IS 2932, DFT- 50µ/ coat <b>Shade:</b> Grey white RAL 9002 Identification Tag: Sea Green Shade no: 217 as per IS 5	100	200
48 ○	Service Air pipe accessories <b>(CI 10.00.00 of Section-VI, Part-B, Sub-section: I-M3)</b>	FW 754	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coat)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)- 30µ/ coat Identification Tag: Sky Blue <b>Shade no:</b> 101 as per IS 5	60	120
49 ○	Instrument air pipe accessories; Absorber Miscellaneous ○	FW 755; FW 307 ○	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coat)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)- 30µ/ coat	60	120



**BHEL, Ranipet - 632 406, India.**  
**Quality Assurance Department.**  
**Painting Scheme**

BHEL DOC No: **PS:RAMA:FGD:G208** Rev: **03** Dt: **14/09/2020**  
 NTPC Contract No: **CS-3120/3130-109(3)-9-FC-NOA-6845** Dt: **22/08/2019**  
 NTPC Doc No: **3130-109-PVM-H-001** Rev: **03** Dt: **14/09/2020**

Project		FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)						
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	
	(Cl 10.00.00 of Section-VI, Part-B, Sub-section: I-M3)					Identification Tag: Sky Blue Shade no: 101 as per IS 5		
50 ○	All valves (Temp <95 deg C) (Clause 20.03.00 of Part- C Section VI)	FW 815 to FW 851	Power Tool Cleaning to St3 (SSPC-SP3)	Primer: Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats): 30µ/ coat ○ Intermediate: One coat of Synthetic Enamel undercoat to IS:2932-30µ○	60  30 ○	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)- 35µ/ coat. ○	70  ○	160  ○
51 ○	Structure for Pipe racks, Sub pipe racks Trestle for pipe racks, Structures inside Gypsum dewatering building & Ball mill building (Clause 31.03.00 of Sec.VI, Part-B, Subsection- IV-D)	FW 761 FW 765 FW 768 FW 769 FW 787	Blast cleaning to Sa 2½ (Near white metal) with surface profile 40- 60µm conforming to ISO 8501-1	<b>Primer:</b> One coat of Two component moisture curing zinc (ethyl) silicate primer coat (Min 80% metallic zinc content in dry film, solid by volume minimum 60% ±2). Zinc dust composition and properties shall be as per Type II as per ASTM D520-00 DFT- 70µ <b>Intermediate:</b> One coat of Two component polyamide cured epoxy with MIO content (containing lamellar MIO Min 30% on pigment, solid by volume min. 80%±2) DFT- 100µ	70  100	<b>Finish:</b> Two coats of two pack aliphatic isocyanate cured acrylic polyurethane paint to IS 13213 solid by volume min.55%±2) DFT- 35µ/ coat <b>Shade:</b> Grey white, RAL 9002 With gloss retention (SSPC paint spec no.36, ASTM D4587, D2244, D523 of level 2 after min. 1000 hrs exposure, gloss less than 30 and colour change less than 2.0Δ E)	70	240
52 ○	Supports for cable trays, Air receivers, commissioning& Mandatory spares, Tools & tackles (Clause 20.03.00 of Part- C Section VI)	FW 779 FW 798 FW 988 FW 996	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coats)	60	Synthetic Enamel to IS 2932 Shade: Grey white RAL 9002 (Two coats)- 30µ/ coat ○	60  ○	120  ○

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020					
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
Sl No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

### 3. Gates & Dampers

01	<b>Gates &amp; Dampers</b> > 95° C Insulated Surfaces& Uninsulated surfaces <b>(Cl 1.04.03 of Part- A ○ Section VI, Sub-section III)</b>	57 540 57 550 57 583	Power Tool Cleaning to St3 (SSPC-SP3)	HR Aluminium paint to IS 13183 Gr.II (upto 400 deg C): Two coats; 20 µ minimum per coat. ○	40	--	--	40
02	Seal air piping <b>(Cl 10.00.00 of Section-VI, Part-B, Sub-section: I-M3) △</b>	57 141	Power Tool Cleaning to St3 (SSPC-SP3)	Red Oxide Zinc Phosphate Primer to IS: 12744 (Two coat)	60	Synthetic Enamel to IS 2932 <b>Shade:</b> Grey white RAL 9002 (Two coats)- 30µ/ coat Identification Tag: Sky Blue Shade no: 101 as per IS 5	60	120
03	Blower with Motor, Knife Gate valve, Mounting bracket, Mandatory spares <b>(Clause 1.04.00 of Part- A Section VI) ○</b>	57 491 57 497 57 209	Blast cleaning to Sa 2½ ○	<b>Primer:</b> Two coats of Epoxy resin based Epoxy Zinc phosphate primer to IS 13238 DFT- 50µ/coat ○ <b>Intermediate:</b> One coat of Two component epoxy based intermediate paint pigmented with Tio2 DFT- 100µ ○	100 ○  100 ○	<b>Finish:</b> One coat of Epoxy based finish paint with glossy finish to IS 14209; DFT- 75µ ○ <b>Finish:</b> One coat of acrylic aliphatic polyurethane paint to IS 13213 DFT-25µ ○ Shade: Grey White, RAL9002	75 ○  25 ○	300 ○
04	Ladder, Cage for Ladder Toe Guard, Plate Floor Grill, Hand Rails, Hand Rail Post <b>Clause 31.06.00 of Sec.VI, Part-B, Subsection- IV-D</b>	57 466 57 566	Blast cleaning to Sa 2½/ Acid Pickling	Hand rails, Gratings- Hot dip galvanizing to 610gms/sq.m (minimum) as per IS: 4736 and to a coating thickness of 87µm (min). △				



		<b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020				
<b>Project</b>		<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>						
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

### General Notes:

- No painting is required for Galvanized, non-ferrous & stainless steel items, except as indicated above.
- Machined items are to be applied with coat of temporary rust preventive oil.
- PGMAs covered in sub-supplier (ie., Purchased) items viz., Agitator / slide bearing and other sub-delivery components etc., are not indicated in the above list. However, the Painting Schedule for all items supplied by all sub-suppliers and BOI under the scope of BHEL shall be same as for main equipment covered in this document.
- In sub-assy, wherever plates / sheets of thickness less than or equal to 5mm and rods are used, very minor items like clamps, small items etc.- Power Tool or Hand Tool Cleaning to SSPC - SP 3 / SP 2 shall be followed and painting under SI no:01 of Fans shall be followed.
- Ground shade/colour of finish paints and identification tag/band for equipment, fans, piping, pipe services, supporting structures and other components is followed as per NTPC doc no: QS-01-DIV-W-4 at site.
- All components covered under different PGMAs are to be painted. In case any component is left out, the same shall deemed to be included under the relevant section.
- All threaded and other surfaces of foundation bolts and its materials, insulation pins, Anchor channels, Sleeves shall be coated with temporary rust preventive fluid and during execution of civil works; the dried film of coating shall be removed using organic solvents.
- Painting requirement for all electrical equipment shall be as per the details identified in specification for the respective equipment.
- All steel structures shall be provided with painting as given in the specification. Further, painting system shall also meet the requirements of corrosivity category C3 (durability high) as per ISO 12944.
- Finish coat to be applied after an interval of min 10 hrs and within 6 months (after completion of intermediate coat).
- Primer coat on steel shall be applied in shop immediately after blast cleaning by airless spray technique.
- For the portion of steel surfaces embedded in concrete, the surface shall be prepared by Manual cleaning and provided with Primer coat of Chlorinated Rubber based Zinc Phosphate Primer of Minimum 50 Micron DFT.

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020					
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT (µm min)	

**Painting Scheme - Details of Procurement & Application Processes**

SI No	Type of Paint	Specification of Paint	No of Packs	Volume of Solids (% Min)	Mode of Application	Min. Over Coating Interval (Hours)	Shade
01	Epoxy Zinc phosphate primer	IS 13238	2	40	Spray	24	Grey
02	Zinc Ethyl silicate primer (% Zn on dry film= 80 (min))	IS 14946	2	60	Airless Spray only At Shop	24	Grey
03	Epoxy High solid-Polyamide cured Epoxy based MIO pigmented intermediate coat	--	2	80	Airless Spray only At Shop	16	Brown
04	Aliphatic isocyanate acrylic polyurethane paint	IS 13213	2	55	Spray At Shop	16	Windows Grey RAL 7040
05	Heat resistant aluminum paint	IS 13183 Grade II	1	--	Brush/ Spray	24	--
06	Long oil alkyd Synthetic enamel finish paint	IS 2932	1	35	Brush/ Spray	12	Corresponding shade no
07	Synthetic Enamel Intermediate coat	IS 2932	1	40	Brush/ Spray	12	--
08	Red oxide Zinc phosphate primer	IS 12744	1	--	Brush/ spray	12	--

	BHEL, Ranipet - 632 406, India. Quality Assurance Department. Painting Scheme		BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020					
	Project FGD Package of Ramagundam STPS Stage- I & II - BHEL Cust Nos: G208-G210 (3x200 MW) & G509-G511 (3x500 MW)							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

**PGMA Description & Product Details**

SI No	PGMA	PGMA Description	Product /Items Details
01	FW 212	Slurry recirculation pump system	RC Pumps incl Shaft seal, Common Base Plate, Coupling and Guard, Gear Box, Expansion Bellow, Anchor Bolts & Fasteners, Special Tools
02	FW 219	Absorber system base	Absorber tank bottom plate
03	FW 220	Absorber system structures	Absorber tank structure, Absorber tower structure, Spray headers structure
04	FW 221	Absorber system casing bottom	Absorber tank wall casing- bottom
05	FW 222	Absorber system casing top	Absorber Tank wall casing –Top, Mist Eliminator supports, Spray pipe supports, Internal Beam, Shim plates in Absorber area, Internal Struts
06	FW 223	Absorber system accessories	Nozzles and flanges, Inspection doors & Man holes, Viewing ports, Antifoam dosing equipment, Suction strainers- FRP
07	FW 226	Emergency Quench water tank	Base Plate & its supports, Roof, Shell
08	FW 227	Emergency Quench System	Emergency Quenching Spray Pipe, Nozzle for Emergency Pipe, Fasteners, Gaskets
09	FW 230	Air oxidation System	Oxidation Blowers, Common Base Plate, Coupling and Guard, Anchor Bolts & Fasteners, Expansion Bellow, Special Tools, Suction & Discharge Silencers, Acoustic Enclosure, Water Injection cooling system, Pipe, Valves & Instruments
10	FW 239	Viewing Ports	Viewing Ports
11	FW 244	Oxidation air distribution System	Pipe & Fittings, Flanges, Pipe Hanger, Bottom Elbow, Bottom sliding supports
12	FW 251	Expansion joint between bypass	Expansion joints, Seal Plates & Fasteners
13	FW 252	Expansion joint between scrubbers	Fabric & its fixing fasteners, Sleeves & Flanges, Gaskets
14	FW 255	Ducts between bypass duct inlet & booster fan	Plates & Stiffeners, Guide Vanes
15	FW 256	Ducts between Booster fan & Absorber	Plates & Stiffeners, Guide Vanes
16	FW 257	Ducts between Absorber & stack	Plates & Stiffeners, Guide Vanes
17	FW 260	Duct structure between bypass duct& Booster fan	Duct Supports, Gusset Plate, Divider plate, Internal Struts, Support bearings
18	FW 261 FW 262	Duct structure between booster fan& absorber & Absorber and Stack	Duct Supports, Gusset Plate, Divider plate, Internal Struts, Support bearings
19	FW 292	Structures for Elevator	Columns, Seal Plate, Bracings, Enclosure (Purlin& sheeting)



**BHEL, Ranipet - 632 406, India.**  
**Quality Assurance Department.**  
**Painting Scheme**

BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020  
 NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019  
 NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020

<b>Project</b>	<b>FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

SI No	PGMA	PGMA Description	Product / Items Details
20	FW 293	Elevator and accessories	Base Frame, Buffer Spring, Mast Section, Cage, Control Panel & AC, Mandatory Spares
21	FW 310	Structures for booster fan handling	Columns, Beams, Bracings, Seal plate
22	FW 610 FW 722	Galleries & railings for Scrubbers, Tank	Stairs, Handrail, Step treads, Floor grills, Ladders, Foundation bolts, Fasteners
23	FW 701	Slurry pumps & accessories	Slurry Pumps incl Shaft seal, Common Base Plate, Coupling and Guard, Belt & Pulley, Expansion Bellow, Anchor Bolts & Fasteners, Motor & accessories, Sump Pumps incl Shaft seal, Common Base Plate, Coupling and Guard, Belt & Pulley, Anchor Bolts & Fasteners, Motor & accessories
24	FW 710	Monorail for hoist& cranes	Insert Plate, Stiffener plate, Monorail beam
25	FW 721	Agitator support	Channels & Beams
26	FW 730	Limestone silo structures	Columns, Beams, Bracings, Seal plate, Angles, channels
27	FW 731	Limestone silo	Base plate & its supports, Shell, Roof
28	FW 723 FW 724 FW 725	Air cannon Bag filter Nozzles & flanges	Bag filter, Air cannon bin activator, Nozzles & Flanges
29	FW 733	Limestone silo approach platforms	Stairs, Handrail, Step treads, Floor grills, Ladders, Foundation bolts, Fasteners
30	FW 734	Limestone mill	Wet ball mill, Hydro cyclone- Mill area, Mill circuit pump, Mill separator tank with Agitator
31	FW 742	Lime stone slurry storage tank	Base plate & its supports, Shell, Roof
32	FW 743	Auxiliary Absorber tank	Base plate & its supports, Shell, Roof
33	FW 744	Filtrate tank	Base plate & its supports, Shell, Roof
34	FW 745	Wastage water tank	Base plate & its supports, Shell, Roof
35	FW 747	Hydro cyclone waste water tank	Base plate & its supports, Shell, Roof
36	FW 748 FW 785 FW 786	Process Water tank Belt filter washing tank Primary Hydro cyclone feed tank	Base plate & its supports, Shell, Roof

	<b>BHEL, Ranipet - 632 406, India.</b> <b>Quality Assurance Department.</b> <b>Painting Scheme</b>		<b>BHEL DOC No: PS:RAMA:FGD:G208 Rev: 03 Dt: 14/09/2020</b> <b>NTPC Contract No: CS-3120/3130-109(3)-9-FC-NOA-6845 Dt: 22/08/2019</b> <b>NTPC Doc No: 3130-109-PVM-H-001 Rev: 03 Dt: 14/09/2020</b>					
	<b>Project FGD Package of Ramagundam STPS Stage- I &amp; II - BHEL Cust Nos: G208-G210 (3x200 MW) &amp; G509-G511 (3x500 MW)</b>							
SI No	Surface Location	PGMA	Surface Preparation	Primer & Intermediate Coats		Finish Coat		Total DFT (µm min)
				Paint	DFT (µm min)	Paint	DFT(µm min)	

SI No	PGMA	PGMA Description	Product /Items Details
37	FW 751 FW 752	Process water pipe accessories Cooling water pipe accessories	CS/FRP Pipes & Fittings, Sight Glass, R Orifice, Gaskets & Fasteners
38	FW 753	Slurry pipe accessories	CSRL/FRP Pipes & Fittings, Strainer (Cone), Expansion Joint-Rubber, R Orifice, Gaskets & Fasteners
39	FW 754	Service air pipe accessories	GI Pipes & Fittings, Flexible Hose, Expansion Joint (Metallic), Hose connector, R Orifice, Gaskets & Fasteners
40	FW 755	Instrument air pipe accessories	SS Pipes & Fittings, Strainer(Y Type), Gaskets & Fasteners
41	FW 815 to FW 851	Valves and fittings	Globe valves, Ball Valves, Butterfly Valves, Diaphragm Valves, Gate Valves, Check Valves, Pinch Valves, Knife Gate Valves, Control Valves, Relief Valves
42	FW 761 FW 765	Structures for Pipe racks Structures for Sub pipe racks	Bracings Columns
43	FW 280 FW 281 FW 282 FW 283 FW 740 FW 760 FW 763	Foundation material for duct structure Foundation material for absorber Foundation material for Tanks Foundation material for Pipe racks Foundation material for Elevator Foundation material for RC pump shed	Foundation bolts Template
44	FW 766	Platforms for Pipe rack	Stairs, Handrail, Step treads, Floor grills, Ladders, Foundation bolts, Fasteners
45	FW 768; FW 769	Trestle for Main & sub Pipe racks	Truss, Beams, Supports for all Pipes
46	FW 779	Supports for cable tray	Double Sup Channel & Base plates, Single Sup Channel & Base plates, Cantilever Arm, Fasteners & clamps, Brackets
47	FW 996	Tools	Erection , commissioning, special tools
48	FW 798	Air receivers	Instrument Air receivers, Any Instruments/Valves
49	FW 800	Clarified water tank	Base plate & its supports, Shell, Roof
50	FW 802	Neutralization tank & accessories	Base plate & its supports, Shell, Roof
51	FW 988; FW 997 FW 999	Commissioning spares & Mandatory spares	Startup & commissioning spares, Mandatory spares

CLAUSE NO.

TECHNICAL REQUIREMENTS



- 4) Fabricated fittings shall not acceptable up to pipe size to 300 NB. For sizes 350 NB and above, fittings may be fabricated as per BS:2633/BS:534.
- ix) Welding of galvanised iron pipes/fittings would be permitted provided the same is carried out by means of special electrodes suitable for the above application and the same shall be approved by Employer. After, welding, welded portions shall be applied with three coats of zinc silicate treatment/rich paint over one coat of suitable primer. Further, the Contractor shall provide proper zinc paint at the point of welding.

**7.00.00 PAINTING**

7.01.00 All the Equipments shall be protected against external corrosion by providing suitable painting.

7.02.00 The surfaces of stainless steel, Gunmetal, brass, bronze and non-metallic components shall not be applied with any painting.

**7.04.00 All Steel Surfaces (external) exposed to atmosphere (outdoor installation)**

- (i) **Surface Preparation** : The steel surfaces to be applied with painting shall be thoroughly cleaned before painting by wire brushing, air blowing, etc.
- (ii) **Painting**: One (1) Coat of red oxide primer of thickness 30 to 35 microns followed up with three (3) coats synthetic enamel paint, with 25 microns as thickness of each coat. For plant at coastal area, epoxy resin based zinc phosphate primer followed by epoxy resin based paint pigmented with titanium di-oxide shall be used in place of enamel paints.

**7.05.00 All Steel Surfaces (external) inside the building (indoor installation)**

- (i) **Surface Preparation** : The steel surfaces to be applied with painting shall be thoroughly cleaned before painting by wire brushing, air blowing, etc.
- (ii) **Painting**: One (1) Coat of red oxide primer of thickness 30 to 35 microns followed up with two (2) coats synthetic enamel paint, with 25 microns as thickness of each coat. For plant at coastal area, epoxy resin based zinc phosphate primer followed by epoxy resin based paint pigmented with titanium di-oxide shall be used in place of enamel paints.

**7.06.00 Deluge Valves, Alarm Valves, Foam monitors, Water monitors, Foam Proportioning equipments, Foam makers, etc.**

Painting of all equipments /components of FDPS package shall be as per manufacturer's standard practice or as detailed below whichever is superior in quality.






Environment	Paint scheme	Total DFT
Normal / Mild Corrosive Environment	Primer- zinc filled epoxy Finish – Aliphatic Polyurethane (shade RAL3000)(P.O Red)	Min 125 microns
Corrosive Environment (as in coastal areas)	Primer- zinc filled epoxy Intermediate – Epoxy MIO Finish – Aliphatic Polyurethane (shade RAL3000)(P.O Red)	Min 200 microns



## WRAPPING & COATING

1. Sub Vendor :
- 2 Application : Wrapping & coating of Underground Piping for FPS
- 3 Type : Anti-corrosive tape of 4 mm thick (2 layers of 2mm thickness) with coal tar primer
4. Width of Tape : 250 mm /500 mm / 1000 mm
5. Confirming to standard : As per AWWA C 203 -93
6. Length : 10 m
7. Softening Point : Min. 65 & Max. 121<sup>0</sup>C
8. Breaking Strength in Longitudinal direction : 0.7 KN/m
9. Tests Standards
  - a. Holiday test : As per AWWA C 203
  - b. Impact test : As per AWWA C 203
  - c. Adhesion test : As per 8.11.2 of AWWA C 203
10. Marking : As per Manufacturer's standard
11. Characteristic of Tape
  - a. Softening point : Min. 65 & Max. 121<sup>0</sup>c
  - b. Penetration at 25<sup>0</sup> C, 100g, 5 sec : Between 3 -20
  - c. Filler Percentage : 20-35%
  - d. Tensile Strength (N/5cm) : Min 3 N /mm
12. Details of the Primer :
  - a. Type : Synthetic Chlorinated primer
  - b. Viscosity at 23<sup>0</sup> C : 35-60 sec
  - c. Volatile Matter : < 75%
  - d. Drying Time : 5 - 15 minutes
  - e. Flash Point : > 23<sup>0</sup> C
13. Application:
  - a. Coating material is used for fire fighting pipelines in thermal power plants, oil and gas pipe lines
  - b. Applied on Buried and immersed pipes, fittings, and appurtenances to protect them from high corrosive environment.
14. Application methodology:
  - a. Remove dust, flakes, oil, greases or loose foreign particles by wire brush or compressed air.
  - b. Leave 200 mm from pipe ends fro welding joints. Coat and wrap such left over part of pipes at site after welding and hdro testing.
  - c. Apply the coal tar primer on the claen surface.
  - d. Allow primed surface to touch dry, which may take 5 - 15 minutes.
  - e. Remove PE film and show the flame of butane gas torch on the surafaces till it becomes gloosy-smooth.
  - f. Coat **tape** on primed surface. Provide overlap of 25 mm of 10% of thickness between two adjoining layers. Wrap spirally and apply sufficient tension to ensure good adhesion and avoid pockets and bridging to meet holiday detection requirement.Tape joint shall be downward on outside of lap joint.
  - g. Complete necessary welding and testing of the joint before coating.
  - h. Recommend to apply at the time of pipe erection and lowering inside trenches to avoid any damage.
15. Storage  
Keep under shed, away from heat. Do not stack more than three rolls in one column.

# LIMESTONE HANDLING SYSTEM FLOW DIAGRAM

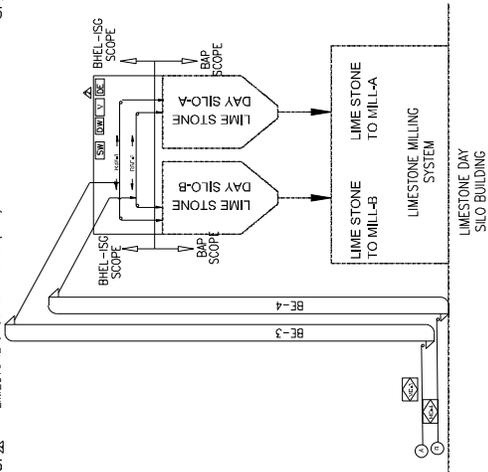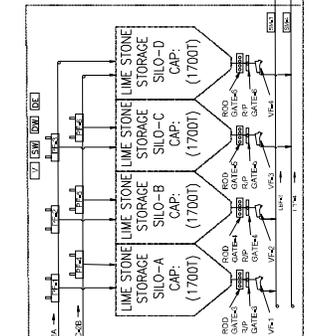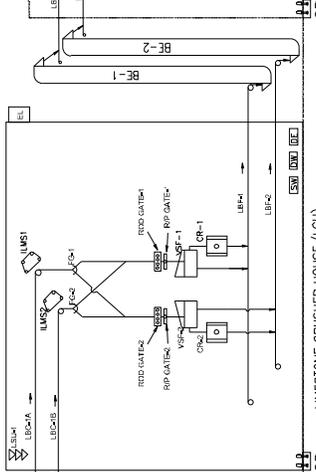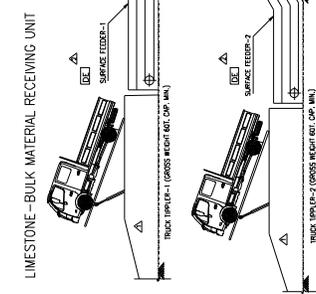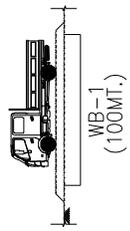

SL NO	LEGEND	DESCRIPTION	QTY	CAPACITY	
				RATED	DESIGN
1	LF	BELT FEEDER	4 NOS	150 TPH	165 TPH
2	RF	REVERSIBLE BELT FEEDER	2 NOS	150 TPH	165 TPH
3	BE	BUCKET ELEVATOR	4 NOS	150 TPH	165 TPH
4	FG	FLAP GATE	4 NOS		
5	RG	ROD GATE	6 NOS		
6	CR	RACK & PINION GATE	6 NOS		
7	CR	CRUSHER	2 NOS	150 TPH	165 TPH
8	BS	BELT SCALE	4 NOS		
9	MD	METAL DETECTOR	4 NOS		
10	VSF	VIBRATING SCREEN FEEDER	2 NOS	150 TPH	165 TPH
11	EL	CONVENTIONAL ELEVATOR	1 NO	1088 KG.	1088 KG.
12	LSU	LIMESTONE SAMPLING UNIT	1 SET		
13	DE	DUST EXTRACTION SYSTEM	1 LOT		
14	SW	SERVICE WATER	1 LOT		
15	PWDW	POTABLE/DINKING WATER	1 LOT		
16	PF	PLOUGH FEEDER	6 NOS		
17	IMS	IN LINE MAGNETIC SEPARATOR	2 NOS		
18	SM	SUSPENDED MAGNET	2 NOS		
19	WB	WEIGH BRIDGE	1 NO	100MT.	100MT.
20	VF	VIBRATING FEEDER	4 NOS	150 TPH	165 TPH
21	V	VENTILATION SYSTEM	1 LOT		
22	SP	SUMP PUMP	6 NOS.	(3W + 3S)	

- NOTES:
- 1) THIS DRG. IS MEANT TO SHOW ONLY LIME STONE FLOW PATH AND DOES NOT INDICATE COMPREHENSIVE SCOPE OF WORK.
  - 2) ALL CONVEYORS SHALL BE PROVIDED WITH ACCESSORIES AS PULL CHORD, BELT SWAY AND ZERO SPEED SWITCH, BELT CLEANERS, TENSIONING DEVICE ETC AS PER TECHNICAL SPECIFICATION.
  - 3) DUST EXTRACTION, SERVICE WATER, POTABLE WATER AND VENTILATION SHALL BE PROVIDED AS PER TECHNICAL SPECIFICATION.
  - 4) ACCESSORIES, ITEMS OF WORK THOUGH NOT INDICATED BUT REQUIRED TO MAKE THE SYSTEM COMPLETE FOR ITS SAFE, EFFICIENT, RELIABLE, AND TROUBLE FREE OPERATION AND MAINTENANCE IS IN THE SCOPE OF BIDDER.
  - 5) NECESSARY MAINTENANCE AND OPERATING PLAT-FORM FOR VARIOUS EQUIPMENT SHALL BE PROVIDED.

## CONVEYOR SCHEDULE

SL NO	CONV NO	TPH	BELT WIDTH (MM)	MATERIAL HANDLED	LUMP SIZE (MM)
1	LBC-1A/B	150/165	800	LIMESTONE	(-250, +2% 400MM)
2	LBC-2A/B	150/165	800	LIMESTONE	(-120)
3	SURFACE FDR./12	200/200	-	LIMESTONE	(-250, +2% 400MM)
4	TRUCK TIPPLER-1/2	40/40T	-	LIMESTONE	(-250, +2% 400MM)

**ENGINEERING CONSULTANT**  
**NTPC Limited**  
ENGINEERING SYSTEMS  
(A MEMBER OF NTPC GROUP)

**PROJECT**  
**RAMAGUNDAM I & II (3X200MW+3X500MW)  
 FGD - PACKAGE**

**WORK CONTRACTOR:**  
**BHARAT HEAVY ELECTRICALS LTD.**  
INDUSTRIAL SYSTEMS GROUP, BANGALORE

**DESCRIPTION:** \_\_\_\_\_ **SCALE:** N.T.S. **DATE:** 12/02/2019


**FILE NO.:** 3130-100-2/MS-5-074 **DRAWING NO.:** IS-FD-746-100-001

**TITLE:** FLOW DIAGRAM FOR LIMESTONE & CYPSSUM HANDLING

**REV.:** 02

NO.	DATE	BY	CHKD.	APPD.	REVISION

# GYPSUM HANDLING SYSTEM FLOW DIAGRAM

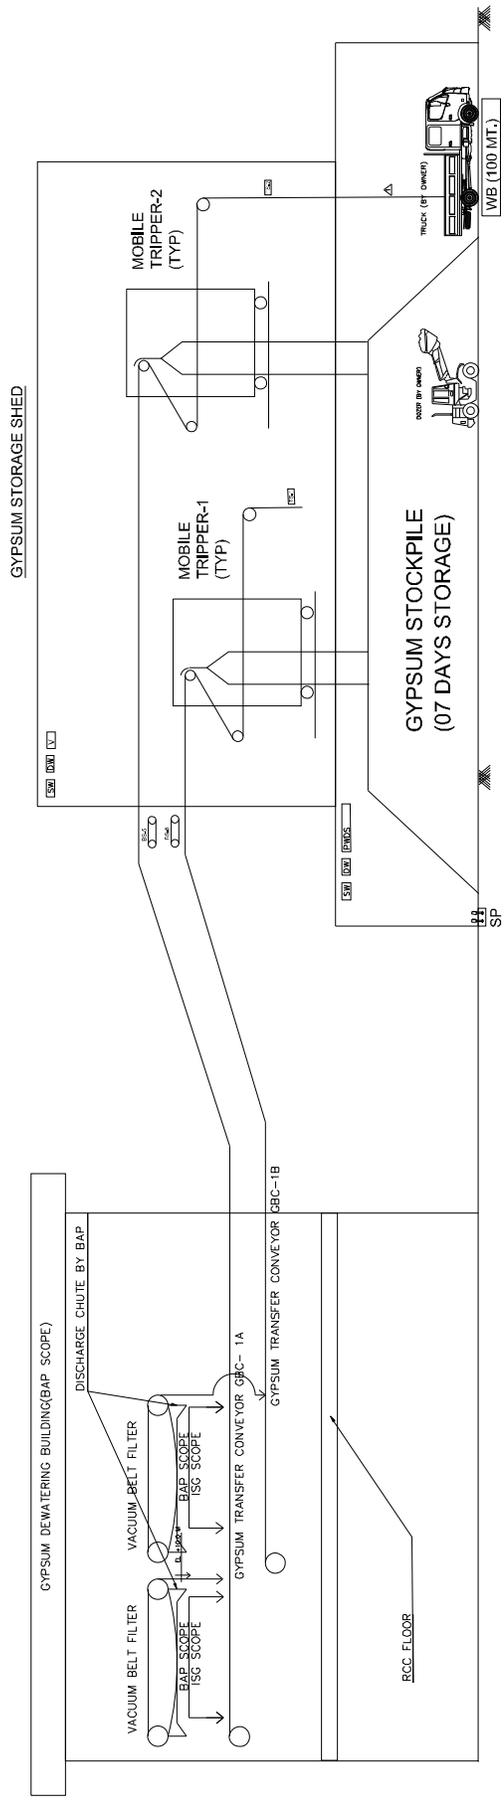

### CONVEYOR SCHEDULE

SL NO	CONV NO	TPH	BELT WIDTH (MM)	MATERIAL HANDLED	LUMP SIZE (MICRON)
1	GBC-1A/B	150/165	800	GYPSUM	20 TO 100

SL NO	LEGEND	DESCRIPTION	QTY	CAPACITY	
				RATED	DESIGN
1	PHDS	PLAIN WATER DUST SUPPRESSION	1 LOT		
2	SW	SERVICE WATER	1 LOT		
3	PWDW	POTABLE DRINKING WATER	1 LOT		
4	MT	MOBILE TRIPPER-1/2	2 NOS	180 (TPH)	185 (TPH)
5	SP	SUMP PUMP	2 NOS	(1W+1S)	
6	WB	WEIGH BRIDGE	1 NO	100MT.	
7	V	VENTILATION SYSTEM	1 LOT		
8	BS	BELT SCALE	2 NOS		
9	TS	TELESCOPIC SPOUT	2 SETS		

- NOTES:**
- THIS DRG. IS MEANT TO SHOW ONLY GYPSUM FLOW PATH AND DOES NOT INDICATE COMPREHENSIVE SCOPE OF WORK.
  - CONVEYORS SHALL BE PROVIDED WITH ACCESSORIES AS BULL CHORD, BELT SNAY AND ZERO SPEED SWITCH, BELT CLEANERS, TENSIONING DEVICE ETC AS PER TECHNICAL SPECIFICATION.
  - DUST EXTRACTION, SERVICE WATER, POTABLE WATER AND VENTILATION SHALL BE PROVIDED AS PER TECHNICAL SPEC.
  - ALL ACCESSORIES ITEMS OF WORK THOUGH NOT INDICATED BUT REQUIRED TO MAKE THE SYSTEM COMPLETE FOR ITS SAFE, EFFICIENT, RELIABLE AND TROUBLE FREE OPERATION AND MAINTENANCE IS IN THE SCOPE OF BIDDER.
  - NECESSARY MAINTENANCE AND OPERATING PLATFORM FOR VARIOUS EQUIPMENT SHALL BE PROVIDED.
  - TRUCK BAY TO BE PROVIDED IN GYPSUM SHED.

**OWNER/CONSULTANT**  
**NTPC Limited**  
NUCLEAR TECHNOLOGICAL CORPORATION

**PROJECT**  
**RAMAGUNDAM I & II (3X200MW+3X500MW) FGD - PACKAGE**






**MAN CONTRACTOR**  
**BHARAT HEAVY ELECTRICALS LTD.**  
INDUSTRIAL SYSTEMS GROUP, BANGALORE

DATE	12.02.2019
SCALE	N.T.S
PROJECT NO.	3.130-100-CP/IN-5-074
DRW. NO.	12022019
CHK. NO.	12022019
APP. NO.	12022019
DATE	12.02.2019

FILE NO.: IS-14D-746-100-M001  
 SHEET NO.: 2 OF 2

REV. NO.	02
REV. DATE	12.02.2019
REV. BY	...
REV. CHECKED BY	...
REV. APPROVED BY	...



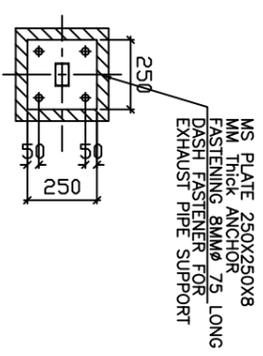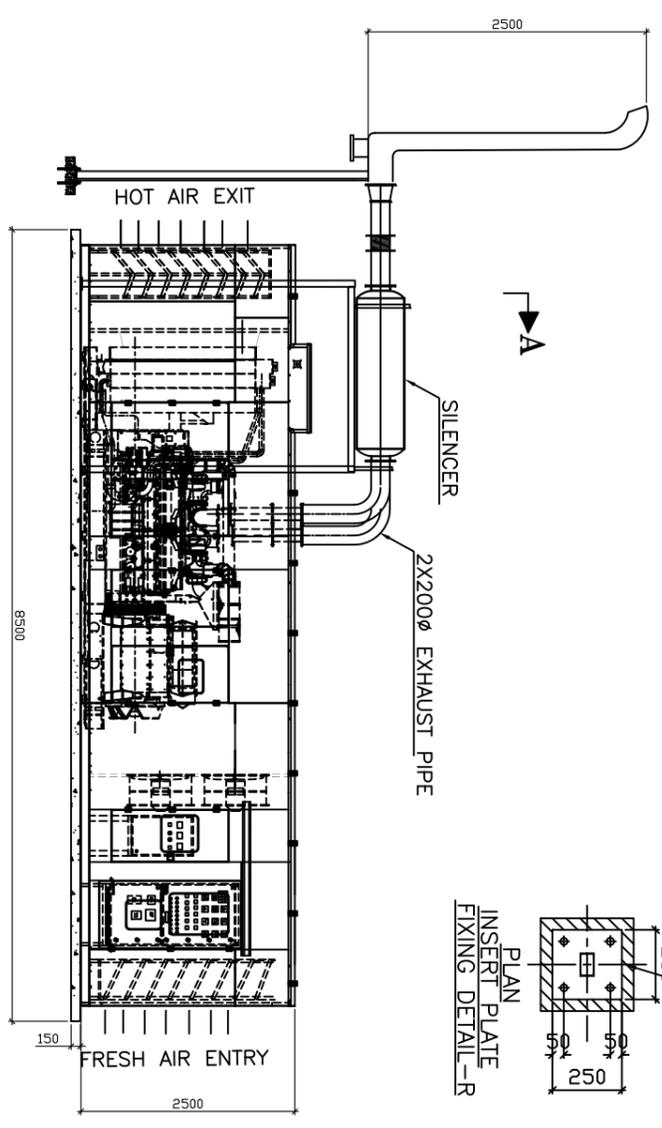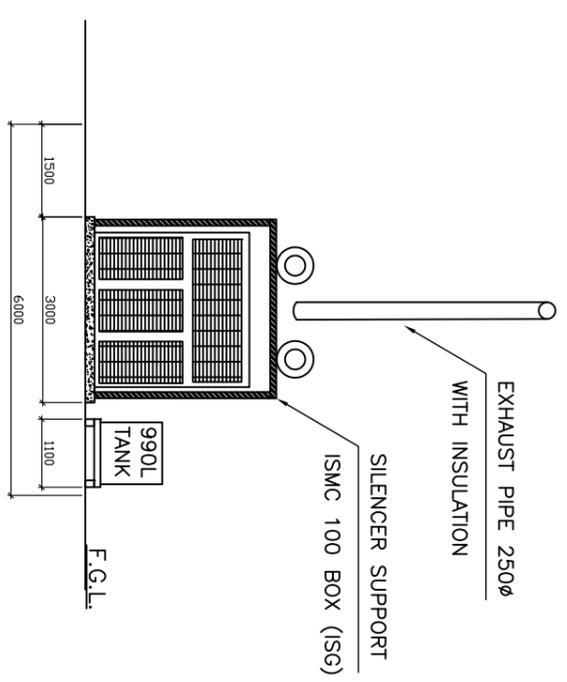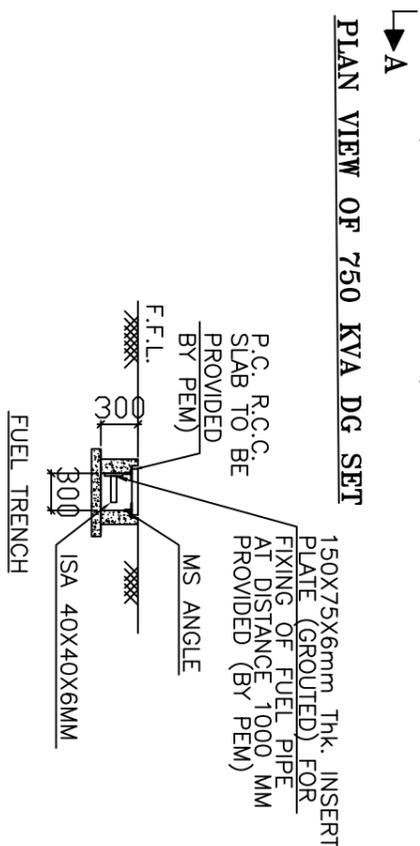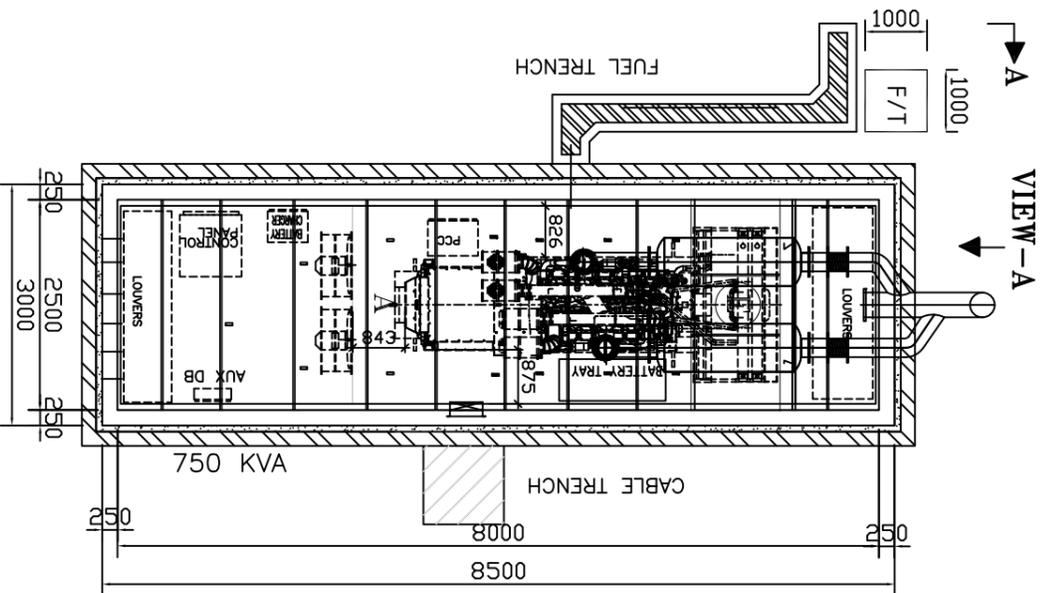

ALL DIMENSIONS IN MM

SECTIONAL VIEW OF DG SET  
NOT TO SCALE

FOR TENDER PURPOSE ONLY

QTY. - 1 NO.

- NOTES:
1. THE STATIC WEIGHT OF DG SET IS 12 TONS.
  2. DYNAMIC WEIGHT OF DG SETS IS 1.5 X STATIC WEIGHT.
  3. 2 NOS TREATED EARTH PIT FOR GROUNDING ALTERNATOR NEUTRAL IN RANIPET SCOPE.
  4. POWER AND CONTROL CABLE FROM DG TO REMOTE IN RANIPET SCOPE.
  5. ALL KIND OF CIVIL WORK IN PS SCOPE.
  6. FIRE FIGHTING ARRANGEMENT IN PESD SCOPE.
  7. BODY EARTHING OF EQUIPMENTS IN RANIPET SCOPE.
  8. ERECTION AND COMMISSIONING IN PS SCOPE.
  9. SUPERVISION OF ERECTION AND COMMISSIONING IN ISG SCOPE.
  10. DG CONTROL PANELS, BATTERY CHGR, BATTERY SHALL BE LOCATED INSIDE THE ACOUSTIC ENCLOSURE.

REV	DESCRIPTION	DATE	CHKD.	SIGN.
00	FOR TENDER PURPOSE	30.11.2018	HCH	HCH

PROJECT		BHARAT HEAVY ELECTRICALS LTD	
CUSTOMER		NTPC LIMITED	
DIRECTOR : 000		SCALE N.T.S.	
FILE NO. : 000		WEIGHT (kg)	
TITLE : LAY OUT PLAN SECTIONAL VIEW FOR 1 X 750 KVA SILENT DG SET		DRN. CHD. / APPD.	
INDUSTRIAL SYSTEMS GROUP, BANGALORE		NAME / SIGN	
SHEET NO. 1 OF 1		DATE	
NO. OF SHRS. 1		NO. OF WKS.	
REV. 0		NO. OF ITEMS	



---

1. **GENERAL**

This document covers the handling manual for FRP made spray pipes, which are to be furnished in Flue Gas Desulphurization (FGD) Plant.

**NOTE :** This document describes only a general requirement for the installation work and shall be used for reference. Installation procedure may be changed according to the site condition.

2. **RELATED DOCUMENTS AND DRAWINGS**

Following drawings shall be applied to this document.

No.	Item	DF No.	MHPS No.
1	ABSORBER COUNTER-CURRENT SLURRY SPRAY PIPE & NOZZLE DWG.		V402-10301

### 3. HANDLING MANUAL FOR FRP MADE SPRAY PIPES

#### 3-1. Storage at site

- (1) Basically MHPS recommend to storage the FRP pipes in container to avoid any damage.
- (2) Protect the equipment from direct sunshine for long time. Use vinyl sheet cover etc.
- (3) Put the equipment at the place without fire because FRP equipment is combustible.

#### 3-2. First Opening Inspection

When first opening container at site, check all FRP pipes that there are no damage on the pipes. Check the quantity of shim plates and LT washing pipes as per Supply List and/or Packing List. If any damage or shortage were found, take digital picture as it is and report the situation to MHPS immediately.

#### 3-3. Withdrawing the pipes

- (1) To withdraw FRP pipes from container, the Lifting tool as shown on Fig.3-1 shall be prepared at site. Steel pipe shall be fixed on the Fork-Lift.
- (2) The Lifting tool shall be protected with soft materials (soft cloth etc.,) to protect FRP pipes.



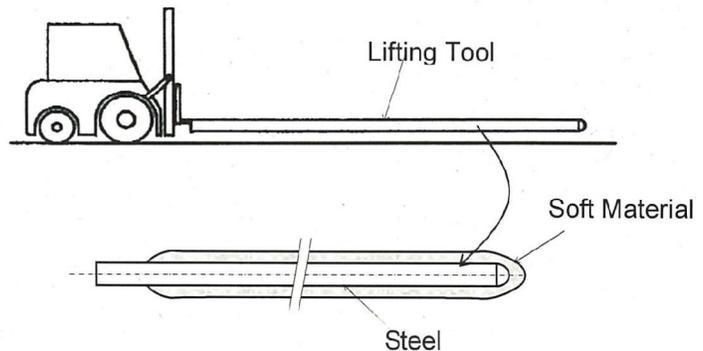


Fig. 3-1 Container and sketch of Lifting Tool

- (3) As FRP pipes fixed at the container by wooden support, remove these supports one by one.  
(See Fig.3-2)

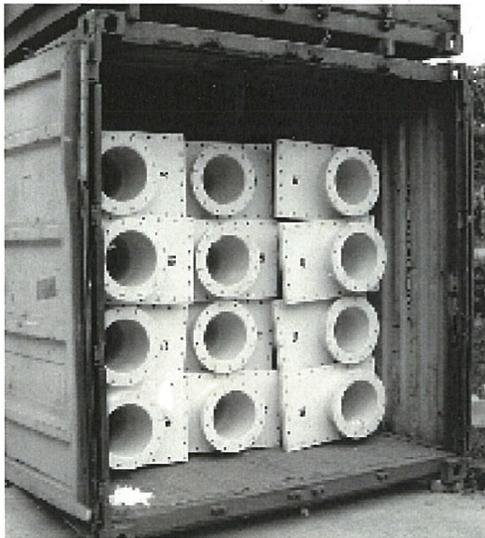

- (4) Then insert the Lifting tool into FRP pipe which is located at the top of them. (See Fig.3-3)

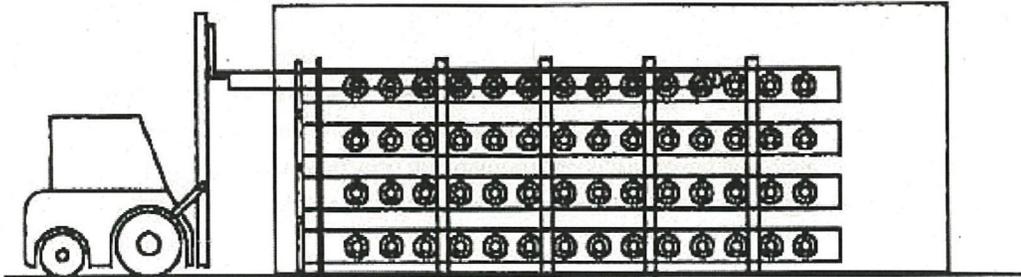

- (5) Lift up FRP pipe carefully, keeping the lifting tool & FRP pipes horizontally. Then it shall be carefully pulled out from container. After that, the lifting tool shall be carefully pulled out from FRP pipe and return to (4).

**!!! Special notes !!!**

Before pulling out FRP pipes, be sure that the performance of forklift is suitable for lifting, considering the weight and length of FRP pipes (approx. 270 kg/piece).



### 3-4. Lifting up to Absorber stage

- (1) Do not lift the FRP pipe by nozzle neck. (See Fig. 3-4)
- (2) Use fiber belt such as nylon sling to prevent any damage for nozzle neck.

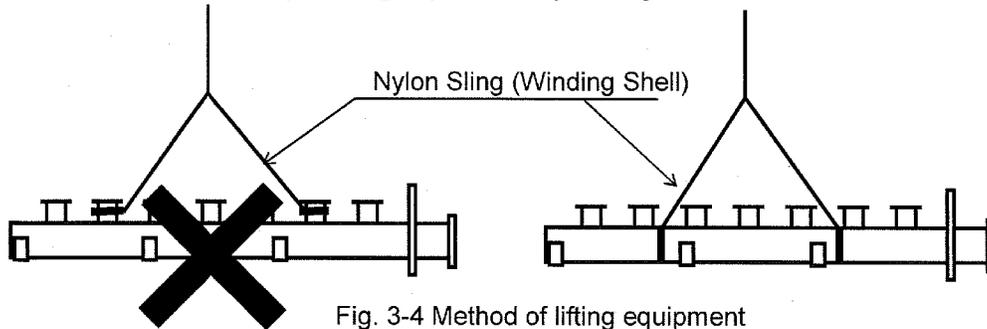


Fig. 3-4 Method of lifting equipment

- (3) When lifting and transferring, make sure to use guide rope not to hit on the others. (See Fig. 3-5)
- (4) If FRP equipment receives an impact, damages such as crack etc., would be occurred.

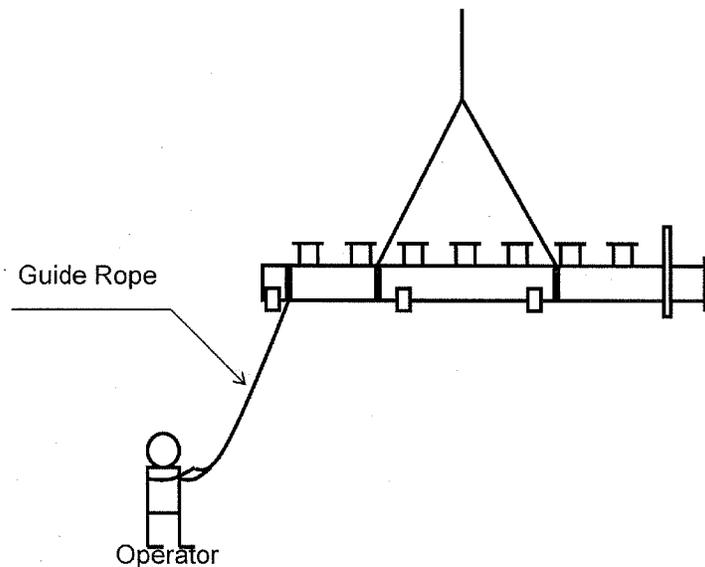


Fig. 3-5 Method of transferring equipment

- (5) When transferring with using forklift, be careful not to fall down the equipment by using floor plate and stiffening plate such as pallet.
- (6) When lifting and lowering, do not enter absolutely under the FRP equipment. In case of falling down, serious problem would be occurred.

### 3-5. Installation

- (1) Check all concerned absorber dimensions, i.e. tolerance of absorber casing, support beam location, absorber nozzle location, flange face inclination, bolt hole location, size and spacing etc., before FRP Slurry Spray Pipe installation.
- (2) Install the temporary support on absorber nozzles for inserting FRP Slurry Spray Pipe into absorber.  
The temporary support shall be installed at almost the same height of FRP Slurry Spray Pipe.  
(See Fig. 3-6)

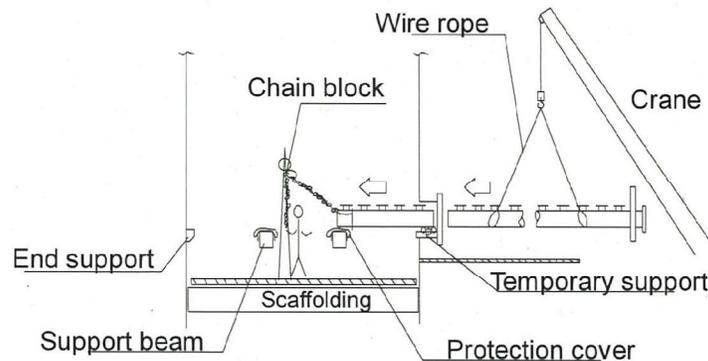


Fig. 3-6 Installation procedure

- (3) Lift up FRP SLURRY Spray Pipe to the absorber nozzle height using wire rope to hook up FRP Slurry Spray Pipe.
- (4) Put the tip of FRP Slurry Spray Pipe on the temporary support mentioned in item (3) above.

- (5) Insert FRP Slurry Spray Pipe into absorber with chain block. If the chain block is unlikely for use, pull FRP Slurry Spray Pipe by hand. (See Fig. 3-7)  
 At that time, check that there is enough space for thermal expansion of Slurry spray pipe between its end and the absorber wall.

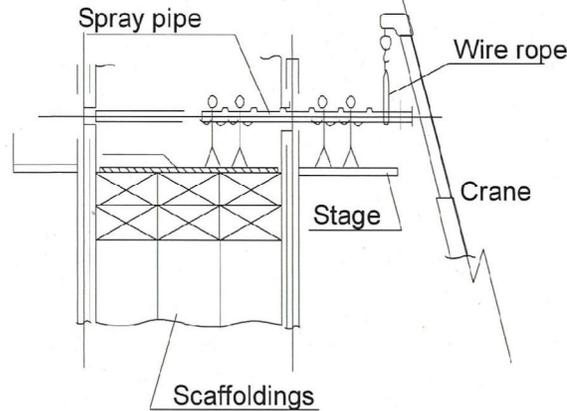


Fig. 3-7 Inserting FRP SLURRY Spray Pipe

- (6) After the insertion, jack up Slurry spray pipe and remove the temporary support.
- (7) After tightening the bolts and nuts of the square flange temporarily, adjust FRP Slurry Spray Pipe horizontal level by inserting shim plates. Direction of inserting shim plates shall be in accordance with Fig. 3-8 so that the shim plates will not fall down easily even if the saddle moves by thermal expansion of Slurry spray pipe.

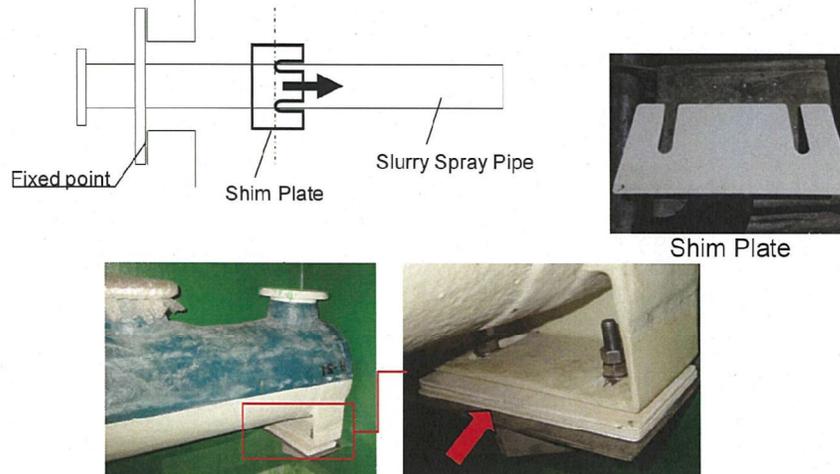


Fig. 3-8 Direction of shim plate

Allowable inclination at the holder flange face is **3/100 (target : 1/100)**.





- (8) Tighten the saddle setting bolts and nuts.
- (9) Tighten the bolts and nuts of the square flange of FRP Slurry Spray Pipe firmly in accordance with following procedure. **[VERY IMPORTANT]**

**SPECIAL NOTES)**

- a) Check again that flange face including lining shall be **Flat Face**, 5mm-thickness rubber gasket and 3mm-thickness steel washer are correctly installed as per Fig.3-9.
- b) Silicon sealer shall be applied in both sides of the gasket surface.
- c) Use Torque Wrench (~30Nm) to tighten the bolt.
- d) M16 bolt for square flange shall be tightened diagonally to obtain even tightening. Uneven tightening will cause the crack and/or breakage of FRP made spray pipe.
- e) M16 bolt for square flange shall be tightened with 10Nm at first. After 30 minutes, it shall be re-tightened with 16Nm.
- f) Check the external of FRP spray pipe that there are no crack and/or breakage. If any trouble are founded, it shall be reported to MHPS immediately.

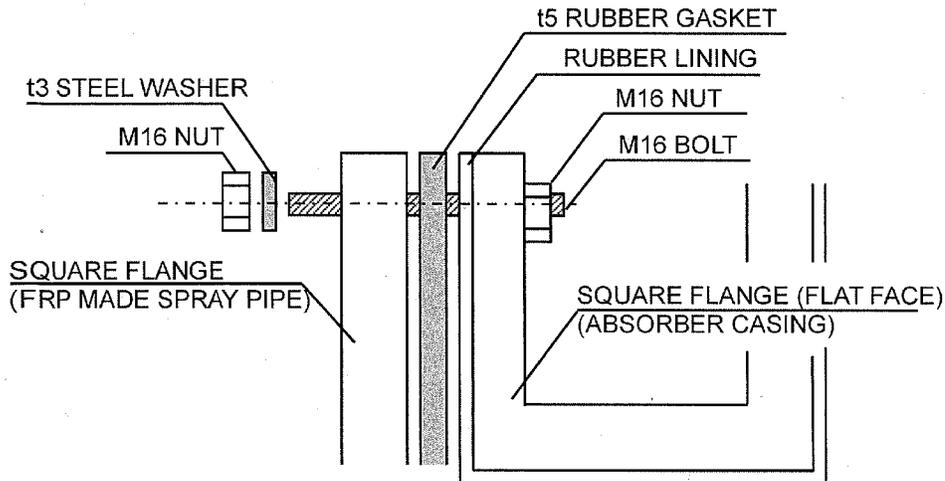


Fig. 3-9 Correct tightening method for FRP made Spray Pipe

- (10) Loosen the saddle setting bolts and nuts by half rotation for thermal expansion of FRP Slurry Spray Pipe, and then lock the nuts by using the double-nuts to prevent from loosening.

(11) Set the scaffoldings across Slurry spray pipe to install DCFS spray nozzles. (See Fig. 3-10)

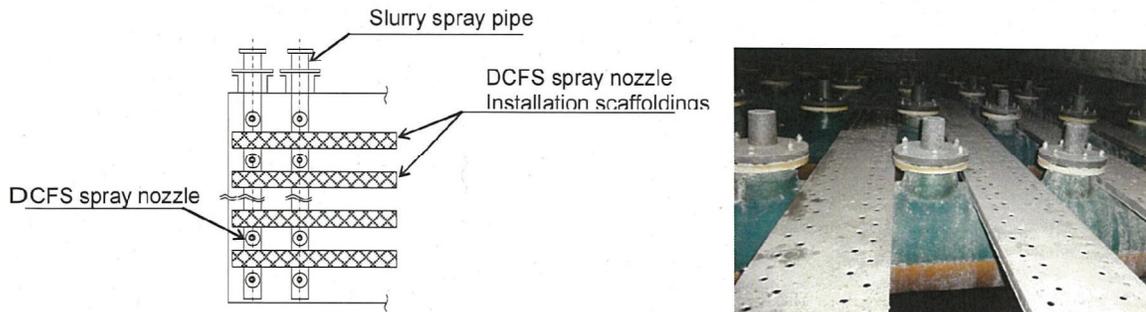


Fig. 3-10 Scaffoldings for installation of DCFS Spray Nozzles

(12) Install DCFS spray nozzle in accordance with “INSTRUCTION MANUAL FOR STORAGE AND INSTALLATION FOR DCFS SPRAY NOZZLES.”  
(MHPS Dwg. No: V402-00300).

(13) Remove the scaffoldings mentioned in item (12) above.

(14) Confirm that there are no foreign substances at the inside of Slurry spray pipe before connecting the external piping.

(15) Carry out spouting test before the start-up by checking visually through the upper inspection hole.

#### 4. SPECIAL NOTES

##### 4-1. Marking Procedure

As stated in Section 3-5 item (15), marking shall be made on the absorber inside wall for the spouting test. Marking procedure shall be as follows;

- 1) Marking procedure shall be referred to the below and Fig. 4-1 at the next page.
- 2) Each line shall be marked at the spacing of 500mm with conspicuous color on the absorber inside wall at the opposite side of the inspection hole.
- 3) Arabic numbers shall be marked at the spacing of 1,000mm.
- 4) Base point which corresponds to the height “0” shall be as follows;
  - Middle of centerlines of upper and lower stage FRP Slurry Spray Pipes
- 5) The principle of marking range shall be  $(0.9 \sim 1.1) \times \text{spouting height}$ .  
For example, when the spouting height is HL5.7m and LL2.5m, the marking range becomes 2.3m  $(0.9 \times 2.5\text{m})$  to 6.3m  $(1.1 \times 5.7\text{m})$  according to the above formula, but in this case, actual marking range is 2m to 6.5m to facilitate the marking operation.

##### 4-2. Other notice

(1) Flange surface of piping and support shall be **flat face**. **Do not use raised face**.

(2) Make sure to use all face gaskets for nozzle flange surface.

(3) When tightening the bolt on FRP flange, be careful to tighten all bolts uniformly with the greatest care.

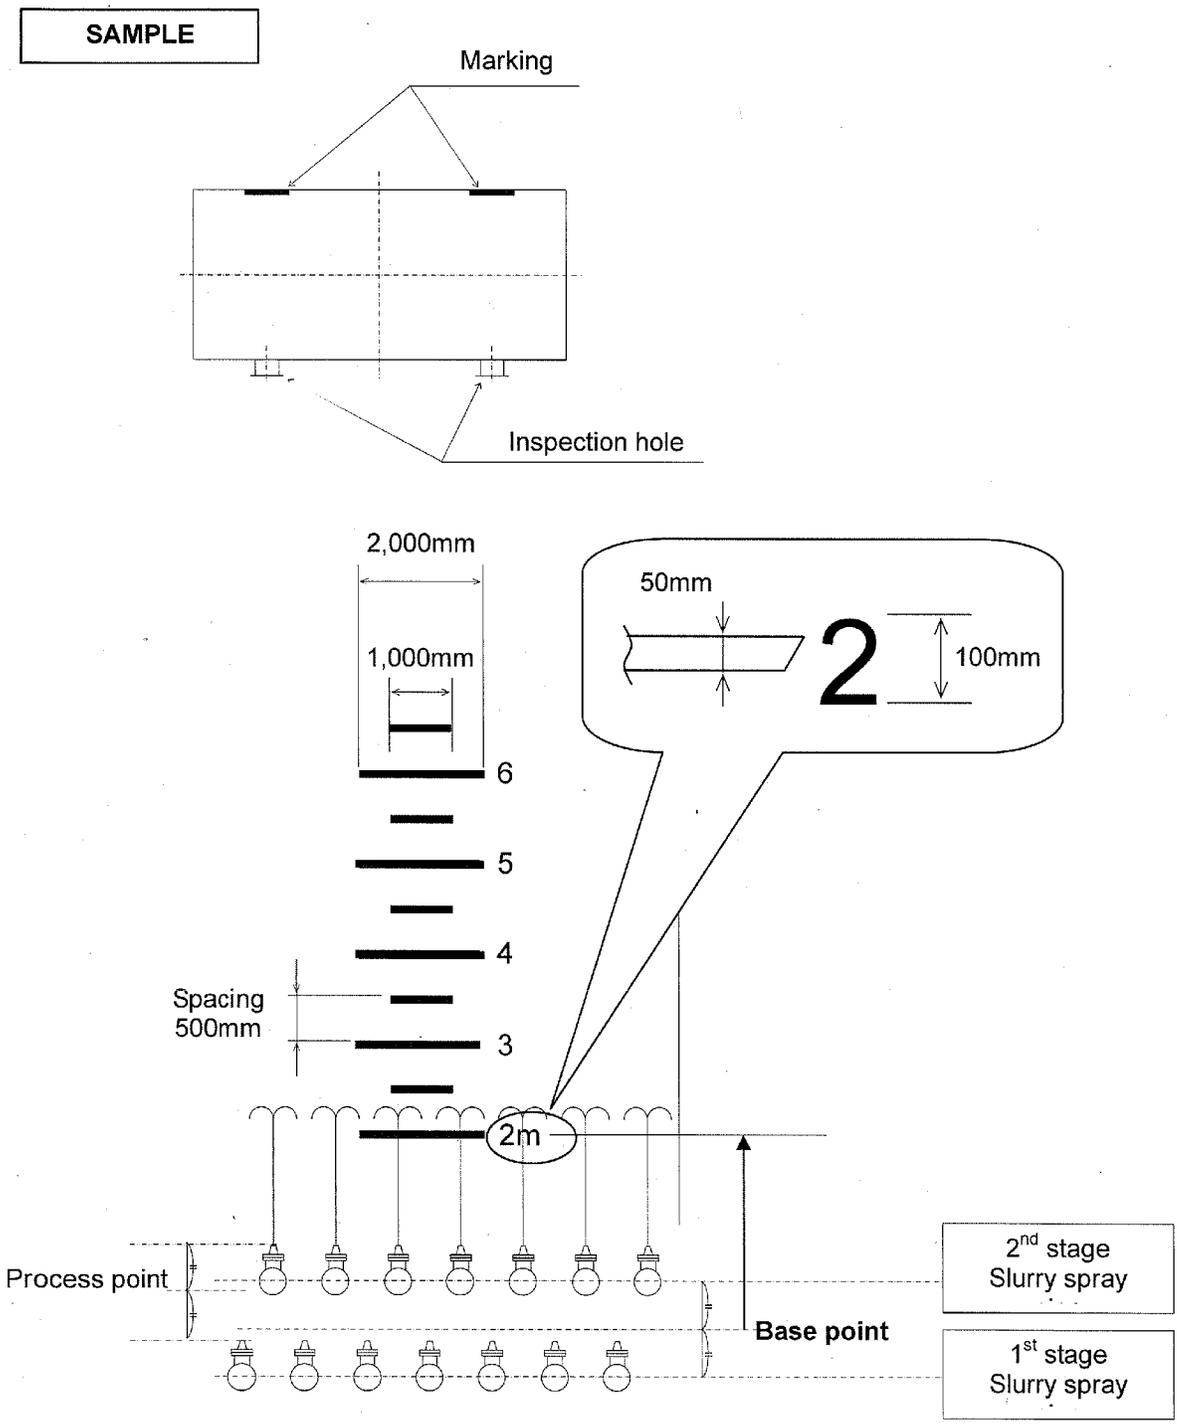


Fig. 4-1 Marking for spouting test



---

1. **GENERAL**

This document covers the installation procedure for SiC made DCFS spray nozzles, which are to be furnished in Coal-Fired Power Plant.

NOTE : This document describes only a general requirement for the installation work and shall be used for reference. Installation procedure may be changed according to the site condition.

2. **RELATED DOCUMENTS AND DRAWINGS**

Following drawing shall be applied to this document.


- |   |            |                    |
|---|------------|--------------------|
| 1. ABSORBER COUNTER-CURRENT<br>SLURRY SPRAY PIPE & NOZZLE DWG | : Dwg. No. | MHPS No.V402-10301 |
|---|------------|--------------------|





#### 4. INSTALLATION PROCEDURE

1. CONFIRM THAT THERE ARE NO FOREIGN SUBSTANCES ON THE APPEARANCE OF ALL THE GOODS (SPRAY NOZZLES, GASKETS AND HOLDER FLANGES).
2. KEEP READY TORQUE WRENCH AND DIGITAL TYPE SPIRIT LEVEL.
3. SUFFICIENTLY CLEAN SURFACE OF GOODS MENTIONED ABOVE. (VERY IMPORTANT)
4. SET THESE GOODS AS SHOWN IN THE DRAWING, SET THE TORQUE WRENCH TO 10Nm AND TIGHTEN THE BOLTS DIAGONALLY AS SHOWN IN THE BELOW FIGURE TO OBTAIN EVEN TIGHTENING AT THAT TIME, TAKE CARE THAT THE BOLT SHOULD NOT TOUCH THE BOLT HOLE SO AS NOT TO CHIP OFF.
5. SET THE TORQUE WRENCH TO 16Nm AND UNIFORMLY TIGHTEN THE BOLTS WHILE CONFIRMING THAT HORIZONTALITY OF THE NOZZLE TOP IS WITHIN 3/100 (TARGET : 1/100).
6. IF 3/100 HORIZONTALITY OF THE NOZZLE CANNOT BE ACHIEVED WITH 16Nm TORQUE, SET THE WRENCH TO 18Nm AND TIGHTEN THE BOLTS GRADUALLY TAKING CARE THAT THE TORQUE DOES NOT EXCEED 18Nm.  
AT THIS TIME ENSURE THAT THE HORIZONTALITY IS DEFINITELY WITH THE STIPULATED VALUE.  
THE COMPRESSION OF GASKET SHALL NOT EXCEED 1mm.  
IN CASE THAT THE COMPRESSION EXCEEDS 1mm, IT SHOULD BE REPORTED TO THE DESIGNER IN CHARGE AND THE INSTALLATION PROCEDURE SHALL BE CHANGED.
7. AFTER THAT, FIX NOZZLE WITH DOUBLE-NUT TO PREVENT THE LOOSENING OF THE FIRST NUT.
8. FINALLY, CONFIRM THAT THERE ARE NO FOREIGN SUBSTANCES ON THE APPEARANCE.

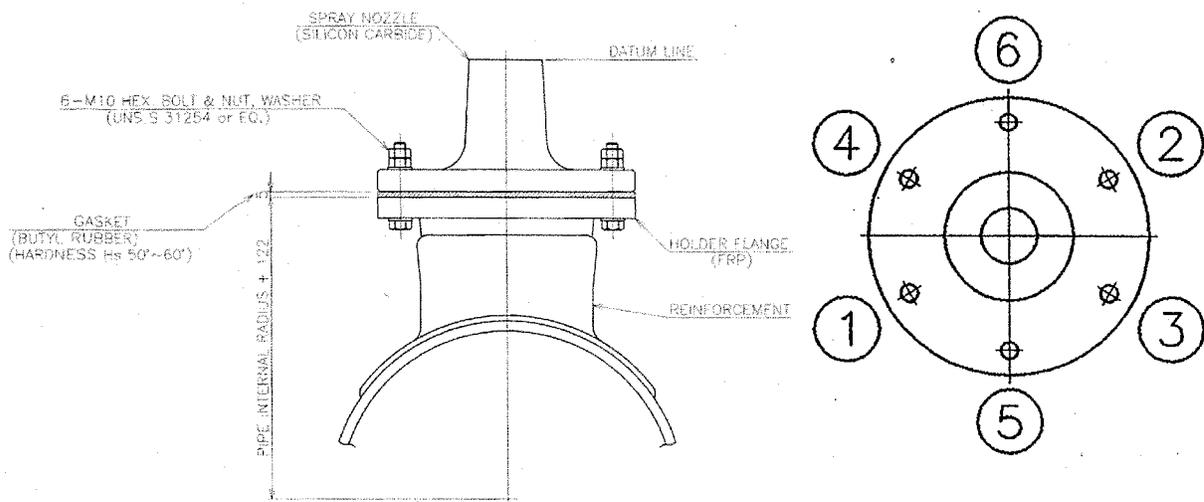

#### NOTES

1. SPRAY NOZZLE SHALL BE ASSEMBLED ON HOLDER FLANGE AFTER INSTALLING SEAWATER SPRAY PIPE INTO ABSORBER COMPLETELY.
2. SPRAY NOZZLE SHALL BE ASSEMBLED SO THAT THE INCLINATION OF DATUM LINE OF NOZZLE SHALL BE WITHIN 3/100 (TARGET : 1/100) FOR ANY ORIENTATION, WHEN A SPIRIT LEVEL IS PLACED ON THE DATUM LINE OF THE NOZZLE. THE NOZZLE INCLINATION SHALL BE ADJUSTED BY FASTENING EACH BOLT. (REFER : INSTALLATION PROCEDURE)
3. BECAUSE SIC IS FRAGILE, PAY ATTENTION NOT TO HIT ANYTHING (SPRAY NOZZLES, TORQUE WRENCH ETC.) AGAINST THE SPRAY NOZZLES.



## **1. GENERAL**

This document covers the handling manual for JAS pipes, which are to be furnished in Flue Gas Desulphurization (FGD) Plant.

**NOTE :** This document describes only a general requirement for the installation work and shall be used for reference. Installation procedure may be changed according to the site condition.

## **2. RELATED DOCUMENTS AND DRAWINGS**

Following drawings shall be applied to this document.

No.	Item	DF No.	MHPS No.
1.	JET AIR SPARGER A/H JAS NOZZLE & ORIFICE DWG.	-	V402-10302



### **3. HANDLING MANUAL FOR JAS PIPES**

#### **3-1. Storage at site**

- (1) Put the JAS PIPE at the place without fire. As FRP equipment are combustible, it may be burned by allowing fire come near them.
- (2) Keep the wooden box storing the JAS PIPE in a room within normal temperature / humidity. If outdoor storage is unavoidable, cover the box with waterproof sheet to prevent dampness. However, for long term storage, it must be indoors.
- (3) Store the box horizontal without any tilt maintaining the correct Top, Bottom position.
- (4) Do not strike JAS PIPE each other, or other tools, piping and so on. It will cause crack and/or chipping for Ceramics part.

#### **3-2. Installation at site**

- (1) Take out the JAS pipe from the box only just before the assembly. To prevent any scratch after removal from the box, put the JAS in a flat and prepare for the cushion such as Styrofoam under the JAS.
- (2) When carrying, handle it as per following picture by using Nylon sling to avoid any scratching. Wire rope shall not be used. (See Fig. 3-1)  
Moreover be careful that any tension will not be added to the Flange and Bolt hole.


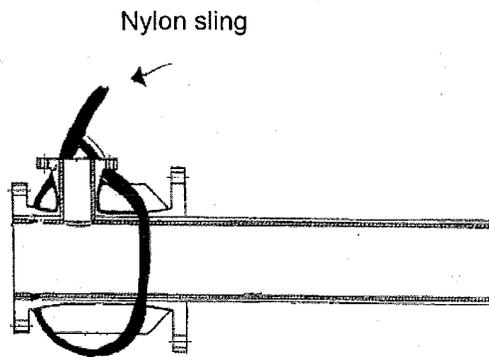


Fig. 3-1 JAS handling procedure



- 
- (3) Don't place the JAS PIPE near any high temperature heat source like boiler, stove etc.  
Also don't let it come in contact with oil, paint or other organic solvents etc., as these may cause deterioration of the nozzle material.
  - (4) Ensure that welding sparks do not contact the JAS PIPE.  
When a spark of welding, etc. may be flown on FRP equipment, protect them by using fire-resistant sheet, etc.
  - (5) Keep clean the trash of flange face before install to the absorber.  
Tighten the bolts equally and gradually so that there may not be inclination.
  - (6) Expansion Joints are required for both Inlet of Air and Water connection to prevent any damage for FRP flange. **[VERY IMPORTANT]**

# ACW CIRCUIT FOR FGD AUX.

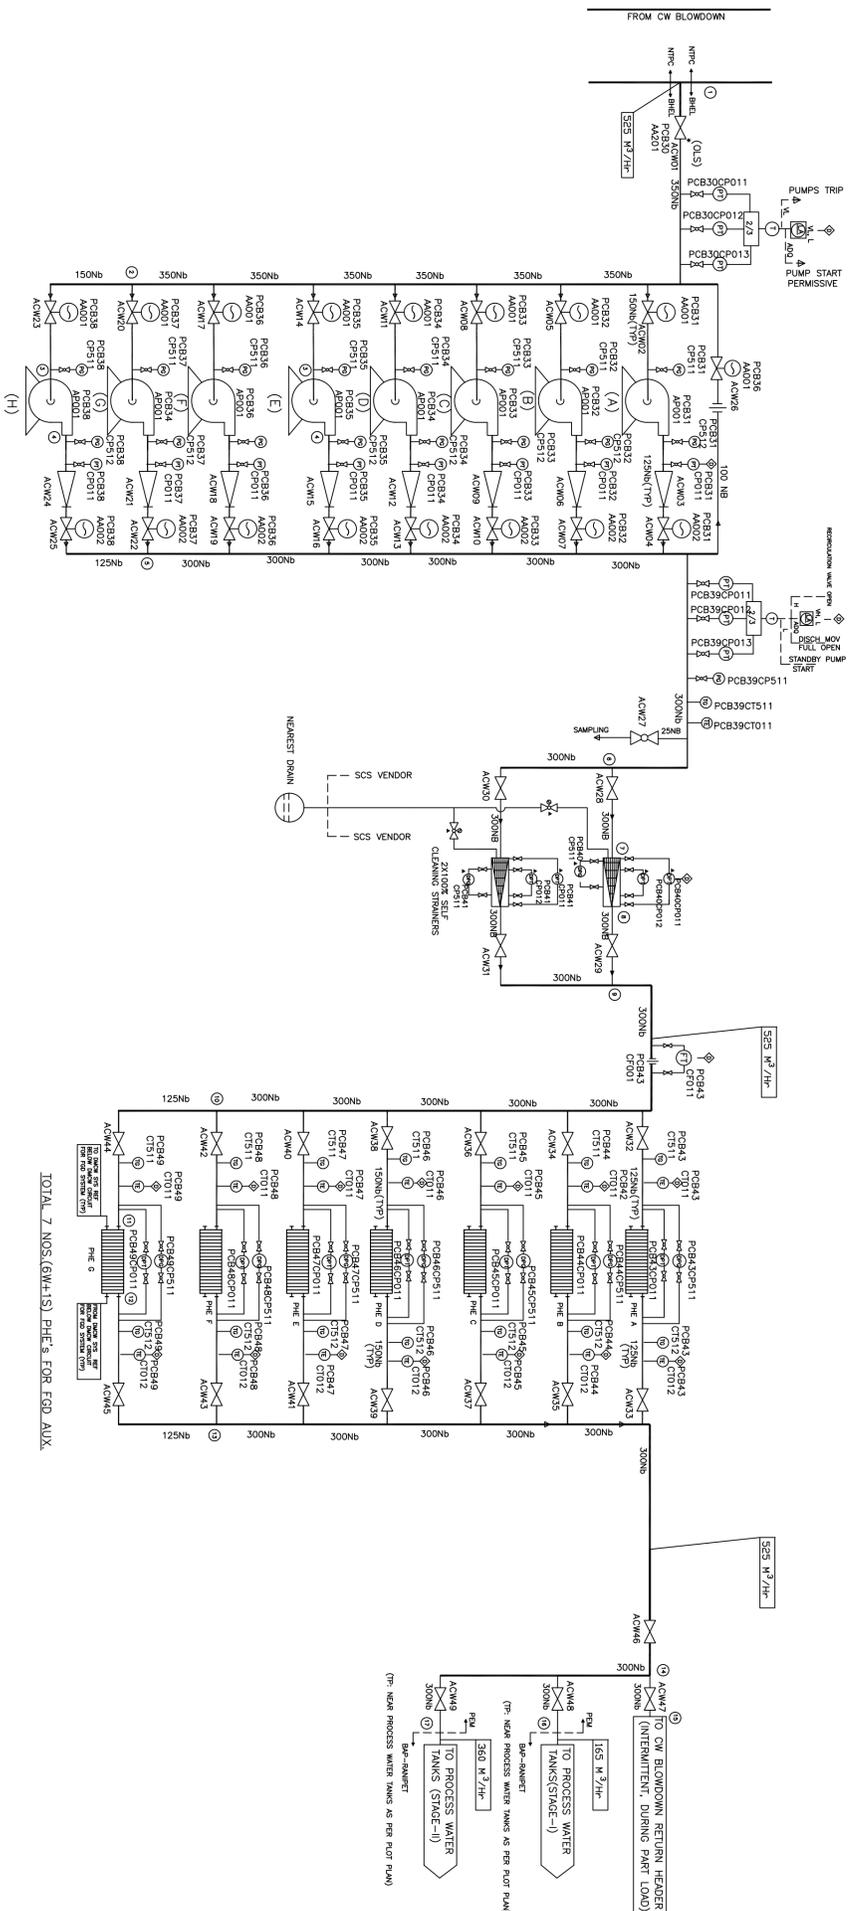

TOTAL 8 NOS.(GW+SS) ACW PUMPS FOR FGD AUX. COOLING

TOTAL 7 NOS.(GWA+SS) PHE'S FOR FGD AUX.

PIPE SIZES-SS PIPES

No	D.D.(mm)MAX.	THK.(mm)
15	21.34	2.77
25	33.4	3.38
40	48.26	3.68
50	60.33	3.91
80	88.9	3.05
100	114.3	3.05

PIPE SIZES-CARBON STEEL PIPES

No	D.D.(mm)MAX.	THK.(mm)
15	21.8	3.2
25	34.2	4.0
40	48.8	4.0
50	60.8	4.5
65	76.6	4.5
80	89.5	4.8
100	115.0	5.4
125	140.8	5.4
150	166.5	5.4
200	219.1	6.0
250	273.0	6.0
300	323.9	6.0
350	355.6	6.0

## COOLING WATER REQUIREMENT

SL. NO.	EQUIPMENT	FLOW RATE (M <sup>3</sup> /HR)	PRESSURE UNIT TERM. (MWC)	TEMP. RISE(°C)	REMARKS
1.	STAGE I-IFGD AUX. UNIT#1	34	20	5.0	
2.	STAGE II-IFGD AUX. UNIT#2	34	20	5.0	
3.	STAGE I-IFGD AUX. UNIT#3	34	20	5.0	
4.	STAGE I-IFGD AUX. UNIT 1,2&3	132	20	5.0	
5.	IFGD AUX. (BALL MILL BUILDING-COMMON)	20	20	5.0	
6.	W/S& COMPRESSORS (COMMON)	30	10	10.0	

- NOTES :-**
- DESIGN PRESSURE DM(CW) SYSTEM = 12 KG/SQ.CM(G)
  - DESIGN PRESSURE ACW SYSTEM = 7.5 KG/SQ.CM(G)
  - DESIGN INLET TEMPERATURE TO COOLERS : 38°C. MECH. DESIGN TEMPERATURE: 60°C.
  - DESIGN ACW (CW BLOWDOWN) INLET TEMP. : 36°C. MECH. DESIGN TEMPERATURE: 60°C.
  - QUALITY OF WATER - ACW SYSTEM-PASSIVATED DM WATER WITH PH MAINTAINED AROUND 9.5 BY NDOH DOOSING.
  - MATERIALS OF CONSTRUCTION (PIPEWORK) :
    1. EOW AND ACW PIPEWORK.
    2. PIPING > 150NB SHALL BE CARBON STEEL, IS:2062 GR-E 250 B. PLATES ROLLED & WELDED AS PER IS 3589.
    3. PIPING FOR EOW OVERHEAD TANK FILLING FROM DM TRANSFER PUMP FROM EOW OVERHEAD TANK TO SUCTION HEADERS OF PUMPS, NDOH DOOSING PREWORK, DM WATERLINE TO NDOH TANK SHALL BE SS TO ASTM A312 GR. 304. (THICKNESS FOR PIPES<=50NB SHALL BE AS PER SCH-40S & FOR PIPES>50NB SHALL BE AS PER SCH-10S OF ASTM A312/312M)
    4. 25 NB DRAINS & VENTS SHALL BE PROVIDED FOR PIPE SIZES UP TO 350 NB AS PER LAYOUT REQUIREMENTS.
    5. INSTRUMENTS MARKED (▲) THIS SHALL BE SUPPLIED ALONGWITH THE EQUIPMENTS.
    6. ALL PRESSURE TAPPINGS SHALL BE OF 15 NB.
    7. PAINTING PROTECTION SHALL BE AS PER NTPC PAINTING SPECIFICATION.
    8. ALL TEMPERATURE ELEMENTS SHALL BE PROVIDED WITH TEMPERATURE TRANSMITTERS.

**LEGEND**

	HORIZ. PUMP		TEMPERATURE GAUGE
	GATE VALVE		LEVEL GAUGE
	NON RETURN VALVE		LEVEL SWITCH
	GLOBE VALVE		ALARM
	GLOBE VALVE (NORMALLY CLOSED)		PI ANALYSER
	PNEUMATIC CONTROL VALVE		REDUCER/EXPANDER
	PRESSURE TRANSMITTER		ORIFICE PLATE
	PRESSURE GAUGE		TEMPERATURE TRANSMITTER
	PRESSURE TRANSMITTER		TEMPERATURE TRANSMITTER (WITH TEMPERATURE TRANSMITTER)
	DIFFERENTIAL PRESSURE TRANSMITTER		
	FLOW TRANSMITTER		

JOB NO.	467	NTPC DRAWING NO.	3130-100-PYM-B-988
STATUS	CONTRACT		
DISTRIBUTION			
TO			
NO			
REV			
DATE			
AMTD			
CHKD			
APPD			

NAME	DATE	SCALE	NO.
DRW	28.07.2020		
CHK	28.07.2020		
APP	28.07.2020		
DESIGN	28.07.2020		
MANAGEMENT	28.07.2020		
PROJECTS	28.07.2020		
ENGINEERING	28.07.2020		
MANAGEMENT	28.07.2020		
PROJECTS	28.07.2020		
ENGINEERING	28.07.2020		
MANAGEMENT	28.07.2020		


PE-DG-467-179-N051

DRWING NO.

PE-DG-467-179-N051

DATE

REV. 00

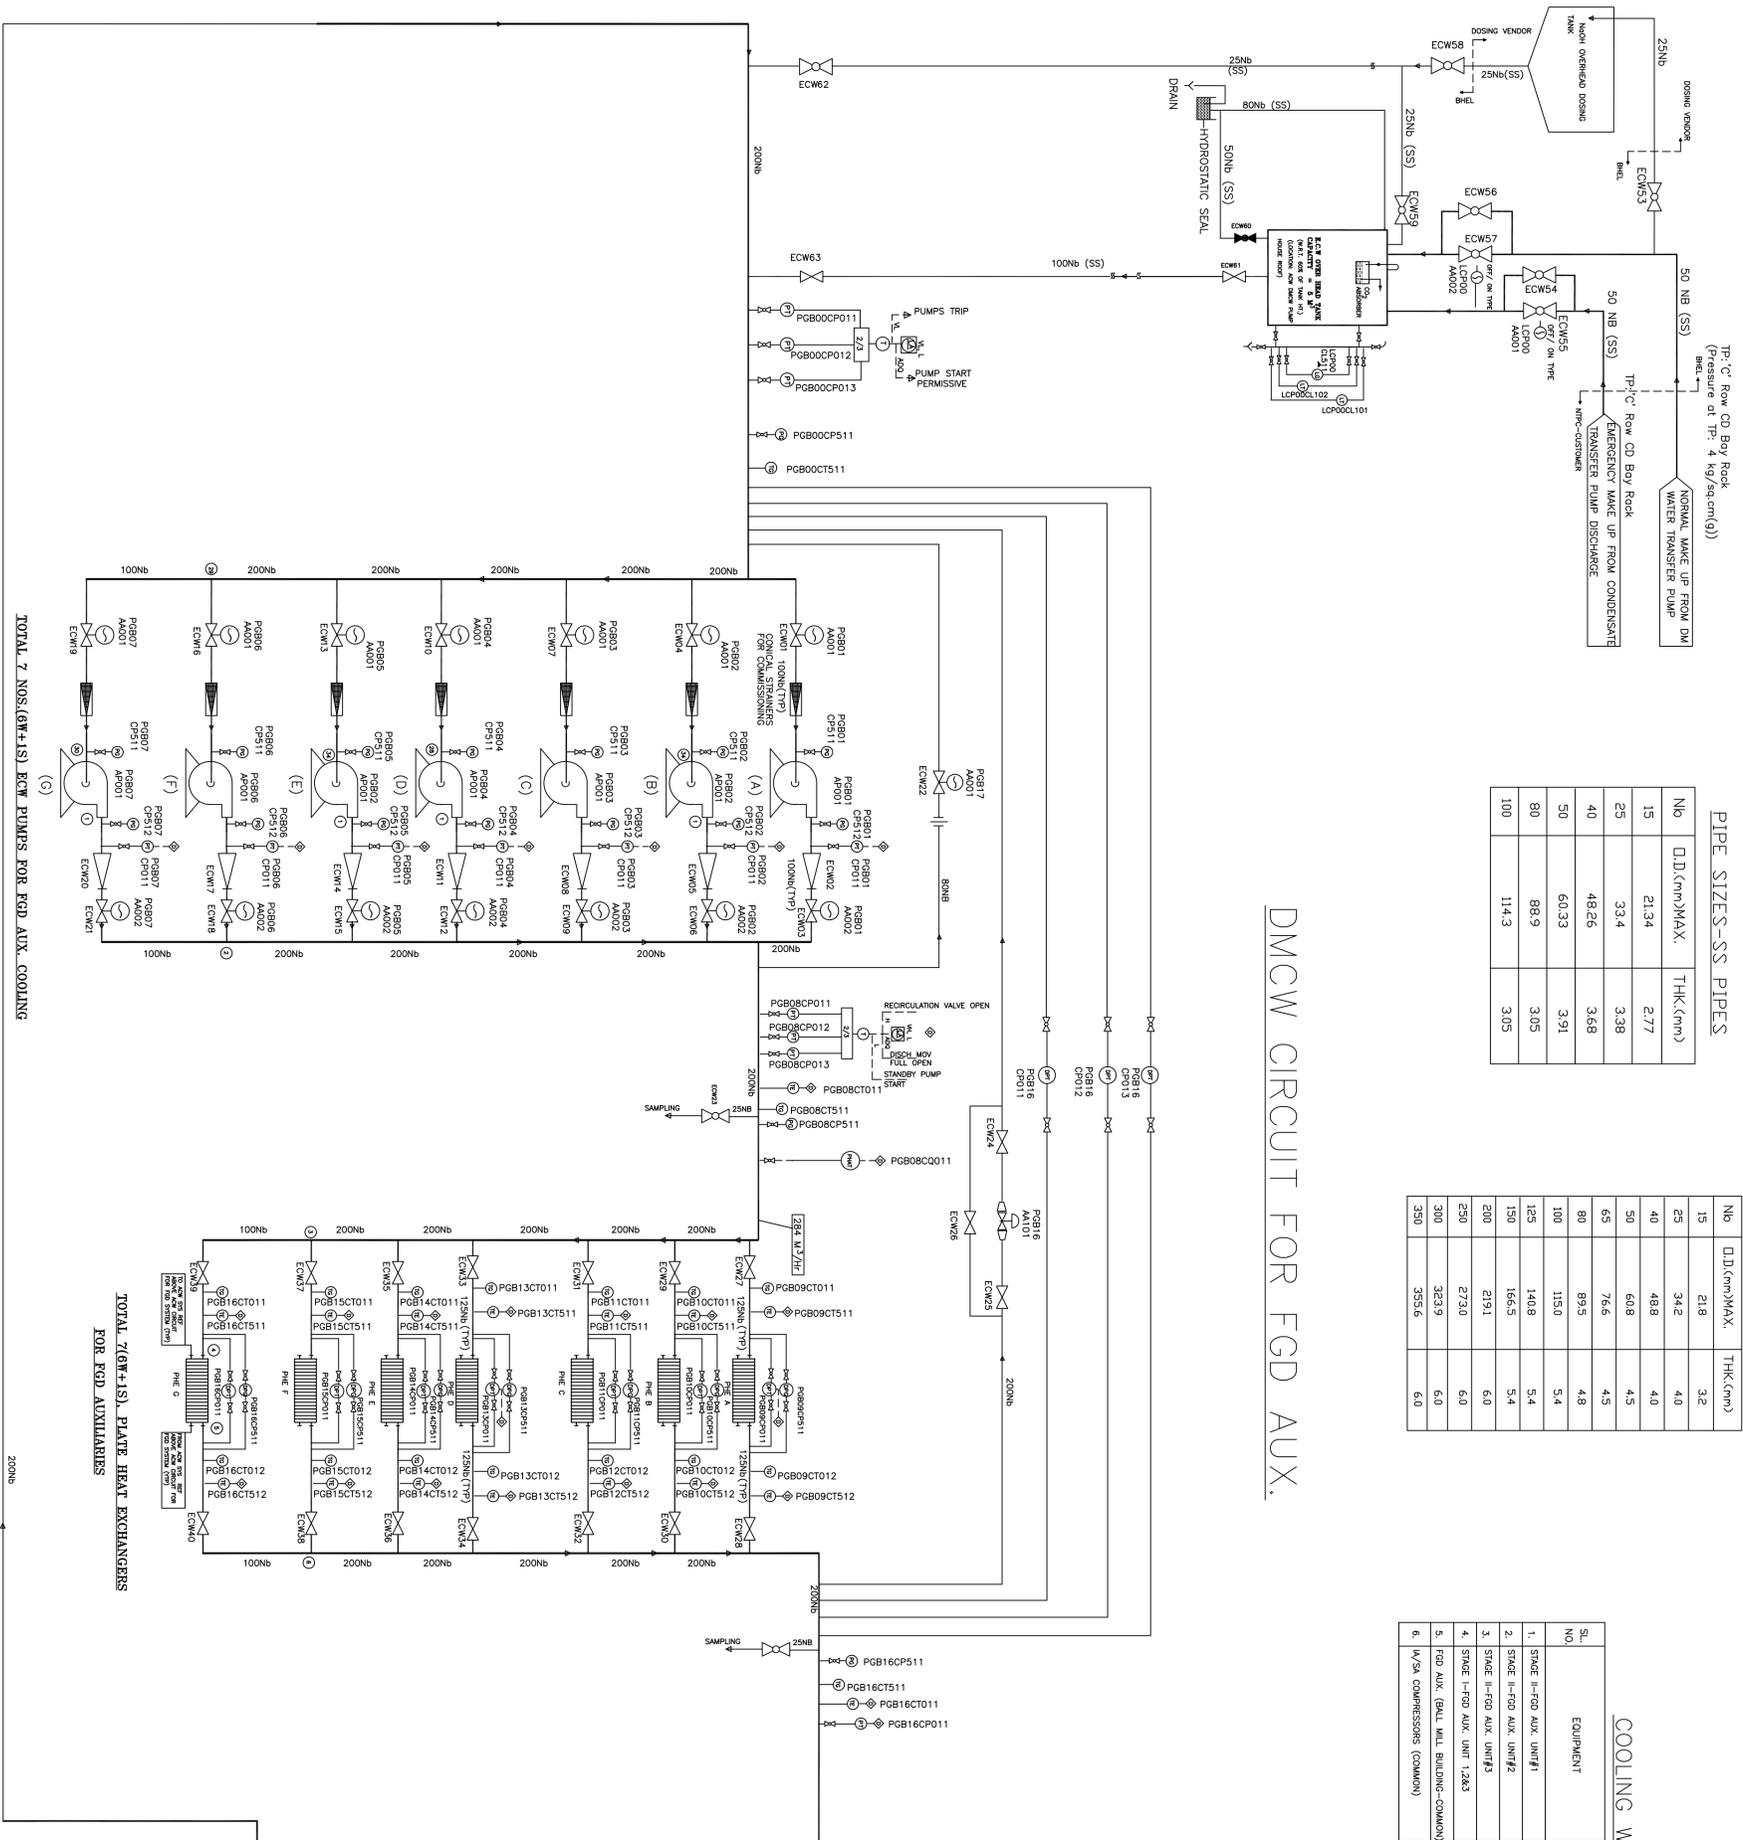

TOTAL 7 NOS.(GW+SS) RCW PUMPS FOR FGD AUX. COOLING

TOTAL 7(GW+SS) PLATE HEAT EXCHANGERS FOR FGD AUXILIARIES

200NB

PIPE SIZES-SS PIPES


No	DI.(mm)MAX.	THK.(mm)
15	21.34	2.77
25	33.4	3.38
40	48.26	3.68
50	60.33	3.91
80	88.9	3.05
100	114.3	3.05

PIPE SIZES-CARBON STEEL PIPES

No	DI.(mm)MAX.	THK.(mm)
15	21.8	3.2
25	34.2	4.0
40	48.8	4.0
50	60.8	4.5
65	76.6	4.5
80	89.5	4.8
100	115.0	5.4
125	140.8	5.4
150	165.5	5.4
200	219.1	6.0
250	273.0	6.0
300	323.9	6.0
350	355.6	6.0

COOLING WATER REQUIREMENT

SL. NO.	EQUIPMENT	FLOW RATE (M <sup>3</sup> /HR)	PRESSURE DROP WITHIN UNIT (MMWC)	TEMP. RISE(°C)	REMARKS
1.	STAGE II-FGD AUX. UNIT#1	34	20	5.0	
2.	STAGE II-FGD AUX. UNIT#2	34	20	5.0	
3.	STAGE II-FGD AUX. UNIT#3	34	20	5.0	
4.	STAGE I-FGD AUX. UNIT 1,2&3	132	20	5.0	
5.	FGD AUX. (BALL MILL BUILDING-COMMON)	20	20	5.0	
6.	I/A SA COMPRESSORS (COMMON)	30	10	10.0	

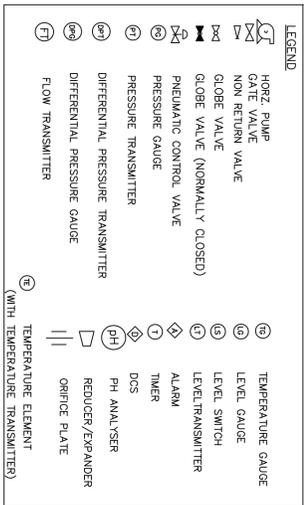

- NOTES:-
- DESIGN PRESSURE DMCW(EW) SYSTEM = 12 KG./SQ.CM.(G)
  - DESIGN PRESSURE ACW SYSTEM = 7.5 KG./SQ.CM.(G)
  - DESIGN DMCW(EW) INLET TEMPERATURE TO COOLERS: 38°C. MECH. DESIGN TEMPERATURE: 60°C.
  - DESIGN ACW (CW BLOWDOWN) INLET TEMP.: 36°C. MECH. DESIGN TEMPERATURE: 60°C.
  - QUALITY OF WATER - DMCW SYSTEM-PASSIVATED DM WATER WITH PH MAINTAINED AROUND 9.5 BY NDOH DOSING. - ACW SYSTEM-CW BLOWDOWN
  - MATERIALS OF CONSTRUCTION (PIPEWORK):
    - 3.1 EAW AND ACW PIPEWORK:
      - a) PIPING = &lt; 150NB SHALL BE CARBON STEEL, ERW CONFORMING TO IS:1239 (HEAVY GRADE).
      - b) PIPING > 150NB SHALL BE CARBON STEEL, IS:2062 GR-E 250 B. PLATES ROLLED & WELDED AS PER IS: 3589.
    - 3.2 PIPING FOR EAW OVERHEAD TANK TILING FROM DM TRANSFER PUMP, FROM EAW OVERHEAD TANK TO SOLUTION HEADERS OF PUMPS, NDOH DOSING PIPEWORK, DM WATERLINE TO NDOH TANK SHALL BE SS TO ASTM A312 GR. 304. (THICKNESS FOR PRESS-50NB SHALL BE AS PER SCH.40S & FOR PRESS-80NB SHALL BE AS PER SCH. 10S OF ASTM A312/312M)
    - 4. 25 NB DRAINS & VENTS SHALL BE PROVIDED FOR PIPE SIZES UP TO 350 NB AS PER LAYOUT REQUIREMENTS.
    - 5. INSTRUMENTS MARKED (▲) THUS SHALL BE SUPPLIED ALONGWITH THE EQUIPMENTS.
    - 6. ALL PRESSURE TAPPINGS SHALL BE OF 15 NB.
    - 7. PAINTING PROTECTION SHALL BE AS PER NIPCC SPECIFICATION.
    - 8. ALL TEMPERATURE ELEMENTS SHALL BE PROVIDED WITH TEMPERATURE TRANSMITTERS.

FOR NO. 467

REV	DATE	BY	CHKD	APPD

PROJECT: NIPCC DRAWING NO. 3130-109-PWA-B-388

STATION: 3X200MW + 3X500 MW NIPCC RAMAQUINDAM STPP STAGE I & II - FGD SYSTEM PACKAGE

CLIENT: BHARAT HEAVY ELECTRICALS LTD.

PROJECTS: POWER SECTOR

PROJECTS: ENGINEERING MANAGEMENT

INDIA

DATE: 28.07.2020

SCALE: AS SHOWN

PE-DG-467-179-N051

SHEET 1 OF 2

**CC-SAFETY-STD/COMMON/MMH/R0**

Rev. No.: 0, September 2018

# **STANDARD FOR MECHANISED MATERIAL HANDLING**

## **Corporate Safety Department**

**NTPC Limited  
Engineering Office Complex  
A-8A, Sector- 24, Noida**

Page 1 of 71

<b>Title of safety standard</b>	<b>STANDARD FOR MECHANISED MATERIAL HANDLING</b>
<b>Document No.</b>	<b>CC-SAFETY-STD/COMMON/MMH/R0</b>
<b>Revision/ Issue no. &amp; date</b>	<b>September - 2018, Rev. No: 0</b>
<b>Reference Document</b>	<ol style="list-style-type: none"> <li>1. IS: 13367 SAFE USE OF CRANES- CODE OF PRACTICE</li> <li>2. IS: 12735 WIRE ROPE SLINGS - SAFETY CRITERIA AND INSPECTION PROCEDURES FOR USE</li> <li>3. IS: 8324 - 1988 (Reaffirmed 1999) CODE OF PRACTICE FOR SAFE USE AND MAINTENANCE</li> <li>1. OF LIFTING CHAINS AND CHAIN SLINGS</li> <li>4. IS: 3832 - 2005 HAND-OPERATED CHAIN PULLEY BLOCK — SPECIFICATION</li> <li>5. IS 2762 – 1982 (Reaffirmed 2001) SPECIFICATION FOR WIRE ROPE SLINGS AND SLING LEGS</li> <li>6. IS 2760 - 1980 (Reaffirmed 2000) SPECIFICATION FOR STEEL CHAIN SLINGS</li> <li>7. CEA (Measures relating to safety and electric supply) REGULATIONS 2010</li> </ol>
<b>Prepared by</b>	Signature:  AGM (Safety)
<b>Reviewed by</b>	Signature:  GM (Safety)
<b>Approved by</b>	Signature:  ED (Safety, Env. & Ash Utl.)
<b>Approved for implementation by</b>	Signature  Director (Operations)
<b>Date of Issue</b>	11.10.18
<b>Distribution</b>	ALL NTPC projects , stations, JVs and Subsidiaries

### REVISIONS

<b>Rev.1</b>	-
<b>Rev.0</b>	<b>September, 2018</b>
<b>ISSUED BY :</b> <b>CORPORATE SAFETY DEPARTMENT</b>	<b>ISSUED TO :</b> <b>ALL NTPC projects , stations, JVs and Subsidiaries</b>

## CONTENT

Sl.	DESCRIPTION	PAGE NO
1.	SCOPE	4
2.	DEFINITIONS	4
3.	MANAGEMENT OF THE LIFTING OPERATION	5
4.	PLANNING OF THE LIFTING OPERATION	7
5.	SELECTION OF PERSONS	8
6.	RECOMMENDED MINIMUM ATTRIBUTES	9
7.	SAFETY	13
8.	SITING OF CRANES	16
9.	ERECTION AND DISMANTLING	19
10.	PROCEDURES AND PRECAUTIONS	21
11.	OPERATING CONDITIONS	24
12.	TESTING AND EXAMINATION	28
13.	LEGAL REQUIREMENTS	31
14.	ROPES	32
15.	SLINGING AND HANDLING OF LOADS	43
16.	RECOMMENDATIONS FOR SAFE USE AND MAINTENANCE OF HAND-OPERATED CHAIN PULLEY BLOCKS	67

## 1. SCOPE

This standard gives guidance for the safe use of all types of cranes, wire rope slings, chain slings and chain pulley block. Subjects covered include safe system of work, management, planning, general recommendations for selection, installation, testing, operation and maintenance of cranes & and for the selection of drivers, slingers and signallers.

Reference is also made to relevant legislation and attention is drawn to statutory requirements for the testing and examination of cranes.

## 2. DEFINITIONS

**2.0** For the purposes of this standard, the following definitions shall apply.

### **2.1 Appointed Person**

The person appointed by the management or organization requiring the lifting operation to be undertaken who will be responsible for all aspects of the lifting operation.

### **2.2 Automatic Safe Load Indicator**

A device fitted to a crane, or incorporated in its design, that automatically gives visual indication to the driver when the load being lifted or carried by the crane approaches the safe working load. And that gives a continuous audible warning to the driver and other persons in the vicinity when the load being lifted or carried exceeds the safe working load. Under certain statutory regulations, the automatic safe load indicator should be of a type approved, by the Chief Inspector of Factories.

### **2.3 Competent Person**

A person who is deemed to be competent and has such practical and theoretical knowledge and such experience of the crane and the equipment used in the lifting operation as is necessary-to- carry out the function to which the term relates in each particular context.

### **2.4 Driver**

The person who is operating the crane for the purpose of positioning loads. Driver does not include any person who is operating a crane for erection of the crane itself. The driver must possess a valid 'transport vehicle' license under any of the following category depending upon the vehicle he drives -

- medium goods vehicle
- heavy goods vehicle

“light motor vehicle” means a transport vehicle or omnibus the gross vehicle weight of either of which or a motor car or tractor or road-roller the unladen weight of any of which, does not exceed [7500] kilograms ;

“medium goods vehicle” means any goods carriage other than a light motor vehicle or a heavy goods vehicle ;

“heavy goods vehicle” means any goods carriage the gross vehicle weight of which, or a tractor or a road-roller the unladen weight of either of which, exceeds 12,000 kilograms;

## 2.5 Load Radius Indicator

A device fitted on a crane that shows the radius of the hook and the corresponding safe working load.

## 2.6 Radius

The horizontal distance between the point at which the centre of rotation of the crane meets the ground, and the vertical centreline through the hook.

## 2.7 Safe Working Load

The maximum load that can be safely handled by a crane at a specified position and under specified conditions.

## 2.8 Service Conditions

- a) In-Service - With the crane handling loads up to the safe working loads in permissible wind pressures specified in the appropriate Indian Standard.
- b) Out-of-Service - With the crane either not required for use, or out of use when wind pressures exceed those permitted for in service conditions, and without load on the hook.

## 3. MANAGEMENT OF THE LIFTING OPERATION

### 3.1 Safe System of Work

- A safe system of work should be established and followed for every lifting operation. This should include the planning of the operation, the provision, selection, maintenance and examination of the correct equipment and the provision of properly trained, competent personnel with adequate supervision.
- The lifting operation should be taken to include any necessary preparation of a site and erection and dismantling of the crane or cranes. The same principles should be applied when a series of lifting operations are being carried out at one site or the crane is a permanent fixture, for example, in a factory
- Always lift loads gently and operate crane motions smoothly to avoid load swinging. (A swinging load will increase the overturning moment of the cranes.) Use steady lines where necessary and where the load presents a wind catching area. Always travel with the load near to ground level so load swinging can be controlled.

### 3.2 Appointed Person

The management of the organization requiring the lifting operation to be undertaken should appoint a person with appropriate training and experience who should be competent. This person should be known as the appointed person. The appointed person need not be an employee of the organisation and will not normally undertake the duties of crane driver, slinger or signaller.

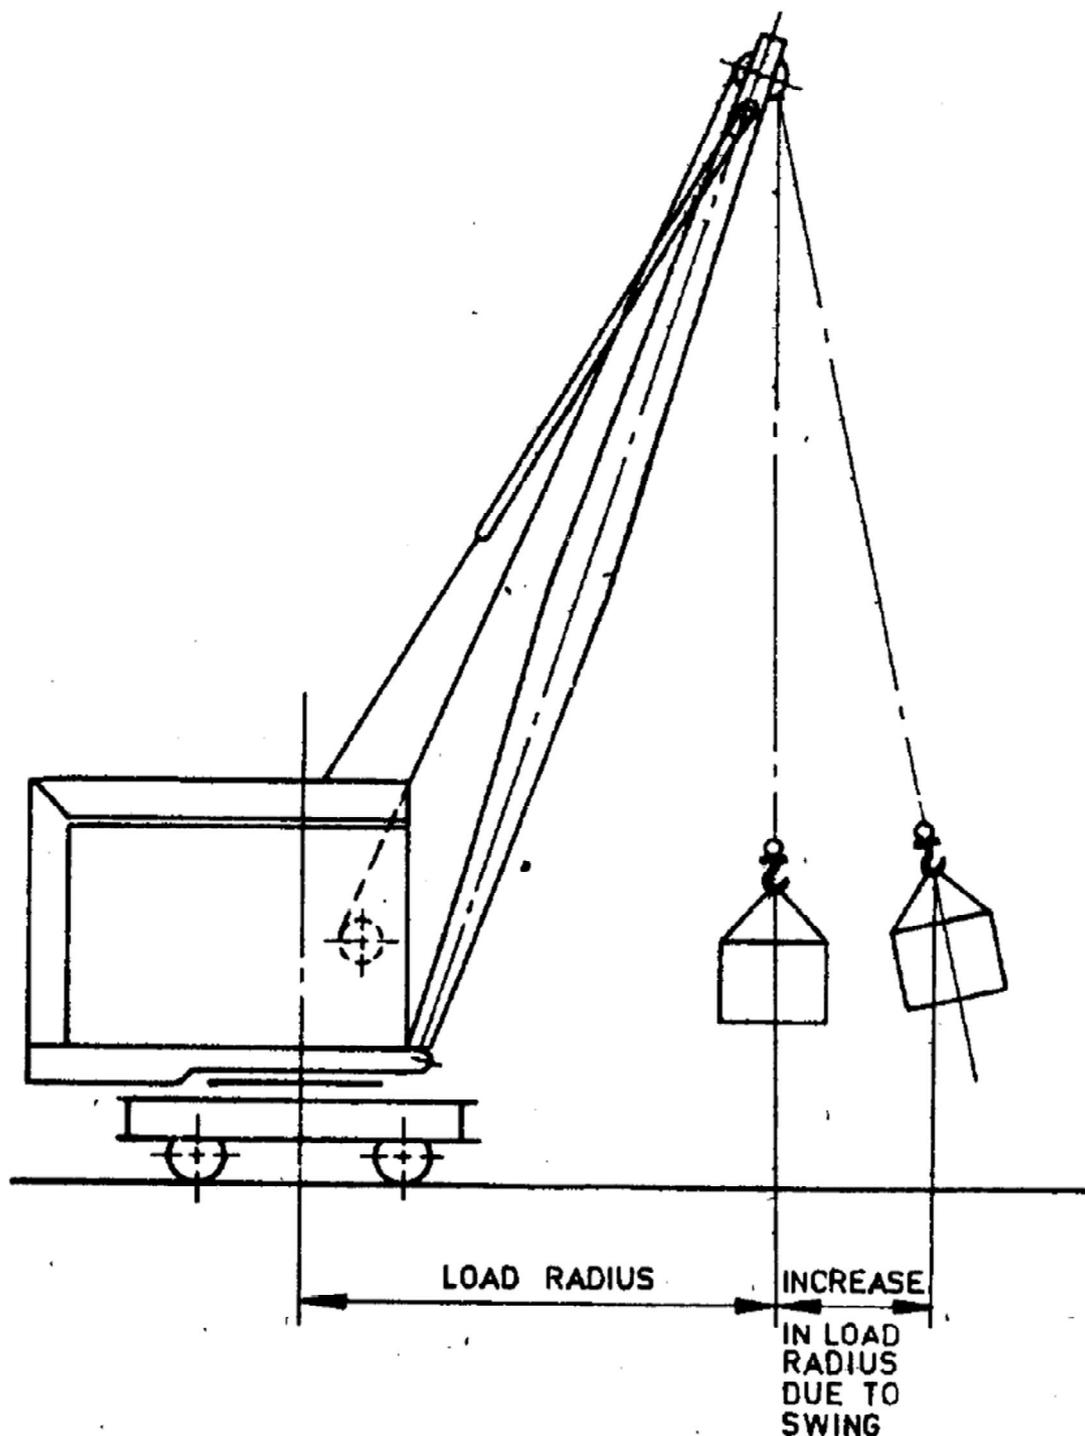


FIG. 1. EFFECT OF A SWINGING LOAD ON LOAD RADIUS

### 3.3 Duties of the Appointed Person

The management of the organization requiring the lifting operation to be undertaken should specify the duties of the appointed person which should include:

- a) The assessment of the lifting operation to provide such planning, selection of crane(s) lifting gear and equipment, instruction and supervision as is necessary for the task to be undertaken

- safely. This should include consultation with other responsible bodies, if necessary, and ensuring that where different organizations are involved they collaborate as necessary.
- b) Ensuring that there is an effective procedure for reporting defects and incidents (see 10.3) and that adequate maintenance of the equipment is carried out.
  - c) Responsibility for the organization of the team involved in the lifting operation.
  - d) The nomination of persons to undertake the duties required for the operation including those listed in 4 or ensuring that this responsibility is delegated to an appropriate person or organization.
  - e) Responsibility for control of the lifting operation. This duty may be delegated to another person where considered appropriate by the appointed person. It is undesirable that this duty should be undertaken by the crane driver because of the need for the crane driver to be at the crane controls throughout the operation.

The appointed person should be given the necessary authority for the performance of all these duties and in particular, authority to stop the operation whenever he considers that danger is likely to arise should the operation continue.

#### **4. PLANNING OF THE LIFTING OPERATION**

##### **4.1 General**

Every lifting operation including crane erection and dismantling should be planned to ensure that it is - carried out in a safe manner. The extent of detailed planning will depend on the complexity of the overall operation but no operation should be considered so simple that the planning can be ignored. The plan should never permit exceeding the safe working load of the crane or equipment.

##### **4.2 Planning**

For a lifting operation where there are obstructions and hazards, or where ground conditions are suspect, or the load being handled is in any way unusual, a high degree of detailed planning, including determination of the load and its characteristics (including centre of gravity), the investigation of the ground conditions, the nature of any obstructions and hazards and the method of slinging and of controlling the movement of the load throughout the lifting operation should be carried out. An essential feature of this planning should be the production of plans and elevations of the lifting operation at all critical phases from the initial siting of the crane to the final landing of the load. A written statement outlining the duties of, and action required from, each member of the team should be produced and all members of the team should be fully aware of the contents of this statement.

If the crane(s) called for by the planning, has to be erected before commencing work and dismantled after completion then these phases form part of the overall operation and the appointed person should ensure that all relevant factors including space, suitability of ground and access are given due consideration. In any case, safe access to the site of lifting operations is always an important consideration.

Lifting operations involving the simultaneous use of more than one crane carry a higher risk factor than those using only one crane so that additional care should be taken in their planning (see 11.4). It is also essential that the drivers, slingers and the person in charge are thoroughly briefed with particular emphasis on the effect that the operation of one crane has on the other(s). Three

dimensional scale models should be considered a useful aid to the team briefing for particularly complicated lifts.

### **4.3 Planning for the Permanently Installed Crane**

Where a crane installed to carry out a number of operations or installed as a permanent fixture, the planning should be carried out prior to the selection and installation of the crane. Account should be taken of the continuing lifting requirements and the loads that are likely to be lifted. The operations should be reviewed periodically to check that the size and nature of the loads have not altered significantly and that the crane and equipment are still suitable for the duty required of them.

### **4.4 Minimum Planning**

Lifting operations whose consideration shows that there are no hidden difficulties with access, erection and dismantling, obstructions, hazards or other complications should only require minimum planning. Following the selection of a suitable crane and range of lifting gear and equipment for the loads to be lifted, such operations may be delegated to the team of slinger(s) and crane driver after they have been fully briefed on their task.

## **5. SELECTION OF PERSONS**

### **5.1 General**

Safe lifting depends on the selection of suitable persons who are competent to carry out the required duties. The appointed person should ensure that persons involved in the operation are efficiently organized to ensure good, team work in the working situation and that no member of the team has his efficiency impaired because of alcohol or other drugs. All persons in the team should beware of their duties which should be as listed in 5.2.1 to 5.2.5. Responsibility should only be delegated to an extent that is appropriate, taking into account the ability, competence and authority of the person concerned.

The appointed person should choose persons who are fit and either competent or who are under appropriate training and supervision. The recommended attributes for persons involved in lifting operations are given in 6.1 to 6.5.

### **5.2 Duties of Persons**

#### **5.2.1 Crane Driver**

The crane driver should be responsible for the correct operation of the crane in accordance with the manufacturers instruction book and the plan. In some cases, the crane driver may be responsible for erection and dismantling of the crane. The crane driver should at any one time only respond to the signals from one slinger/signaller who should be clearly identified.

#### **5.2.2 Slinger**

The slinger is responsible for attaching and detaching the load to and from the crane hook and for the use of the correct lifting gear and equipment in accordance with planning of the operation.

The slinger is responsible for initiating and directing the safe movement of the crane [see 6.2(h)]. At any one time, dependent upon the physical position of the slinger or slingers, only one slinger should have this responsibility.

Where this slinger is not visible to the crane driver, another slinger or a signaller should be employed to relay the signals to the crane driver. Alternatively, other audio or visual methods should be used such as telephone, radio or closed-circuit television.

To cover the possibility of failure of the audio or visual method, a separate system should be available to enable movement of the crane(s) or load(s) to be safely halted. There should be no further movement of the crane(s) or load(s) until means of signalling have been restored.

If responsibility for directing the crane and load is to be transferred to another person, the slinger should retain responsibility until such time as the slinger considers it necessary to transfer the responsibility. At this time:

- a) the slinger should clearly indicate to the crane driver that this responsibility is being transferred and to whom;
- b) the slinger should clearly indicate to the new slinger or signaller that this transfer is taking place;
- c) the driver and new slinger or signaller should clearly indicate that they accept the transfer of responsibility.

### 5.2.3 Signaller

The signaller should be responsible for relaying the signal from the slinger to the crane driver. The signaller may be given the responsibility for directing movement of the crane and load instead of the slinger, provided that only one person has the responsibility.

### 5.2.4 Crane Erector

The crane erector is responsible for the erection of the crane in accordance with the manufacturers instructions (see 9).

Where two or more crane erectors are required, one should be nominated as 'erector-in-charge' to control the operation.

### 5.2.5 Maintenance Personnel

The maintenance personnel should be responsible for maintaining **the** crane to ensure its safe and satisfactory operation. They should carry out all necessary maintenance in accordance with the safe system of work and permit to work (see 7.3 and 7.4).

## 6. RECOMMENDED MINIMUM ATTRIBUTES

### 6.1 Crane Driver

The crane driver should:

- a) be competent;
- b) be more than 18 years of age except when under the direct supervision of a competent person for the purpose of training;

- c) be fit, particularly with regard to eyesight, hearing, reflexes, the stature to operate the crane safely, ability to judge distances, heights and clearances;

NOTE- Evidence that the driver is medically fit to drive a crane should be obtained at not more than 5 yearly intervals and should be made available to the appointed person.

- d) have been adequately trained in the type of crane being driven and have sufficient knowledge of the crane and its safety devices;
- e) understand fully the duties of the slinger and signaller and be familiar with the signal and any alternative methods of relaying the signals which are to be used for the operation being undertaken in order to implement safely the instruction of the slinger or signaller;
- f) be familiar with the fire appliances on the crane and be trained in their use;
- g) have been authorized to operate the crane. The appointed person in giving this authorization should take competence, training, recent experience and fitness into account.

NOTE- It is also recommended that a record of the drivers training and experience is maintained. Such records should be made available to the appointed person.

## 6.2 Slinger

The slinger should:

- a) be competent;
- b) be more than 18 years of age except when under the direct supervision of a competent person for the purpose of training;
- c) be medically fit, with particular regard to eyesight, hearing, reflexes, agility, having the physique to handle lifting gear and equipment and be able to establish weights, balance loads and judge distances, heights and clearances;
- d) have been trained in the techniques of slinging;
- e) be capable of selecting lifting gear and equipment from that provided, suitable for the load to be lifted;
- f) be able to understand the signal code for the crane being operated and be able to give clear and precise signals;
- g) be capable of giving precise and clear verbal instructions where audio equipment (e.g.radio) is employed and be capable of operating the equipment;
- h) be capable of directing the safe movement of the crane and and
- i) have been nominated by the appointed person to carry out slinging duties.

## 6.3 Signaller


The signaller should:

- a) be competent;
- b) be more than 18 years of age, except when under the direct supervision of a competent person for the purpose of training;
- c) be fit with particular regard to eyesight, hearing, reflexes, mobility, ability to judge distances, heights and clearances;
- d) understand the signal code for the crane being operated and be able to give clear and precise signals;
- e) be capable of giving precise and clear verbal instructions where audio equipment (e.g. radio) is used and be capable of operating the equipment;
- f) be capable of initiating and directing the safe movement of the crane and load; and

- g) have been nominated by the appointed person to carry out signalling duties; and
- h) be aware of the responsibilities allocated by the appointed person to the crane driver and slinger.

NOTE: - The signaller should stand in a secure position where HE CAN SEE THE LOAD AND CAN BE SEEN CLEARLY by the driver. Facing towards the driver is possible. Each signal should be distinct and clear.

**Fig. 2 Recommended Crane Signals – Contd.**

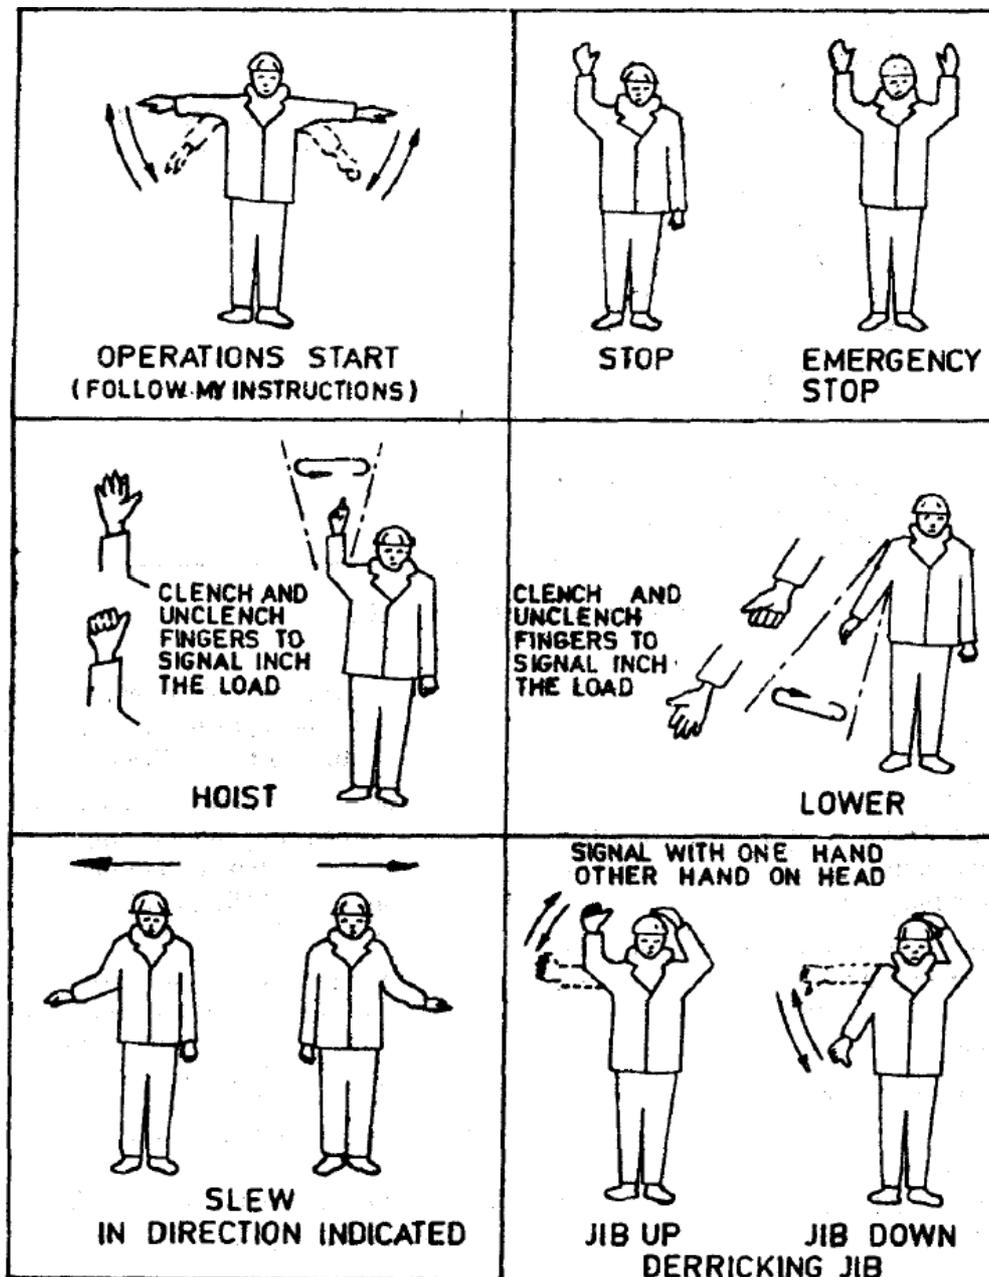

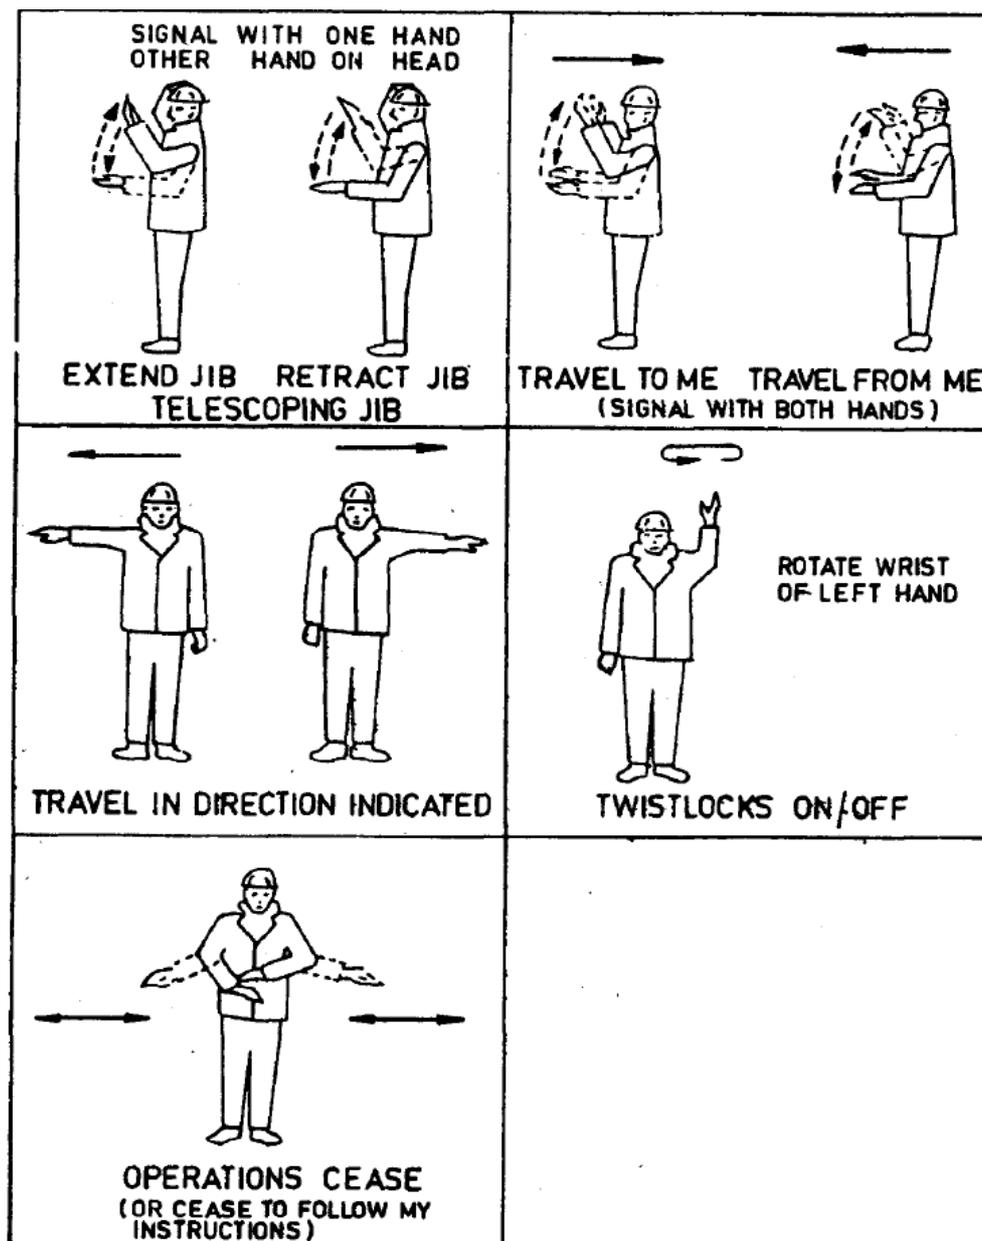


Fig. 2 Recommended Crane Signals

#### 6.4 Crane Erector

The crane erector should:

- be competent
- be more than 21 years of age except when under direct supervision of a competent person for the purpose of training;
- be fit with particular regard to eyesight, hearing, reflexes and have the stature and agility to safely handle the loads involved in crane erection;
- be able to work confidently and safely at heights;
- be aware of personal responsibilities under the law (civil and criminal), for personal safety and that of others;
- be able to establish weights, balance loads and judge distances, heights and clearances;

Page 12 of 71

- g) have been trained in the techniques of slinging;
- h) be capable of selecting lifting gear and equipment from the that provided; suitable for the load to be lifted;
- i) be adequately trained in the erection, dismantling and working of the type of crane being erected, also in the safe use and setting up of any lifting appliance used in the course of these duties; and
- j) be adequately trained in the setting and testing of the safety devices fitted to the crane being erected and those on any lifting appliance being used for the erection.

### **6.5 Maintenance Personnel**

The maintenance personnel should:

- a) be competent
- b) have adequate knowledge of the machinery they are required to maintain
- c) have access to manufacturer's relevant literature; and
- d) be properly instructed and trained. Where special machinery is involved this should include attending appropriate courses given by the supplier of the equipment.

## **7. SAFETY**

### **7.1 General**

Both the person or organization having overall control of the site and the employers of people involved in the lifting operation have responsibility for safety. In order that this responsibility may be effectively discharged the appointed person (see 3.2) should be given the necessary authority to ensure that adequate systems to achieve safety are in operation. For safety matters relating to lifting operations this will include the use, maintenance, repair and renewal of safety equipment and the instruction and responsibilities of various personnel in relation to the equipment.

### **7.2 Identification of Person Directing Crane Movements**

The person directing crane movements (slinger or signaller) should be easily identifiable to the crane driver by wearing high visibility clothing or by other means.

### **7.3 Safe System of Work**

For every lifting operation and before any maintenance, repairs or adjustments or any inspections are carried out on a crane, a safe system of work should be established to ensure the safety of all personnel. The system should prevent any inadvertent restoration of the power or movement of the crane. The safe system of work should be clearly documented as reliance on verbal instructions alone is not enough to ensure safety.

### **7.4 Permit to Work**

The system should ensure effective communication between all parties concerned. Where it is required to carry out work on a crane at its place of work, a permit to work system may be necessary to achieve a safe system of work. This requires a specially designed form or certificate to be issued only when the requirements of the safe system of work have been implemented. Upon completion of the work the person(s) who have carried out the work should sign the form or certificate to certify that all tools have been removed from the crane, that all guards have been replaced, that all safety devices are operating and that all persons working on the crane have been advised that it is no longer safe to do so.

The work, permits shall be given and received back after completion by only one authorised person. The crane shall be declared safe for operation only by that authorised person. Following the signing of the certificate, the crane can be restored to service.

The essential details of a permit to work system are:

- a) the crane is clearly identified;
- b) the degree of power isolation is adequate for the work being undertaken;
- c) isolation remains secure against unauthorized restoration of power whilst the permit to work is in force;
- d) no work other than that for which the permit specifies should be carried out unless the permit is endorsed for the extra work and all persons involved are notified;
- e) where more than one group of people work, each person shall be given the work permits for repairs crane shall be declared safe for operation only after all work permits are returned to the person authorised to issue work permits for repairs;
- f) all special precautions are stated;
- g) the safe working area around the crane is clearly defined;
- h) the safe working load is clearly identified; and
- i) that the system be monitored.

### **7.5 Personal Safety Equipment**

The appointed person should ensure that:

- a) personal safety equipment such as safety gloves, helmets, safety spectacles, safety harness, safety boots, ear defenders, etc. appropriate for the conditions of the location is available;
- b) the equipment is inspected before and after use and maintained in good working order; and
- c) a record of inspection and repairs is maintained.

### **7.6 Use of Personal Safety Equipment**

Personal safety equipment appropriate to the conditions pertaining to the location of the crane should be provided to all personnel working on, or visiting the location of the crane.

All personnel working on, visiting or the vicinity of the crane, should be made aware of the requirements relating to their personal safety and to the use of personal safety equipment provided. Persons should be instructed in the correct use of the personal safety equipment provided and be required to use it.

### **7.7 Access and Emergency Escape**

#### **7.7.1 Safe Means of Access and Emergency Escape**

Safe means of access and emergency escape should be provided and maintained in good condition:

- a) for the driving position(s) of the crane;
- b) for inspection, maintenance, repair, erection and dismantling of the crane; and
- c) suitable rope, wherever necessary may be provided for emergency escape.

#### **7.7.2. Boarding the Crane**

No person(s) should be permitted to board a crane without first obtaining the driver's agreement. The driver should be aware of what precautions the driver should take whilst the person(s) is/are boarding and should carry these out. Where the point of access is out of sight of the driver a system should be provided to ensure that the driver is aware of the other person's whereabouts. In the case of a crane with pendant control, a second person should be made responsible for ensuring that the pendant is not operated whilst the person(s) is on the crane.

When only one person has to board a radio controlled crane, this person should switch the radio transmitter off, remove the key from its key lock switch and retain possession of the transmitter while the person is on the crane. Where more than one person is to board a radio controlled crane, a driver should be placed in charge of the radio transmitter to ensure that the crane is only moved with the agreement of all persons on the crane. Such movements should only be permitted for maintenance and/or inspection of the crane and persons on the crane should only give permission to the driver for movements to be made, after they have ensured that they are in a safe position.

### **7.7.3 Instruction of Personnel**

Personnel should be instructed to use (and should use) only the proper means of access and emergency escape.

### **7.8 Fire Extinguishers**

These shall be provided in all the cabins on crane installations. Any fire extinguishers at the location including any mounted on the crane should be scheduled for periodic inspection and renewed as necessary.

### **7.9 Crane Safety Equipment**

#### **7.9.1 Automatic Safe Load Indicator**

An automatic safe load indicator is required on certain jib cranes to give warning of an approach to the safe working load and a further warning when an overload occurs.

#### **7.9.2 Load Radius Indicator**

A load radius indicator is required on certain jib cranes. It should be clearly visible to the driver and indicate the appropriate safe working load and radius for whatever configuration of the crane is used.

#### **7.9.3 Motion Limit Devices**

Where motion limit devices are fitted to limit hoisting, travelling, slewing, traversing, climbing or any other crane motion, they should be regularly inspected and maintained in good working order.

#### **7.9.4 Overload Cut Out Devices**

Switches, or other devices, may be fitted to cut out any selected crane motion when the crane is in an overload situation. The devices should be maintained in good working order.

#### **7.9.5 Level Indicator**

Where fitted, level indicators should be used in accordance with the instruction manual and maintained in good working order.

#### **7.9.6 Anemometer**

Anemometers, or other wind speed measuring devices, should have their indicators mounted in clear view of the crane driver or where appropriate, the person controlling the lift being undertaken. The correct operation of these devices should be regularly verified and they should be maintained in satisfactory condition.

### 7.9.7 Machinery Guarding

All guarding should be properly fitted whenever the crane is in use and maintained in good condition.

## 7.10 Documentation

### 7.10.1 Safe Working Load Charts

Safe working load charts applicable to the various specified operating conditions of the crane, with appropriate de-rating for special applications such as magnet or grabbing duties, should be prominently displayed to the driver. Operation of the crane outside these parameters even in an unloaded situation may give rise to danger.

### 7.10.2 Instruction Manuals

Instruction manuals (OEM) containing adequate information on the erection, use and dismantling of the crane should be kept regularly available at the location of the crane.

### 7.10.3 Test Certificate

Current test certificate of thorough examination by a competent person for cranes and lifting gear should be kept readily available.

(See Schedule – I: Register of periodic test & examination of lifting appliances and gears)

### 7.10.4 Records

- a) Records should be maintained for each crane that are sufficient to enable the condition of the crane to be determined and its fitness for further operation to be properly assessed.
  - b) The records should include:
  - c) technical information including maintenance instructions and performance data provided by the manufacturer;
  - d) test certificates, records of thorough examinations and inspection including ropes and brakes (see 14.7.1) (whether statutory or not) carried out on the crane;
  - e) records of significant repairs and modifications to the crane including renewal of major parts; details of occurrences which are of more than short term relevance [see 10.3 (c), 10.3 (d) and 10.3 (e)].
- c) Except where specific forms are required by legislation, the format in which records are kept is not important. Whatever method is used should be adequate to ensure that the records allow a relevant and coherent history of the crane to be retrieved. The records should be clearly identifiable with the crane to which they refer.

## 8. SITING OF CRANES

### 8.1 General

During the planning operation the appointed person should give careful consideration to the siting of the crane. This should take account of all the factors that may effect its safe operation particularly:

- i. the crane standing and support conditions;
- ii. the presence of proximity and other hazards;
- iii. the effect of wind during in and out of service conditions;
- iv. the adequacy of access to allow the placing or erection of the crane in its working position and for dismantling and removal of the crane following completion of lifting operations.

## 8.2 Crane Standing or Support Conditions

The appointed person should ensure that the loads, imposed by the crane can be sustained by the ground or any means of support and that these are assessed by a competent person. The loads imposed by the crane should be obtained from the crane manufacturer or other authority on crane design and construction. The loadings shall include the combined effects of:

- a) the dead weight of the crane (including any counterweight and/or ballasting);
- b) the dead weight of the load(s) and any lifting attachment(s);
- c) dynamic forces caused by movements of the crane; and
- d) wind loadings, resulting from wind speeds up to the maximum permitted (taking into account the degree of exposure of the site).

It is likely that in-service conditions will produce the greater imposed loading but out-of-service and erection/ dismantling conditions should be taken into consideration. It should be appreciated that the vertical and horizontal forces are unlikely to be uniformly distributed and an allowance should therefore be made for these and for any other unpredictable effects.

The appointed person should ensure that the ground or any means of support is such that the crane can operate within the levels and other parameters specified by the manufacturer.

## 8.3 Proximity Hazards

### 8.3.1 General

Consideration should be given to the presence of proximity hazards such as overhead electric lines or conductors, oil/gas, 'steam, etc, pipelines nearby structures, cranes, vehicles being loaded, unloaded, stacked goods, public access areas including highways, railways, rivers, etc.

Where any part of the crane or its load cannot be kept clear of such hazards the appropriate authority should be consulted.

The danger to or from underground services, such as gas mains or electric cables, should not be overlooked. Precautions should be taken to ensure that the crane foundation is clear of any underground services or, where this is not possible, that the services are adequately protected to safeguard against damage being caused.

At any place where a crane or its load passes any obstacle, the following points should be observed:

- a) Where practicable the crane path should be clearly defined by marking to ensure that it is kept free from obstruction and a clearance of not less than 900 mm should be arranged between the crane and any obstacle. Where it is not reasonably practicable to achieve this clearance, effective precautions should be taken to prevent access to any trapping hazards.
- b) Where goods are regularly stacked near a crane, boundary lines for the stacking of goods should be permanently marked on the ground.

### 8.3.2 Overhead Electric Lines and Cables

Many fatal accidents have occurred due to some part of a crane touching, or even coming near to overhead electric lines or cables, without actually touching. The appointed person should ensure that the local offices of the Electricity Board are consulted if the crane is to be used within 15 m of overhead lines on steel towers, or 9 m of overhead lines on wood, concrete or steel poles. This includes not only

the crane but also the jib at its maximum length. All distances should be measured at ground level from a position estimated by eye to be vertically under the outermost conductor at a tower or pole position.

#### WARNING NOTE

**‘TREAT ALL OVERHEAD LINES AND OTHER ELECTRICAL APPARATUS AS LIVE UNLESS DECLARED ‘DEAD’ AND ‘SAFE BY THE LINE OPERATOR OF THE EECIRICITY BOARD. IF IN DOUBT, SEEK ADVICE’.**

When a crane must travel underneath an overhead line the crossing route should be plainly marked and ‘goal posts’ erected each side of the crossing approach to ensure that the jib or moving parts are lowered to a safe position (See Fig. 3).

The dimensions of the goal posts and their distance from the nearest overhead conductor should be decided in consultation with the Engineer of the Electricity Board. Large notices should be posted stating:

**‘DANGER, OVERHEAD ELECTRIC LINES’**

When working parallel to overhead lines, a string of warning markers should be erected at least 6 m measured horizontally along the ground from the outermost conductor at a tower or pole position - where the minimum distance could be encroached by the jib or the crane it should be extended. The actual distance should be agreed upon with the Electricity Board.


**Table: For safety clearance for overhead lines**

Highest System Voltage (kV)	Safe working clearance (Metres)
12	2.6
36	2.8
72.5	3.1
145	3.7
245	4.3
420	6.4
800	10.3

In addition, a notice should be placed in the cab of all cranes likely to work in the vicinity of overhead electric lines giving the following information:

If machine makes contact with live electric cable, observe following precautions.

- a) Remain inside cab.
- b) Warn all other personnel to keep away from crane and not to touch any part of the crane, rope or load.
- c) Try, unaided, and without anyone approaching the machine, to move the crane until it is clear of power line.
- d) If the machine cannot be moved away, remain inside the cab. If possible, get someone to inform the electricity supply authority at once. Take no action until it has been confirmed that conditions are safe.
- e) If it is essential to leave the cab because of fire or some other reason, jump clear as far away from the crane as possible. Do not touch the crane and the ground at the same time.
- f) Inform the responsible engineer of the works or authority concerned of situation immediately and until assistance is received, someone should remain near the crane to warn of the danger.

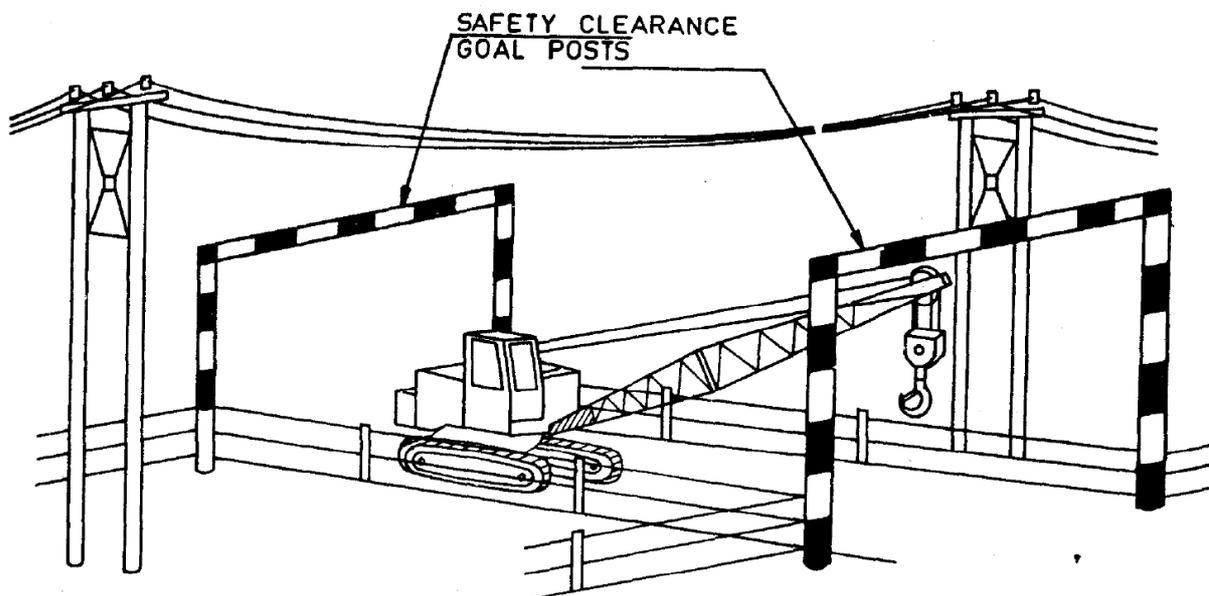

**Fig. 3 Travelling Under Overhead Electric Lines and Cables**

Devices are available which are designed to be fitted on cranes to give warning when the crane comes within a predetermined distance of the overhead electric line. Such devices have limitations and should not be considered as a substitute for a safe system of work.

## **9. ERECTION AND DISMANTLING**

### **9.1 Planning**

Erection and dismantling of the crane should be thoroughly planned and properly supervised in the same way as the lifting operation (see 4).

A correctly planned erection and dismantling procedure should ensure that:

- a) erection of the crane does not commence until an instruction manual clearly understood by erection staff, is available for their use;
- b) the erection/dismantling manual is appropriate to the particular crane and bears the crane manufacturer's serial and type number and the owner's identification;
- c) the entire erection and dismantling operation is controlled by the erector in charge (see 5.2.4);
- d) all personnel involved have a sound knowledge of their part in the operation;
- e) any departure from prescribed procedure is approved by the designer or another
- f) competent engineer
- g) only correct replacement parts and components are used.

## 9.2 Manufacturer's Erection and Dismantling Instructions

The crane manufacturer's instructions should be closely followed. Any departure from the specified sequential procedure should be verified by the designer or another competent engineer, to ensure stability of the crane and that structural and mechanical parts are not subjected to excessive loading.

## 9.3 Identification of Components and Materials

### 9.3.1 Components

All major components that form part of a crane and are dismantled for transportation, particularly those which are load bearing or ensure the stability of the assembled crane, should carry a clear identification mark. Diagrams and drawings in the crane instruction manual, covering erection and dismantling in the crane that show the correct location and orientation of components, should use the same system of marking.

Care should be taken to avoid a mismatch of thread forms of fasteners (nuts and bolts) for example imperial or metric.

### 9.3.2 Materials

Where components (for example Jib sections) have been manufactured from special materials they should be so marked. This is to enable the correct repair procedures to be used, particularly where control of temperature during the repair is necessary.

Nuts and bolts manufactured from high tensile steel or other special steels should be clearly marked so that they can be distinguished from other nuts and bolts.

## 9.4 Electrical Supply

The following points should be noted where the crane is electrically operated from a source external to the crane.

- a) Electrically operated cranes should have an effective earth connection. In the case of cranes mounted on rails, at least one rail track should be electrically bonded at each rail joint and the track should be effectively earthed. Crane wheels should not be used for earthing the crane.
- b) The crane structure, motor frames and conducting cases of all electrical equipment, including metal conduit and cable guards, should be effectively and directly connected to earth.
- c) The characteristics of the power supply and of the crane equipment should be checked for compatibility before connection.
- d) Cables providing power to the crane should be enclosed, positioned or constructed to protect them from mechanical damage:
  - a. by running in conduit, or on trays; or
  - b. by being clipped to a structure in a position. where they are protected from mechanical damage; or

- c. by being of armoured construction.  
Where the method of protection is of conducting material, it should be bonded to earth at each end. In no case should the protection be used as an earth conductor.
- e) Where practicable, the power supply to a travelling crane should be through a cable winding drum or a properly installed, insulated and protected collector system.
- f) Care should be taken to ensure that any trailing cable is not damaged during operational movement or when the crane is travelling. The travel distance should be well within the length of the trailing cable.
- g) In addition to any isolator within the crane capable of cutting off the electrical supply to the crane motions, there should be an identified isolation remote from the crane which can be used to cut off the electrical supply to the crane itself.  
All isolators should be capable of being locked in the 'off' position and should be identifiable with the crane power supplies they control.

## **10. PROCEDURES AND PRECAUTIONS**

### **10.1 Crane Operation**

Whenever a crane is moved anti whether it is lifting a load or not it should only be driven by a competent driver (see 6.1) nominated by the appointed person.

This should not inhibit the appointed person from nominating a trainee driver provided that such a driver is under the direct supervision of a competent driver who has also been nominated for that purpose by the appointed person.

### **10.2 Periodic Checks**

#### **10.2.1 General**

The appointed person should ensure that the routine checks given in 10.2.2 and 10.2.3 are carried out.

**NOTE - The crane driver may be authorized to carry out periodic checks to the extent that he is considered to be competent.**

#### **10.2.2 Daily**

At the beginning of each shift or working day, the following routine checks, as appropriate for the type of crane concerned should be carried out:

- a) Checks as required by the manufacturers handbook.
- b) Checks that all ropes are correctly positioned on their sheaves and have not been displaced.
- c) Ensure, by visual inspection, that no electrical equipment is exposed to contamination by oil, grease, water or dirt.
- d) Confirm the operation of all limit switches or cut outs and the dead man's handle or lever, using caution in making checks in case of mal-operation.
- e) Check proper functioning of all brakes.
- f) Check that the automatic safe load indicator is correctly set for the condition of the crane.
- g) Check that the load-radius scale is appropriate to the jib combination fitted if this equipment is separate from item (e).
- h) By varying the hook radius without load, check the correct movement of 10.2.2 (f) and 10.2.2 (g).
- i) Check lubricating oil level(s), hydraulic oil level(s) and engine coolant level(s).
- j) Check that there has been no excessive loss of air pressure since the machine was last used.
- k) Check build-up time of air pressure for efficiency of system (s).

- l) Check that lights, windscreen wiper(s) and washers conform with the requirements of the Road Traffic Act.
- m) Check visually the condition of tyres on wheel mounted cranes.
- n) Check correct function of all crane controls without load.
- o) Check satisfactory operation of audible warning device.
- p) Check satisfactory operation of back horn.
- q) In the interests of safety and fire prevention, ensure that the crane is in a tidy condition and free from tins of oil, rags, tools, or materials other than those for which storage provision is made.

### 10.2.3 Weekly

Once a week, in addition to the checks in 10.2.3 the following additional checks as appropriate for the type of crane concerned should be carried out:

- a) Check the automatic safe load indicator in, accordance with the operating instructions.
- b) Visually inspect the hoist rope(s), trolley travel rope (tower cranes), derricking rope(s) and static suspension ropes for broken wires, flattening, bird caging or other signs of damage, excessive wear and surface corrosion (see 14).
- c) Check all rope terminations, swivels, pins and retaining devices. Also check all &eaves for damage, worn bushes or seizure (see 14).
- d) Inspect the structure for damage, for example missing and bent bracings on bridges and strut jibs, bulges, indentations and unusual rubbing marks on telescopic jibs, cracked welds, etc.
- e) Check hook(s), safety latch(es) and swivel(s) for damage, free movement OK wear. Check the hook shank thread and securing nut for wear or corrosion.
- f) Check operation and adjustment of controllers.
- g) Check brake and clutch friction linings and drum paths for visible wear and reset, if necessary.
- h) Check for creep of hydraulic rams in case of hydraulic machines.
- i) On wheel mounted mobile cranes, check tyres for pressure as well as damage and wear on walls and tread. Also check wheel nuts for tightness.
- j) On rail mounted cranes, check rails, end stops and also ties where these are fitted. Check existence and condition of guards to remove
- k) foreign material from rails.
- l) Check slew lock, if fitted.
- m) On rubber tyred cranes check, steering, brakes troth foot and parking, lights, indicators, born, windscreen wipers and washers.
- n) Generally, inspect the crane to ensure that it is safe for use.
- o) Enter results of checks in the records of inspections.

### 10.2.4 Crane Out of Use for a Considerable Period

If a crane is not to be used for a period exceeding three or four weeks, precautions may have to be taken to prevent deterioration or damage. In cases where a crane has been out of use for more than three or four weeks, it may he necessary to carry out a programme of checks in addition to those specified in 10.2.2 and 10.2.3.

The extent and thoroughness of this programme will depend not only on the length of the period of out-of-use, but also on the location of the crane during this period. A crane standing under cover, or inside a workshop, may require very little in addition to the checks detailed in 10.2.2 and 10.2.3, but a crane which has been out-of-use in the open, exposed to the action of weather and atmospheric pollution, etc, will require an extensive appraisal to ensure its fitness for work.

In general terms the following points should be covered as a minimum:

- a) All crane ropes should be examined for signs of corrosion and damage and thoroughly lubricated.
- b) All control linkages should be examined for evidence of seizure or partial seizure and correct lubrication undertaken.
- c) Every crane motion should be tested for several minutes without load, each motion individually at first then by combination of two or more motions simultaneously as appropriate.
- d) The test of all crane motions should be repeated under load.
- e) The correct functioning of all the crane safety limits should be checked, in particular the automatic safe load indicator should be tested
- f) by lifting a known weight.

The result of all the tests in the programme should be documented in the crane records (see 7.10.4) along with details of any corrective action taken to overcome any defects prior to the crane being returned to service.

### **10.3 Reporting of Defects and Incidents**

The appointed person should ensure that there is an effective procedure for reporting defects and incidents. This procedure should include notification to the appointed person, the recording of action taken to rectify any defects and clearance of the crane for further service.

This procedure shall include the immediate notification of:

- a) any defects found during daily or weekly periodic checks;
- b) defects found at any other time;
- c) incidents or accidents however slight;
- d) shock loads in whatever manner they occur; and
- e) dangerous occurrences or accidents (see 13).

The procedure should include provision for an examination by a competent person after any incident, whether a repair is necessary or not, to ensure that the crane is fit for further service.

### **10.4 Leaving the Crane Unattended**

In no case should a crane be left unattended even for short periods, unless all loads have been removed from the hook which should be left in a safe position, the power supplies to all motions switched off or the engine stopped, and appropriate motion brakes and locks applied to put the machine in a safe condition. The ignition key and any other keys should be removed from the crane whenever the driver is absent from the machine.

For longer periods and for out-of-service conditions, isolation should be more permanent, that is, switches locked off, fuel supplies cut off and any doors giving access to machinery or control cabs locked to prevent unauthorized access. machinery should be left in the out-of-service condition as described in the operating instructions.


For details of methods to safeguard particular types of cranes, reference should be made to the appropriate section of this Code.

## 11. OPERATING CONDITIONS

### 11.1 Safe Working Load

The safe working load of the crane should not be exceeded other than for the express purpose of a test of the crane under the supervision of a competent person. The safe working load of any item used to attach the load to the crane should not be exceeded other than for the express purpose of a test of the item under the supervision of a competent person. Care should be taken to prevent pendulum swinging of the load, by careful control of the operating motions to match the swing of the load and to keep it under control at all times.

Safe working loads apply only to freely suspended loads. The crane hoisting, slewing, traversing, luffing or travelling motions of a crane should not be used to drag any load along the ground with the hoist rope out of the vertical position. Before lifting a load, the hoist line should be plumb (See Fig. 4). Failure to observe these points may hazard the stability of the crane or introduce loadings (stresses) into the crane for which it has not been designed, and, even with an automatic safe load indicator fitted, a structural failure may result without any warning being given.

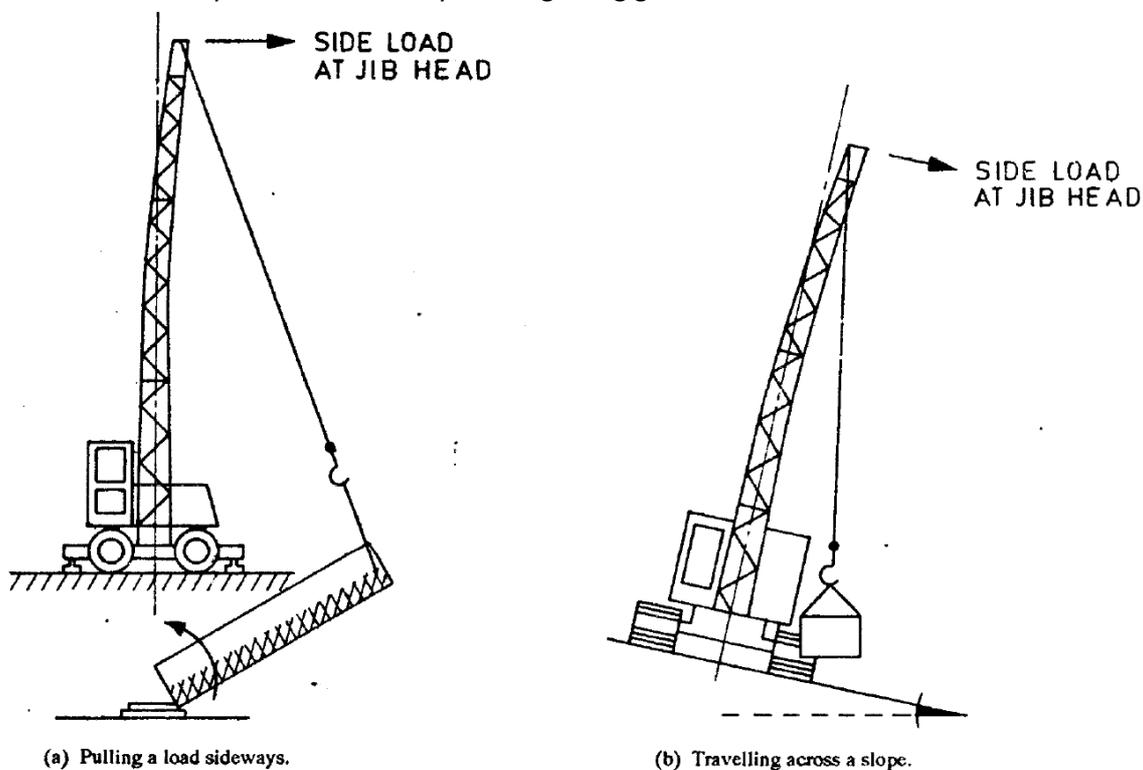

AVOID SIDE LOADING THE JIB

Fig. 4 Side Loading on Jib

Figures show typical operational conditions imposing a side loading on the jib of a crane. Jibs are not designed for high side loads in crane service. Do not pull or drag loads sideways using the wing motion or hoist line. The hoist line should always be in the plane of the jib and hanging plumb.

### 11.2 Mode of Operation and Control

#### 11.2.1 Identification of Controls and, Direction of Movement

To ensure safe use of the crane, each control should be marked to identify the motion controlled and the direction of movement.

On no account should the driver tamper with any controls, mechanisms or equipment either to enable the crane to function outside the operational range or loads specified by the crane manufacturer or other competent person, or to attempt to correct any suspected defect.

Before starting any lifting operation with a crane, the following should be observed:

- a) The driver should be familiar with the controls and their layout.
- b) The driver should have a clear and unrestricted view of the load and operational area. If not, the driver should act under the directions of the slinger or an authorized signaller who is positioned to have a clear and uninterrupted view; in some circumstances this may be a legal requirement. It is particularly important that the driver should ensure that lifts can be carried out without causing damage. The driver should therefore ensure that loads and crane hoist-ropes are well clear of obstructions.
- c) Where telephone, radio or closed-circuit television communications are being used, the driver should ensure that the calling signal is functioning satisfactorily and that verbal messages can be clearly heard.
- d) Where air or hydraulic systems are used the driver should ensure that the gauges are functioning.
- e) Where air or hydraulic systems are used the driver should ensure that the system(s) is/are at the correct operating pressure(s).

The hoist rope, or if applicable, the hoist chain should be vertical at the commencement of, and throughout, the hoisting operation. The load should initially be lifted just clear of the supporting surface and be brought to rest while the slings, balance of the load etc, are checked, before proceeding. Proper care should be exercised by the driver at all times to avoid shock or side loading on the jib or structure. Care should also be taken to avoid the hook coming into contact with the structure.

If it is necessary during normal operations to hold a load suspended for any period of time, the driver should remain at the controls so that the crane is fully operational to meet any emergency.

It is undesirable, where motion motors are to be reversed, to put the controller over the reverse position before the motor has come to rest unless the control gear is specifically designed to allow this to be done. It is undesirable, for safety reasons, to subject the crane motion safety devices to continual operation. Care should therefore be taken when approaching the motion limits to avoid their frequent operation.

In areas which are not adequately illuminated, all travelling cranes which move close to where personnel have to pass or work should be distinguished at the leading end of the crane by a suitable warning lamp.

Before any crane is moved along its track, a warning should be given by the person in charge of the lifting operation to all personnel whose safety is likely to be endangered. A warning bell or gong may be fitted for this purpose.

### 11.2.2 Radio-Controlled Cranes

To prevent unauthorized use, the driver of a radio-controlled crane should:

- a) retain the transmitter in his physical possession;
- b) remove the key from its keylock switch and, for short periods, retain the key in his possession; and for longer periods, or when the crane is not in use, deposit the transmitter in safe storage.

**NOTE - Provision should be made for the security of the transmitter when the crane is out in use.**

When the radio transmitter is fitted with a belt or harness, the driver should be wearing the harness before switching on the transmitter so that accidental operation of the crane is prevented.

The transmitter should only be switched on when operating the crane and should be switched off before removing the harness.

The controlled range feature, where provided on a radio controlled crane, should be tested at suitable intervals and it is necessary that at the beginning of each shift, or where there is a change in driver, the controlled range should be checked to ensure that it is in accordance with the limits specified for its operation.

### 11.3 Handling of Loads nNear Persons

When loads have to be handled in the vicinity of persons, extreme care should be exercised and adequate clearances allowed. Drivers and signallers should pay particular attention to possible dangers of persons working out of sight.

All persons should stand clear of the load being lifted. When lifting from a heap, all persons should stand away from the heap in case other adjacent material or objects are displaced.

Lifting of loads over highways, railways, rivers or other places to which the public have access should be avoided. If this is not possible, permission should be obtained from the appropriate authority and the area kept clear of traffic and persons.

### 11.4 Multiple Lifting

#### 11.4.1 General

Lifting a load with two or more cranes requires greater attention to planning and supervision because the effects of the relative motion between the cranes may induce additional loadings on the cranes, the load and the lifting gear in use.

Because of this and the difficulty in monitoring these additional loads, multiple lifting should only be used when the physical dimensions, characteristics, weight or required movement of the load prevent the operation being carried out by a single crane.

Multiple lifting should be planned with extreme care (see 4) and should include an accurate assessment of the portion of the load to be carried by each crane. It is essential that the reason for and the extent to which the hoist rope(s) may come out of plumb should be evaluated. Additional forces may overload the cranes causing them to overturn or fail either immediately or in the longer term. The cranes should not be subjected to forces in excess of those which would occur were they handling their safe working loads as single lifts.

#### 11.4.2 Factors to be Considered in Planning the Multiple Lifting Operation

If all the factors governing the distribution of the load between the cranes can be accurately determined it should be possible to use each crane up to its safe working load. In practice it may be difficult to evaluate all the factors accurately and their effect on the distribution of load between the cranes so it may be necessary to make a reduction in the load that each crane is permitted to take.

The principle factors to be considered are as follows:

- a) **Weight of the load** - The total weight and its distribution should be either known or calculated. Where the information is taken from a drawing, due allowances should be made for casting and rolling margins and manufacturing tolerances.
- b) **Position of the centre of gravity** - Owing to the variable effect of manufacturing tolerances and rolling margins, quantity of weld metal, etc, the position of the centre of gravity may not be known accurately and the proportion of the load being carried by each crane may therefore be uncertain.
- c) **Weight of the lifting gear** - The weight of the lifting gear should be part of the calculated load on the cranes. When handling heavy or awkwardly shaped loads, the deduction from the safe

working load(s) of the cranes to allow for the weight of the lifting gear may well be significant. The weight of the lifting gear and its distribution should therefore be accurately known.

- d) In cases where the crane ropes are reeved round pulleys that are part of a specially designed piece of lifting gear, for example a lifting beam, it is acceptable to take the weight of the removed hook block and hook into consideration when determining the net weight of the lifting gear.
- e) **Capacity of the lifting gear** -The distribution within the lifting gear of the forces which will arise during the lifting operation should be established. The lifting gear used should, unless specially designed for the particular lifting operation, have a capacity margin in excess of that needed for its proportioned load. Special lifting gear may be necessary to suit the maximum variation in distribution and direction of application of loads or forces which can occur during multiple lifting.
- f) **Synchronization of crane motions** - If the variation in the direction and magnitude of the forces acting on the crane during the multiple lift are to be kept to a minimum, it is essential that the crane motions are synchronous in their effect. Thus, whenever possible, cranes of equal capacity and similar characteristics should be used. In practice there will always be some variation due to differences in response to the activation of the motion controller and the setting and efficiency of the braking system.

The safe working load of a crane is based on the premise that the load will be raised and lowered in a vertical plane. The crane structure will have been designed to withstand any lateral loads imposed by accelerations in the various crane motions, but it is unsafe to rely on this lateral strength to withstand horizontal components of out-of-plumb lifts. Since it is unlikely, particularly if the cranes have dissimilar characteristics, that the motions of the two cranes will be accurately synchronized, an assessment should be made of the effect of variation in plumb of the hoist ropes, which may arise from inequalities of speed, together with a determination of the means for keeping such inequalities to a minimum. Instruments are available to monitor the angle of inclination and load in each hoist rope constantly throughout the lifting operation. The use of such instruments and the restriction of the motion speeds together with the strict use of one motion at any one time can assist in the control of the loads on the cranes within the planned values.

### **11.4.3 Recommended Safe Working Load During Multiple Lifting**

If the person planning the multiple lift is satisfied that all the factors identified in 11.4.2 (a) to 11.4.2 (e) have been accurately identified or are being monitored, the cranes may be used up to their safe working loads.

If the person planning the lift cannot accurately evaluate all the factors, then an appropriate down rating should be applied to all the cranes involved. The down rating may be 10 percent of the crane's safe working load but where stability of the crane(s) is likely to be affected the down rating may have to be 25 percent or more.

## **11.5 Weather Conditions**

### **11.5.1 General**

For cranes operating in situations where they are likely to be affected by the weather careful attention should be given to this aspect. Certain weather conditions such as strong wind, heavy rain, ice or snow can impose loads on a crane and adversely affect the safety or crane operations.

**11.5.2** The crane should not be operated in wind speeds that are in excess of those specified in the operating instructions for the crane. Gusting wind conditions may have an additional adverse effect

on the safe handling of the load and the safety of a crane. Even in relatively light wind conditions, extra care should be taken when handling loads presenting large wind catching areas.

The limitations on wind speed for erection, testing and dismantling the crane may be lower than the limitation for normal operation and in cases of doubt the designers' or another competent engineer's advice should be obtained. The testing of a crane should not be carried out in an area which is known to be subject to freak weather conditions.

Instructions issued by the crane manufacturer advising of the conditions under which a crane should be taken out of service and recommending the conditions in which it should be secured, should be strictly followed.

### **11.5.3 Wind Speed Indication**

In the case of high cranes, an anemometer should be mounted at a suitable high point of the crane structure or at a similar height and exposed position on the site.

### **11.5.4 Visibility**

In poor visibility, suitable means of communication should be provided to ensure the safe operation of the crane. In extreme conditions crane operations should be stopped until there is sufficient improvement in visibility to enable operations to be safely resumed.

### **11.5.5 Rain, Snow or Ice**

During adverse weather conditions, the appointed person should ensure that adequate precautions are taken to avoid danger when the crane or the load are affected by rain, snow or ice.

## **12. TESTING AND EXAMINATION**

### **12.1 General**

#### **12.1.1 Testing and Examination**

Various tests and a thorough examination by a competent person are required to ensure that a crane is safe for use. Item 13 gives the legal requirements for the testing and thorough examination of cranes. Additional tests and thorough examinations are usually necessary following any substantial alteration or repair to the crane. Any lifting gear to be used with the crane in normal duties or for the purpose of testing the crane, should already have been tested separately from the crane.

#### **12.1.2 Test Certificates and Documentation**

Cranes are used under a wide variety of conditions but the following minimum requirements generally apply:

- a) A crane should not be used unless it has the appropriate current test certificates. Tests will be required following substantial repairs or alteration, and/or periodically as prescribed by legislation.
- b) Periodic examination and inspections, systematic maintenance, repairs, renewals and any necessary heat treatment (as applicable) should be carried out and recorded.
- c) The safe working load should be clearly marked on the crane or the charts affixed to it.
- d) Any lifting attachments should be clearly marked with their safe working loads.
- e) A copy of the operating instructions should be with the crane.
- f) All test certificates and records related to the above should be available for inspection. (see 7.10.4)

### 12.1.3 Thorough Examination

A thorough examination should be understood to mean the following:

- a) A detailed examination sufficient to ensure that the crane is safe for use.
- b) Whenever considered necessary by the competent person, visual examination can be supplemented by methods of non-destructive testing that determine the condition of any part of the crane without causing any detrimental change to the material;
- c) Where considered necessary, parts of the crane should be dismantled by a skilled person to the extent -required by the competent person.
- d) The examination should be carried out with the crane in operation and at rest.

### 12.1.4 Test Site

Careful consideration should be given to the conditions of the site where the tests are to be conducted. It should be remembered that the recommendations provided in the operating instructions for the crane relate to operations within the safe working load and that more stringent requirements apply when loads are being applied for the purpose of testing.

The following general requirements apply to all types of cranes. Further guidance is given in other parts of this standard covering specific crane types:

- a) The ground should be well consolidated and capable of withstanding the loads that will be applied to it. Care should be taken to ensure that there are no hidden dangers such as cable ducts, drains, pipes, back-filled areas, cellars or other subterranean weaknesses.
- b) The ground should be level to within the limits appropriate for testing the particular crane.
- c) The site should be of sufficient area and have unrestricted overhead clearance to allow the unobstructed movement of the crane and load throughout all its appropriate test movements, for example, slewing, derricking travelling etc.
- d) A test is designed to prove a crane and it must be borne in mind that the crane might for some hidden reason not withstand the loading. It is therefore necessary to ensure that all personnel not essential to the test are kept away from the area. Test personnel should be so positioned that they are unlikely to be injured should there be any mishap. It is recommended that the test area be roped off and notices posted prohibiting unauthorized entry. The test site should be well clear of places where the public has access such as roads, railways etc. For similar reasons the site should be clear of plant and property which, as well as inhibiting the test, could also be damaged.

### 12.1.5 Weather Conditions

Apart from the obvious danger to personnel it should be recognized that weather conditions such as wind, ice and snow can impose loads on the crane. For this reason test sites should preferably not be in areas which are known to be subject to freak weather conditions. The limitations on wind speed for testing of the crane may be lower **than** the limitation for normal operation and in cases of doubt, the designer's or another competent engineer's advice should be sought.

The competent person in charge of the test should ensure that adequate precautions are taken when the wind speed exceeds the limit or the crane or load are heavily coated with ice or snow.

Tests should never be undertaken when the crane or load cannot be clearly seen because of a limitation on visibility caused by rain, snow, mist or fog, etc.

## 12.2 Test Requirements for the Crane

### 12.2.1. Conduct of the Test

The tests should be carried out under the control of the competent person appointed for this purpose who should clearly indicate when the tests start and when they have been completed. The driver, signaller and/or slinger should for the duration of the tests accept instructions only from the competent person.

Immediately prior to the tests, the competent person should ensure, by thorough examination (see 12.2.2) that the condition of the crane is satisfactory for the tests and that the site and weather conditions are suitable (see 12.1.4 and 12.1.5).

During the tests the load should be kept close to the ground. Shock loading which may be caused by rapid acceleration of crane motions, sudden braking, erratic or sudden steering movements or movement of the crane controls should be avoided. At all times care should be exercised to avoid danger to personnel and damage to plant and surrounding property.

Precaution - Where safety devices have been over-ridden or disconnected their correct functioning should be restored and checked.

### 12.2.2 Overload Testing

The testing of the crane requires the application of loads in excess of the safe working load. Prior to the application of overloads, it should be established by reference to an authority on the design and construction of the crane, for example the manufacturer, that the design of the crane will permit the imposition of the overloads at the appropriate positions at which they will be applied. This is necessary because the overloads may be limited by the structural strength and not the stability of the crane. Under such circumstances, the structure might buckle or collapse without warning before the crane gives any sign of tipping.

Before commencing the overload test, the crane should be thoroughly examined by a competent person for any significant defects or limiting condition of the crane, for example, insufficient falls of rope for the load under consideration, which require to be rectified before application of the overload. The crane should be operated through the motions for which it is designed to carry load. These motions will include:

- a. hoisting and lowering;
- b. derricking in and derricking out;
- c. slewing in both directions through the maximum angle for which load carrying is permitted;
- d. telescoping through the permitted range of movement; and
- e. travelling and traversing in both directions.

**NOTE - Precautions should be taken to limit swinging of the load. The crane should show itself capable of sustaining full control of the load throughout these tests. There should be an adequate supply of known weights with means of handling them.**

### 12.2.3 Testing of Automatic Safe Load Indicator

Automatic safe load indicators should be tested at the time of testing the crane and in some circumstances it should be noted that this is a statutory requirement.

The Construction (Lifting Operations) Regulations 1961 require automatic safe load indicators to be of a type approved by the Health and Safety Executive and for them to be inspected once a week.

NOTE - It should be noted that the test button provided on certain indicators only confirms that the electrical circuit and power supply are satisfactory. Such test buttons cannot confirm the correct functioning of the indicator mechanism which can only be effectively checked by lifting a known load at the appropriate radius.

### 12.3 Thorough Examination After Test

A thorough examination (see 12.1.3) should be carried out by a competent person to ensure that the crane has satisfactorily withstood the test loadings without signs of structural damage that will effect the safety of the crane, such as:

- a) cracking;
- b) permanent deformation,
- c) paint flaking, and
- d) loosening of or damage to structural connections.

The examination should confirm that all mechanisms function correctly and are free from defect.

### 12.4 Certification

After any test or examination, the results should, be recorded. Where a machine is used temporarily under a different set of regulations then the certificates issued for the prime use of the machine should be considered as acceptable.

Where, for any reason, the competent person considers it necessary to restrict the use of a machine (for example site limitations prevent the testing of the full range of duties of the machine) then the restrictions should be noted on the certificate and the use of the crane should be subject to these restrictions. The markings/tables of safe working loads on the machine should be amended to reflect these restrictions.

## 13. LEGAL REQUIREMENTS

### 13.1 General

Employers and the self-employed shall ensure, so far as is reasonably practicable, the health and safety at work of all their employees and that undertaking are conducted in such a way as to ensure, so far as is reasonably practicable, that persons not in their employment who may be affected are not thereby exposed to risks to their health and safety.

This duty not only includes the provision and maintenance of plant which is, so far as is reasonably practicable, safe and without risks to health but also the provision and maintenance of systems of work, information, instruction, training and supervision as are necessary to ensure, so far as is reasonably practicable, the health and safety at work of employees.

Employees have a duty to take reasonable care for the health and safety of themselves and of other persons who may be affected by their acts or omissions at work. They also have the duty to co-operate with their employers so far as is necessary, to enable the employers to comply with their legal duties.

### Note: Section 29 of The Factories Act, 1948:

#### [Lifting machines, chains, ropes and lifting tackles:

- (1) In any factory the following provisions shall be complied with in respect of every lifting machine (other than a hoist and lift) and every chain, rope and lifting tackle for the purpose of raising or lowering persons, goods or materials:—
  - (a) all parts, including the working gear, whether fixed or movable, of every lifting machine and every chain, rope or lifting tackle shall be—
    - (i) of good construction, sound material and adequate strength and free from defects;
    - (ii) properly maintained; and
    - (iii) thoroughly examined by a competent person at least once in every period of twelve months, or at such intervals as the Chief Inspector may specify in writing; and a register shall be kept containing the prescribed particulars of every such examination;

- (b) no lifting machine and no chain, rope or lifting tackle shall, except for the purpose of test be loaded beyond the safe working load which shall be plainly marked thereon together with an identification mark and duly entered in the prescribed register; and where this is not practicable, a table showing the safe working loads of every kind and size of lifting machine or chain, rope or lifting tackle in use shall be displayed in prominent positions on the premises;
  - (c) while any person is employed or working on or near the wheel track of a travelling crane in any place where he would be liable to be struck by the crane, effective measures shall be taken to ensure that the crane does not approach within six metres of that place.
- (2) The State Government may make rules in respect of any lifting machine or any chain, rope or lifting tackle used in factories—
- (a) prescribing further requirements to be complied with in addition to those set out in this section;
  - (b) providing for exemption from compliance with all or any of the requirements of this section, where in its opinion, such compliance is unnecessary or impracticable.
- (3) For the purposes of this section a lifting machine or a chain, rope or lifting tackle shall be deemed to have been thoroughly examined if a visual examination supplemented, if necessary, by other means and by the dismantling of parts of the gear, has been carried out as carefully as the conditions permit in order to arrive at a reliable conclusion as to the safety of the parts examined.
- Explanation—In this section—
- (a) “lifting machine” means a crane, crab, winch, pulley block, gin wheel, transporter or runway;
  - 2[(b) “lifting tackle” means any chain sling, rope sling, hook, shackle, swivel, coupling, socket, clamp, tray or similar appliance, whether fixed or movable, used in connection with the raising or lowering of persons, or loads by use of lifting machines.]

## **14. ROPES**

### **14.1 Rope Replacement**

Only ropes of the correct size, type, strength and construction as specified in the crane manufacturers’ handbook should be fitted to the crane unless an alternative rope has the prior approval of the crane designer, rope manufacturer or other competent engineer.

### **14.2 Rope Length**

The length of the rope used should be sufficient for the particular application for which the crane is to be used but in no circumstances should it be such that in the extreme positions:

- a) there is less than two turns of rope left on the drum, and
- b) the drum flanges project less than two rope diameters or 50 mm whichever is less, beyond the outer layer of the rope in all circumstances

### **14.3 Handling, Storage and Installation**

#### **14.3.1 Offloading**

To avoid physical damage, ropes should be offloaded with care. The reels or coils should not be dropped. A steel bar should be placed through the centre hole of the reel and lifted by means of a suitable sling. Coils of wire rope should not be lifted by their securing bands, unless it is known that the bands are especially designed for this purpose.

#### **14.3.2 Storage**

Ropes should be stored in a cool, dry building and should not be in contact with the floor. Ropes should never be stored where they are liable to be affected by chemical fumes, steam or other corrosive agents. Ropes in store should be examined periodically and a rope dressing applied, if necessary.


Ropes that have been removed from a machine for future use should be thoroughly cleaned and a dressing applied before being stored. Ropes having a length in excess of 30 m should be stored on a drum.

### 14.3.3 Uncoiling and Handling

#### 14.3.3.1 General

To prevent the possibility of kinking or disturbance of the lay, ropes should be paid out without slack and in a straight line. Coils of rope should preferably be paid out from a turntable. Alternatively, where the coil is short, one end can be made free and the remainder rolled along the ground. For ease of handling the inside end should first be secured to an adjacent turn. A rope should never be unwound by throwing off turns with the coil or reel flat on the ground (See Fig. 5). The rope should be kept as clean as possible during this operation.

Before any rope is cut it should be tightly served or secured on either side of the intended cut. Fig. 6 shows a common method.

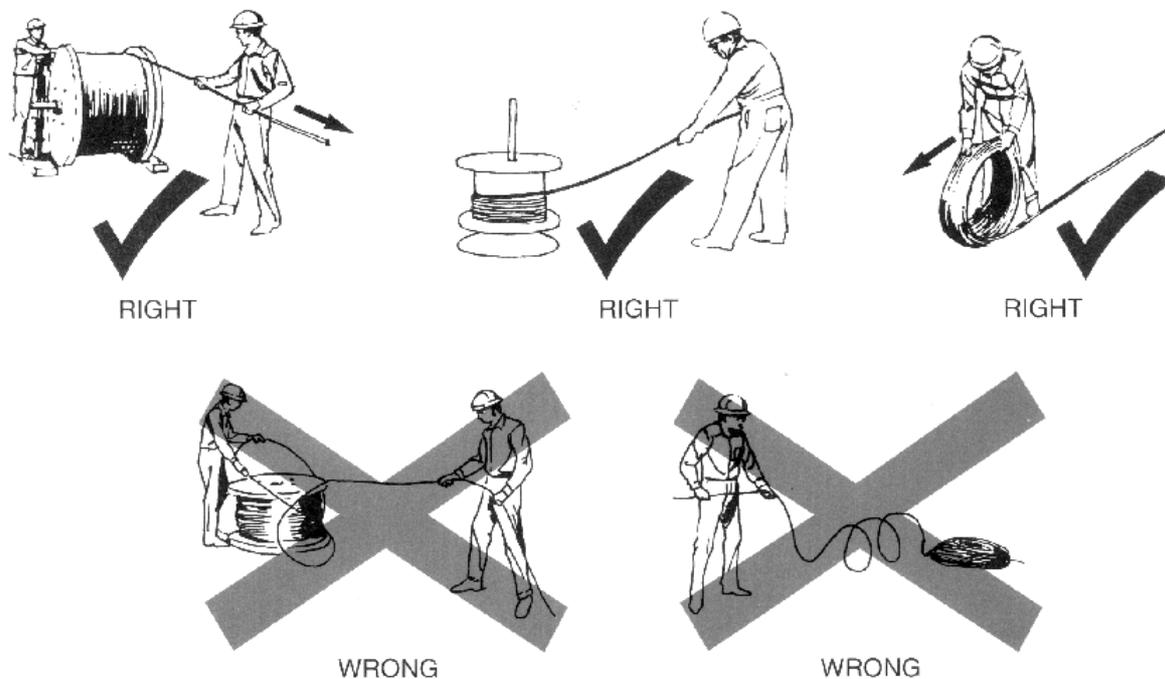

**Fig. 5 Correct Method of Paying Out Rope**


#### 14.3.3.2 Multi-strand rope

Great care should be taken with multi-strand ropes to ensure that they are installed without imparting any rotation to the rope. A free end will, have no pronounced tendency to rotate but caution should be exercised to ensure that the lay of the rope is not disturbed, either by turns in or turns out. If the strands are disturbed, malformation of the rope may develop during subsequent use.


#### 14.3.4 Installation

The lay of the rope should not be disturbed during installation, that is, turn should not be put in nor taken out of the rope. Ordinary lay ropes are usually stable but special care should be taken with

Lang's lay and multi-strand ropes. When winding a rope from a reel to a drum, it should be bent in the same direction. Re-reel from the top of the reel to the top of the drum. A tensioning load should also be applied to the rope to achieve good coiling. A simple brake such as a plank rigged to bear against the reel flanges, may provide ample rope tension. The reel and the drum should be spaced well apart to facilitate even coiling (see Fig. 7).

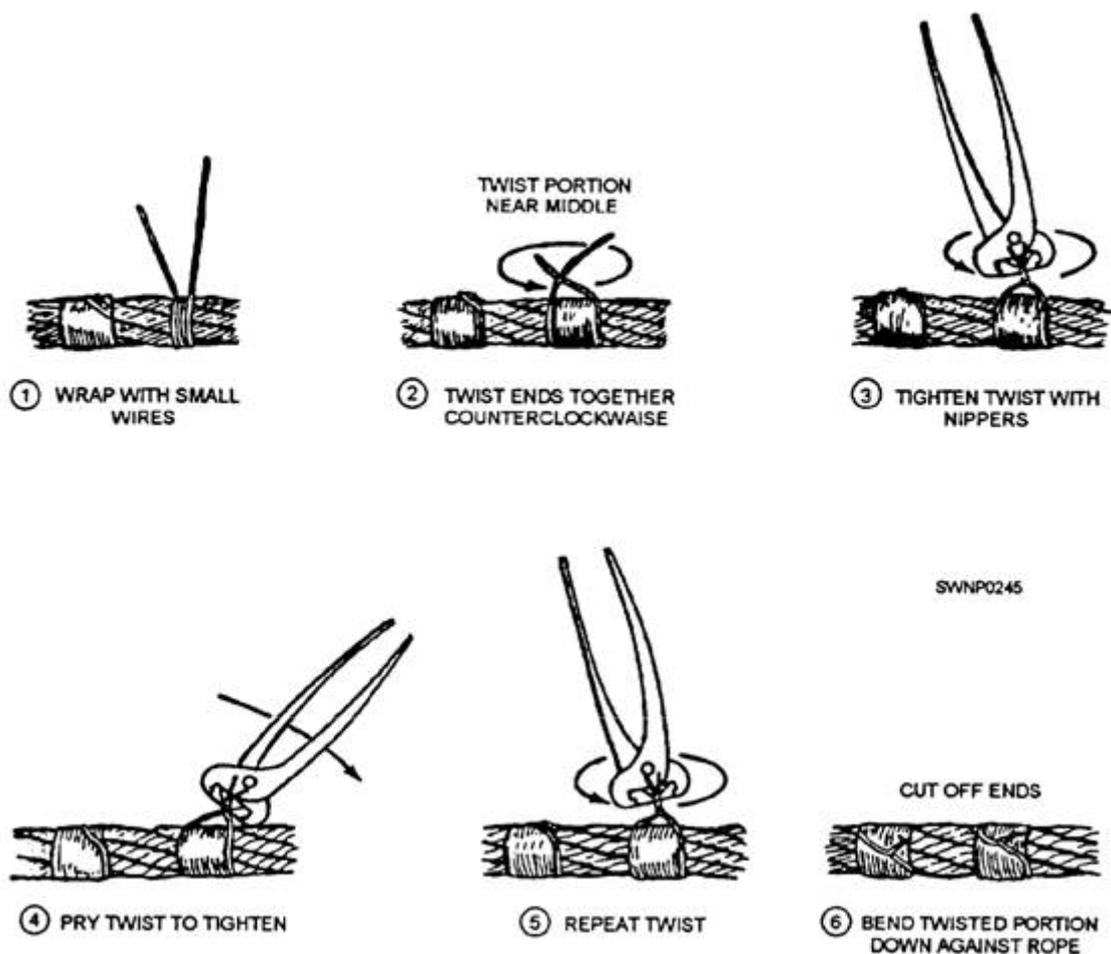

**Fig. 6 Seizing of Ropes (Before Cutting)**

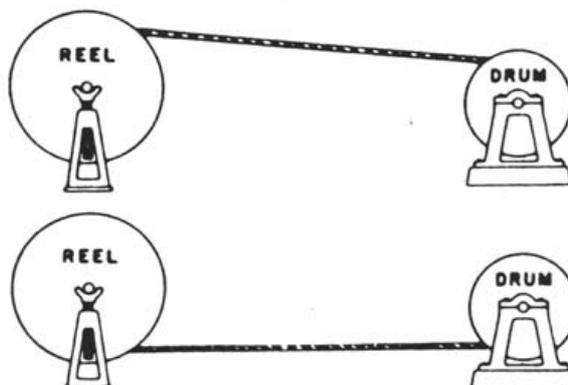

Always reel from top to top or bottom to bottom

### **Fig. 7 Transferring Rope from Reel to Drum**

#### **14.3.5 Running-in**

After fitting a new running rope, it is advisable to run through its operating cycle for a number of operations at reduced speeds and loads to permit the new rope to adjust to the working conditions. This is particularly important for multi-strand ropes.

All new ropes when first installed will stretch due to the wires and strands bedding in. This will normally be accommodated by the installation. If not it may be necessary to cut and re-terminate.

#### **14.4 Rollers and Guide Sheaves**

Rollers or guide sheaves are sometimes fitted on the jib of the crane to ensure that the rope does not rub against the jib structure. A seized roller, or sheave will cause serious damage to a rope, leading to its premature failure and they should therefore be checked at regular intervals [see 10.2.3 (c)] to ensure that they are free to rotate.

#### **14.5 Rope Drums and Sheaves**

Where alternative drums and/or lagging can be fitted, it should always be ensured that the drum or lagging is compatible with the size of rope and the duty requirements.

Sheaves are usually manufactured from ferrous materials, but the use of plastics sheaves and sheaves with plastic inserts is increasing. For many uses, plastics sheaves and inserts give an increase in rope life, but there may be a change in the failure mode of the rope. Special attention should be given to the examination of ropes used, with plastics sheaves and inserts (see 14.8.2.3).

#### **14.6 Rope Terminations**

##### **14.6.1 General**

Only rope termination as specified by the crane and/or rope manufacturer should be used to attach a rope to a drum, hook block or the structure of the crane. Care should be taken to ensure that anchorage points are securely fastened.

Terminations should be examined for mechanical damage, for example elongation of the holes of clevis type fittings? for the presence of broken wires (see 14.8.2) and for evidence of the rope pulling through the termination. Consideration should be given to the possibility of internal corrosion: discard after a period specified by the rope/crane manufacturer may be the only solution to this problem.

Rope terminations can be of permanent or non-permanent type and special attention should be given to the assembly and use of the latter which normally take the form of a wedge and socket that can be fitted to the rope at site. Guidance is given in 14.6.2 to the procedures that are necessary to ensure that this type of fitting is safely assembled.

Wire rope grips (U-bolts) as the sole means of terminating a rope can be dangerous and they should not therefore be used for this purpose.

##### **14.6.2 Wedge and Socket Terminations for Ropes**

###### **14.6.2.1 Assembly**

The following points should be noted when assembling wedge and socket terminations:

- a) It is essential that only wedge and socket assemblies of the correct dimensions and strength for the particular rope are used. Failure to do so may result in the rope pulling through the fitting.
- b) Wedges and sockets for a particular size of rope should be matched to each other and should not therefore be obtained from different manufacturers. The fit of the wedge (with rope) in the socket should always be checked at the time of assembly. An

oversize wedge, or a wedge of incorrect taper, will not enter the socket sufficiently to give a secure termination; too small a wedge will protrude too far through the socket and the high localised loading may cause the socket to crack and open out, allowing the wedge to pull through.

- c) The rope should be fitted so that the live or loaded part of the rope is not kinked where it leaves the socket, but pulls directly in line with the point of attachment of the socket. Incorrect fitting will result in premature failure of the rope.
- d) When the termination is made up, the tail-end length of rope left protruding from the socket should be long enough for the securing method used [see 14.6.2.(h)].
- e) Multi-strand ropes tend to show distortion when they are bent around small radii and may require temporary serving, for example with electricians' tape during the fitting of the socket. The serving should be subsequently removed as far as possible to allow for rope inspection.
- f) After a wedge and socket termination has been made or remade, it is essential that the wedge and rope are properly seated in the socket before the equipment is put into service. Failure to do so may allow the rope to pull through the fitting or particularly when the rope is new, the wedge to be sprung out of the socket.
- g) Initially the wedge should be hammered home using a wooden packer to protect the fitting and rope against **damage** and simultaneously a second person should pull on the ends of the rope. A substantial load should then be raised and left suspended (but not unattended) to seat the wedge and rope firmly into the socket before the assembly is put into service.
- h) There are two ways of securing the dead-end lengths of rope protruding from the socket depending on the circumstances of use:
  - i. The tail-end may be looped back on, itself and secured by a wire rope grip or clamp to form a loop. The loop should be lashed to the live part of the rope by suitable means, such as soft binding wire, to prevent flexing of the rope in service. If this method is used, the tail-end length of the rope should be about 15 times the diameter of the rope for example 195 mm tail-end length for a 13 mm diameter rope. The clamp or wire rope grip should not be allowed to encroach on the fused end of the rope.
  - ii. Where there is a possibility of the loop interfering with an obstruction, such as the working structure, which might cause the wedge to loosen and the rope to pull free, the tail-end length of the rope should not be looped back but should be fitted with a simple clamp or wire rope grip and laid parallel to the live rope. If a wire rope grip is used a distance piece, or a short length of rope of the same diameter, will be necessary to ensure that the rope, is adequately gripped. If necessary, the tail-end may be lashed to the live part with soft binding wire.

**NOTE- In both (i) and(ii) the clamp is used to ensure that the rope cannot slip through the anchorage before the wedge has seated properly.**

- i) Special care should be taken when tension may be completely removed from the rope, for example when a load is set down where there is a possibility that the wedge may become loosened.

#### 14.6.2.2 Inspection

When inspecting wedge and socket rope anchorages particular attention should be paid to;

- a) rope damage, for example broken wires or deformation of the rope where it emerges from the socket;
- b) the condition of the socket, for example cracks, particularly if the wedge is seen to protrude excessively. The socket lugs should be examined for possible deformation, cracks, or other defects;
- c) the security and tightness of the wedge fitting.

The wedge and socket and the part of the rope lying inside the fitting should be examined each time the termination is dismantled for any reason.

A wedge and socket termination found to be damaged should be replaced. A length of rope that has previously been fitted with a wedge and socket termination should not be straightened and use for load-bearing purposes.

## **14.7 Maintenance, Examination and Discard Criteria**

### **14.7.1 General**

The continued safe operation of wire ropes depends on the regular assessment of the condition of the ropes and the equipment with which they are used.

Some cranes operate in conditions where the ropes and equipment are particularly liable to damage. In such circumstances, the assessment of the condition of the rope and the equipment should be carefully carried out, and the rope removed from service when the intervals and before the rope is showing signs damage is such as to affect its safe operation.

Good maintenance will, in general, increase the rope life. Regular cleaning and service dressing is a necessary part of good maintenance.

Guidance regarding rope maintenance, inspections and examinations and discard criteria are given in 14.7.2 to 14.8.6. If the person inspecting the rope has any doubts about its safe operation, the rope should not be used until it has been examined and declared fit for further service by the competent person.

Records should be kept of the maintenance, examination and discard of wire ropes (see 7.10.4).

### **14.7.2 Rope Maintenance**

The maintenance of wire ropes is normally confined to cleaning and application of dressings. The dressings are usually of mineral oil origin and are used to provide lubrication of the wires and strands and to provide protection against corrosion.

Corrosion is a common cause of deterioration of ropes, especially those working out of doors. Internal as well as external corrosion can occur. The former is more dangerous because it can lead to an appreciable reduction in the strength of the rope before the deterioration becomes apparent.

The dressings used for these ropes should therefore:

- a) penetrate easily into rope,
- b) displace moisture from metal surfaces,
- c) give good corrosion protection,
- d) be resistant to wash off by water,
- e) be reasonably resistant to emulsification, and
- f) not cause build up on surface so as to cause displacement of the rope.

In certain environmental conditions, the application of a dressing might aggravate the wear, for example by retaining abrasive materials and in these situations the application of dressings should be avoided unless it is required to protect the rope against corrosion.

The dressing should be compatible with the type of lubricant applied during the manufacture of the rope and in this respect the rope maker's advice should be sought.

### 14.7.3 Frequency of Dressing

This depends very much on the installation and environment in which the rope is working. There are, however, certain general principles to be followed in order to obtain the best rope life. These are:

- a) wherever practical a dressing should be applied when the rope is fitted to the crane;
- b) The dressing should be re-applied at regular intervals and before the rope is showing signs of corrosion or dryness

### 16.7.4 Application of Dressing

There are several methods of applying dressings and the most suitable for any particular rope depends upon the viscosity of the dressing and the length of rope involved. The methods of application include brushing, spraying dripfeed or by automatic applicators.

For maximum effect the lubricant should be applied if possible to the rope where it 'opens up' as it travels over a sheave or winds onto drum.

If the existing dressing on the rope is heavily loaded with dirt, sand, grit, etc, or if loose corrosion products are present, these should be removed with a wire brush or other suitable means.

## 14.8 Assessment of Rope Condition and Discard Criteria

### 14.8.1 General

When carrying out inspections and examinations to assess the fitness of the rope for further service, it is necessary to consider both general deterioration and localized deterioration or damage. It is therefore necessary to examine the whole length of the rope, paying particular attention to the rope adjacent to the terminations, lengths which have been running or, stationary over drums, sheaves and deflection pulleys, and any other areas likely to sustain damage (See Fig. 8).

The criteria in 14.8.2 to 14.8.6 should be considered and are likely to occur in combination. The competent person should assess for each, the severity of deterioration between the per-foot condition and the discard condition and the cumulative effect on the rope. A combination of two or more criteria should be viewed more seriously than one occurring on its own.

### 14.8.2 Broken Wires

#### 14.8.2.1 Generally distributed broken wires

Unless specified, the number of generally distributed broken wires permissible before the rope is discarded if in any length of ten diameters the total number of visible broken wires exceeds five per cent of the total number of wires.

Breaks that occur on the crown of the rope are typical of deterioration by abrasive wear and bend fatigue, breaks that occur in the valley area between the strands are typical of deterioration of the core by wear, fatigue or corrosion.

In the case of multi strands ropes wire breaks will frequently occur in the valley area between strands and may become visible if the rope is flexed, or opened for internal inspection.

#### 14.8.2.2 Localized broken wires in the vicinity of terminations

The rope should be discarded when there are three or more visible wire breaks in the immediate vicinity of termination. Detachable terminations such as a wedge and socket should be examined for broken wires within and under the terminations.

If the rope is shortened so that the broken wires are removed, then it may be considered for re-termination and reuse. Wire breaks at or adjacent to the termination, even if low in number, are indicative of high stresses at this point and may be caused by incorrect fitting of the termination. The causes should be investigated before the rope is re-terminated.

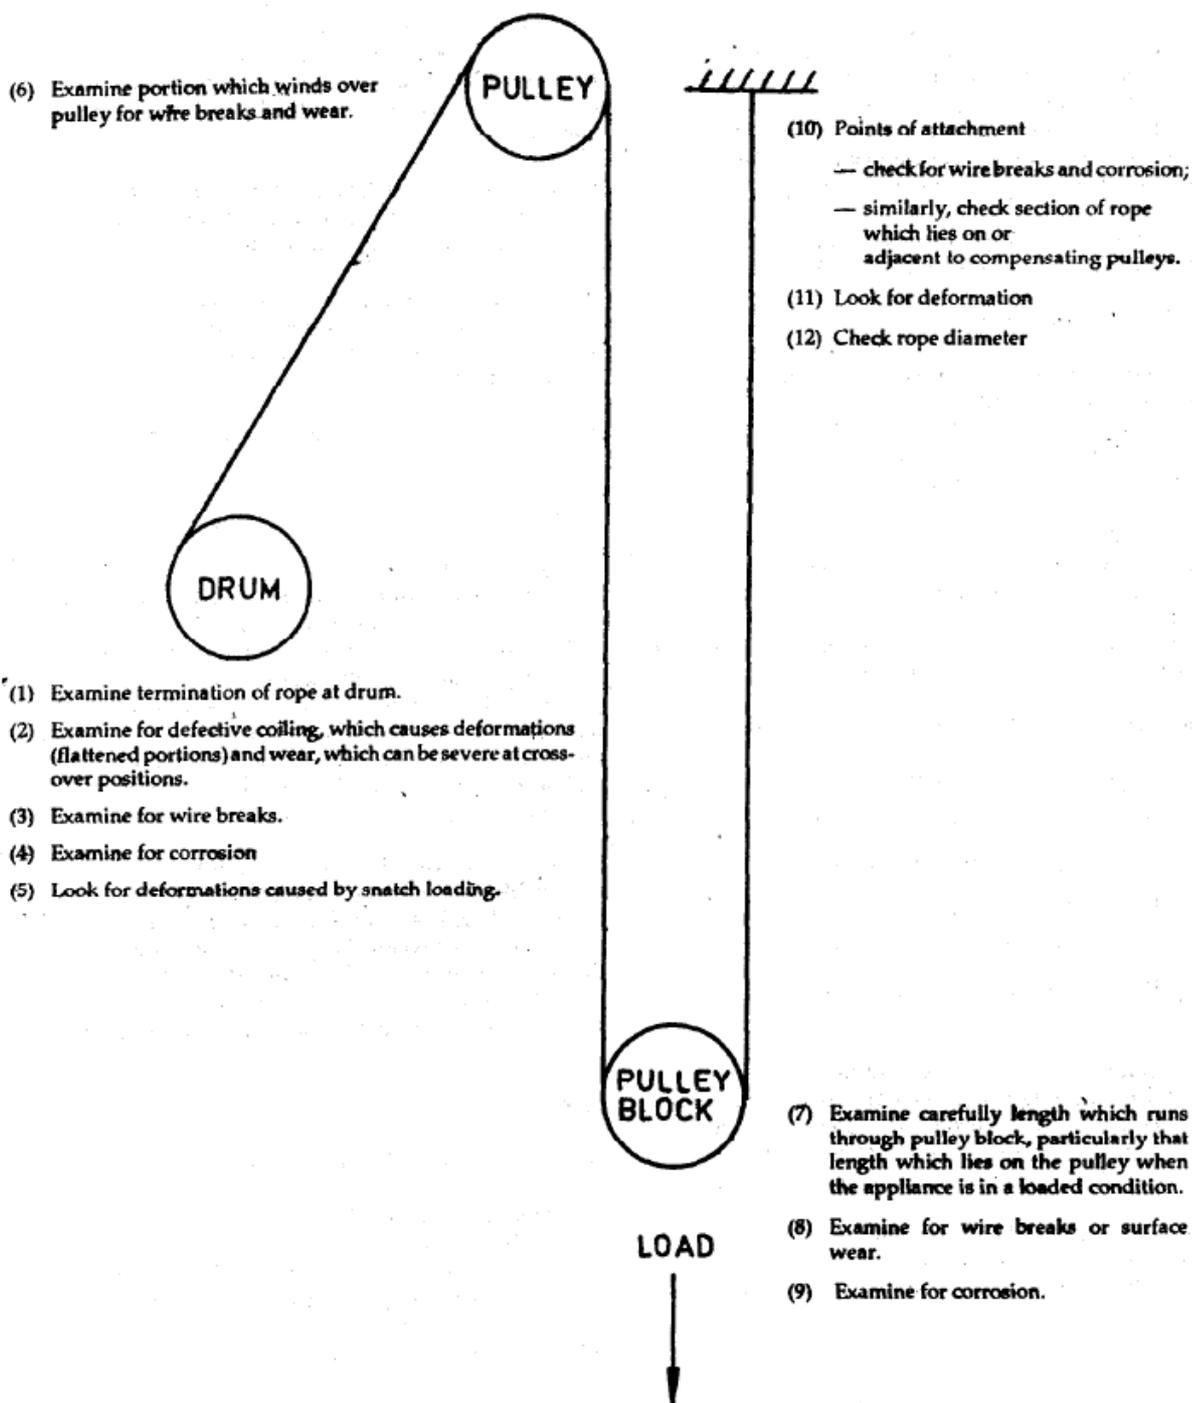


Fig. 8 Parts of the Crane to Be Considered During the Examination

### 14.8.2.3 Ropes operating in plastics sheaves

When any rope operates either solely or partly with plastics sheaves or metal sheaves having plastics lining, wire breaks may occur in large numbers internally before there is any visible evidence of wire breaks or substantial wear on the periphery of the rope.

Particular attention should be paid to any localized area which exhibits a dryness or denaturing of the lubrication. The rope or crane manufacturers advise should be sought regarding discard criteria but in any case this should be not less onerous than those applicable to multi strand ropes working over metal sheaves.

### 14.8.3 Wear

Wear may be either general or localized and results from contact of the rope with sheaves, or drums, or other hard surfaces or rope to rope pressure. Wear may be uniform along or around the rope, or may occur along one side of the rope only.

When working over metal sheaves, the rope should be discarded when the rope diameter anywhere is reduced to 90 percent of the nominal diameter in the case of 6 and 8 strand ropes.

In the case of multi strand ropes, internal wear or damage is frequently more critical than external wear. This may also be accompanied by an accumulation of internal debris. If the rope diameter falls to 97 percent of the nominal, or rises to 105 percent of the nominal, a more detailed examination should be carried out to ascertain the significance and discard may be necessary. The rope should in any case be discarded when the diameter has reduced to 90 percent of the nominal diameter.

If wear is not even, the cause should be ascertained and corrective action taken.

### 14.8.4 Corrosion and Chemical Attack

Corrosion and chemical attack may be external or internal, general or localized, and is significant when the surface of the wires is severely roughened or pitted, or if the wires are slack within the strands due to wastage. If any of these phenomena is present either locally or generally the rope should be discarded.

Slight rusting of the surface is not normally detrimental but may be an indication that the rope is in need of lubrication.


Internal corrosion or chemical attack are not always easy to detect and are therefore particularly dangerous. Indications are an unusual increase or decrease in rope diameter, lack of gap between the strands, dryness and deterioration of the lubricant, discoloration in the valleys between the strands, and increase in stiffness in bending. If a rope shows any of these signs it should & carefully examined and if not requiring discard it should be re-dressed (see 14.7.2).

### 14.8.5 Localized Damage or Distortion


Other forms of damage or distortion that may affect the safe working of wire ropes are:

- a) **Waviness - Waviness** is a deformation where the longitudinal axis of the wire rope takes the shape of a helix. While not necessarily resulting in any immediate loss of strength, the deformation may transmit a pulsation which after Prolonged working will give rise to wear and wire breaks. In the case of waviness that affects the operation of the equipment, the wire rope should be discarded.
- b) **Basket distortion (or birdcage)** – Basket distortion occurs in ropes when the outer layer of strands has been dislocated or when the outer layer becomes longer than the inner layer of strands. Such a condition may occur as a result of abrupt (snatch) loading of the rope from a slack condition, incorrect installation or incorrect termination. A basket formation is justification for discard.


- c) **Strand or core protrusion** - Strand or core protrusion is frequently associated with basket deformation and is justification for immediate discard of the rope.
- d) **Wire protrusion** - In this condition certain wires or groups of wire rise up on the opposite side of the rope to the sheave groove, in the form of loops. This feature usually results from shock loading. If the condition is severe (3 wires), there is justification for discarding the rope.
- e) **Local increase in diameter of rope** – Local increase in rope diameter may occur and could affect a relatively long length of the rope. The condition usually relates to corrosion (see 14.8.4) or to swelling of a fibre core owing to the effect of moisture. If the condition is severe, the rope should be discarded.
- f) **Local decrease in diameter of rope** - A local decrease in tie diameter of the rope is frequently associated with fracture of the core. Positions close to terminations should be carefully examined for such deformations.  
If the condition is severe the rope should be discarded.
- g) **Bends and Kinks** - Bends are angular deformation of the rope. A kink is a deformation created by a loop in the rope which has been tightened without allowing for rotation about its axis. Unbalance of lay length occurs, which will cause excessive wear, and in severe cases. the rope will be so distorted that it will have only a small proportion of its strength remaining. If the bend or kink is severe there is justification for immediate discard of the rope.
- h) **Damage due to heat or electric arcing** - When there is evidence that the rope has been in any way affected by electric arcing or substantially affected by heat, the rope should be discarded. Indicators are dryness or loss of lubrication, bluing of the wire surfaces, fusion of wire surfaces and the presence of weld splatters.

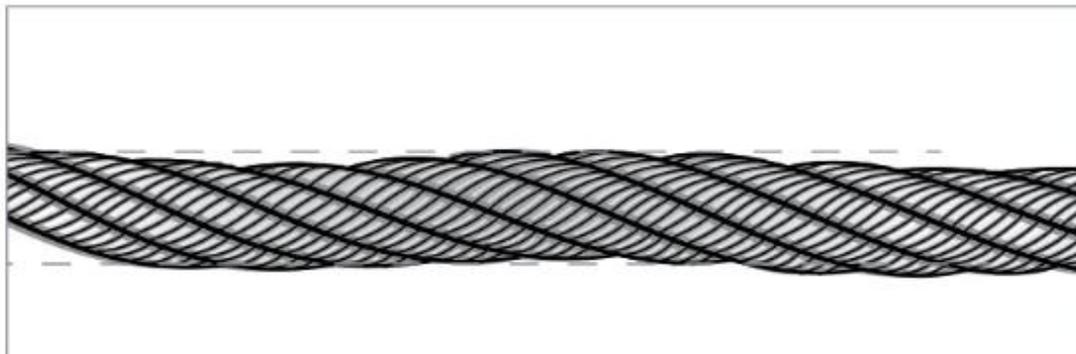


**Waviness**

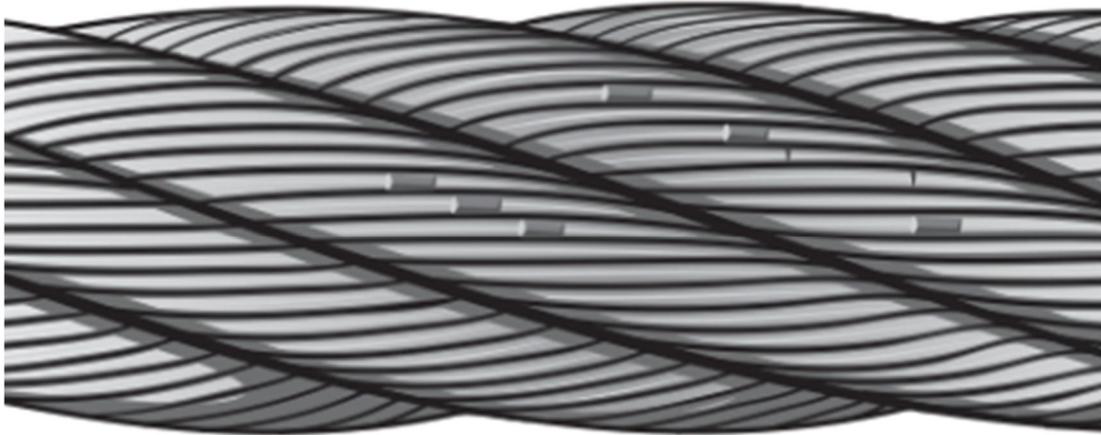


### Crown Wire Breaks

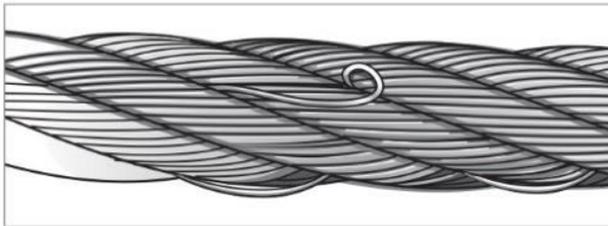

Wire Protrusion

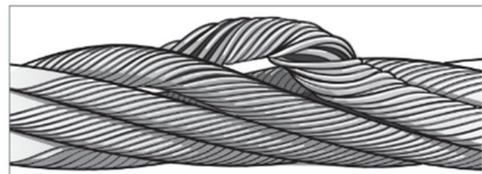

Strand Protrusion

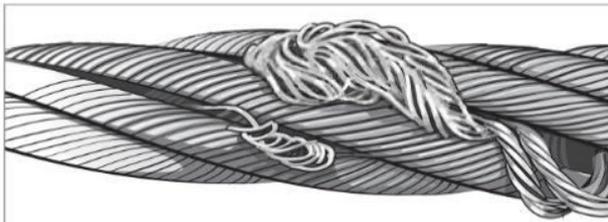

Core Protrusion



Flattened Rope



Sunken Strand/Local Reduction in Rope Diameter



Kink or Tightened Loop



**Birdcage or Basket/Lantern Deformation**

## **15. SLINGING AND HANDLING OF LOADS**

### **15.1 Load Estimation, Weight and Centre of Gravity**

#### **15.1.1 Weight of the Load**

It is important that the weight of the load to be lifted is known with reasonable accuracy. To obtain this information

- a. Look to see if the weight is marked on the load. If it is checked to ensure that it is the weight of all parts of the load (a machine tool for example may not include the drive motor).
- b. Check the weight stated on any documentation.
- c. Look at the drawing of the load. If the weight is marked check as in (a) above to ensure it includes all parts of the load.
- d. If the load is still on a trailer or truck, weigh it.
- e. Estimate the weight of the load by using tables of weights. In this respect IS 808 : 1989 gives the weight of rolled steel sections. Table 4 gives weights for other materials.

#### **15.1.2 Determination of load mass**

The mass of a load,  $m$ , in kilograms, is determined using the following formula:

$$m = VQ$$

where

$V$  is the volume of the load, in cubic metre &  $Q$  is the density of the material, in kilograms per cubic metre.




The volume of a load can be found by dividing it into single elements (fundamental bodies), for which the volumes can be calculated using one of the formulae given in table 3, and by totalling the volumes of the elements.





In the cases of complex volumes or heterogeneous material or in other cases where it is difficult to calculate the load mass, the mass should be determined by a measuring device, such as a dynamometer, which is interposed between the crane hook and the load. The densities for the most commonly used materials are listed in table 4.






**Table 4 Weight of Materials**

[Clause 15.1.1 (e) and 15.1.2]

<b>Material</b>	<b>Weight kg/cubic metre</b>
Aluminium	2700
Brass	8500
Bronze	8400 to 9200
Brick	1400 to 2000
Coal	1200 to 1350
Copper	8800
Concrete	1600 to 2400
Earth	1600
Iron, cast iron	7400
Lead	11200
Magnesium	1750
oil	800
Paper	1 120
Steel	7800
Wood	400 to 800

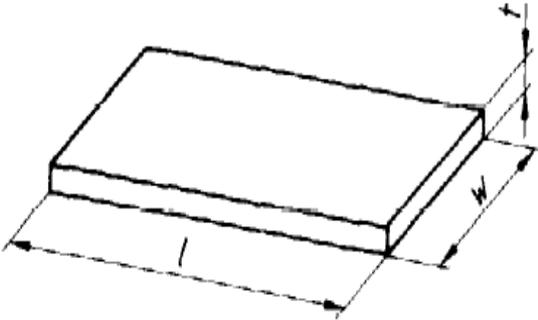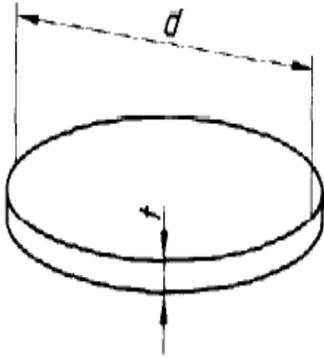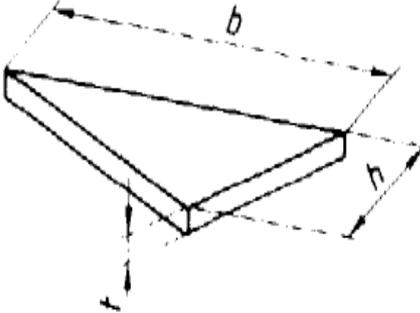Fundamental bodies	Volume
<p data-bbox="252 360 480 398">Sheet (rectangular)</p> 	$V = lwt$
<p data-bbox="252 842 432 880">Sheet (circular)</p> 	$V = \left(\frac{d}{2}\right)^2 \pi t$
<p data-bbox="252 1391 448 1429">Sheet (triangular)</p> 	$V = \frac{b}{2} ht$

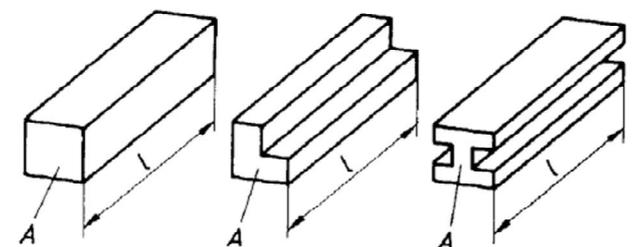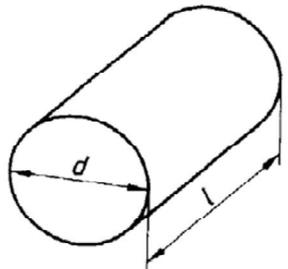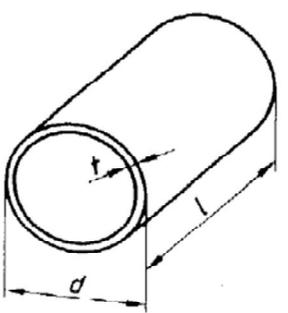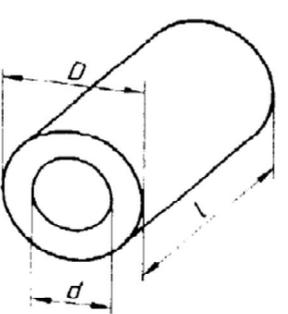Fundamental bodies	Volume
<p>Prism, bar or profile</p>  <p><math>A</math> is the surface area of the base</p>	$V = Al$
<p>Cylinder</p> 	$V = \left(\frac{d}{2}\right)^2 \pi l$
<p>Tube</p> <p>Thin-walled</p>  <p>Thick-walled</p> 	$V = d\pi lt$  $V = \pi l \left[ \left(\frac{D}{2}\right)^2 - \left(\frac{d}{2}\right)^2 \right]$

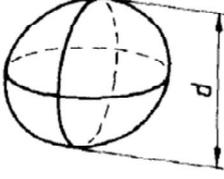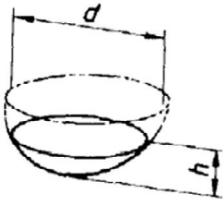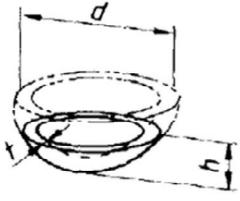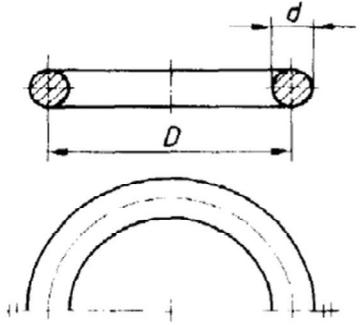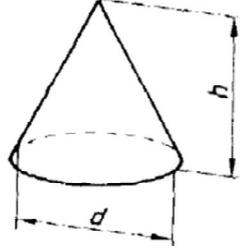Fundamental bodies	Volume
<p>Sphere</p> 	$V = \frac{4}{3} \pi \left(\frac{d}{2}\right)^3$
<p>Spherical segment</p> 	$V = \frac{1}{6} \pi h \left[ 3 \left(\frac{d}{2}\right)^2 + h^2 \right]$
<p>Spherical shell segment</p> 	$V = \frac{\pi}{4} (d^2 + 4h^2) t$
<p>Torus (cylindrical ring)</p> 	$V = \frac{1}{4} \pi^2 D d^2$
<p>Cone</p> 	$V = \left(\frac{d}{2}\right)^2 \pi \frac{h}{3}$

**Table 4 Weight of Materials**  
[Clause 15.1.1 (e) and 15.1.2]

<b>Material</b>	<b>Weight kg/cubic metre</b>
Aluminium	2700
Brass	8500
Bronze	8400 to 9200
Brick	1400 to 2000
Coal	1200 to 1350
Copper	8800
Concrete	1600 to 2400
Earth	1600
Iron, cast iron	7400
Lead	11200
Magnesium	1750
oil	800
Paper	1 120
Steel	7800
Wood	400 to 800

### 15.1.3 Centre of Gravity

It is important to know the position of the centre of gravity. This is the point at which the total weight of a body may be regarded as being concentrated. Another way of saying this is that the centre of gravity is the point about which the parts of a body exactly balance each other.

For more complex shapes, it may be necessary to estimate the centre of gravity of the various parts of the load and then combine them to get a centre of gravity for the whole. When handling irregular shaped loads such machine tools where the position of the centre of gravity is not readily ascertainable it is essential to determine this by trial and error without lifting the load completely off the ground & Having established this the tackle should be adjusted to ensure that the load is evenly balanced for lifting without a tendency to topple over and that no part of the load is subjected to excessive strain which might cause damage to the load. Slings should be protected against any sharp edges on the load. The weight of all slings tackle and lifting beams should be regarded as part of the load to be lifted.

### 15.1.4 Load stability

#### General

Before lifting with slings, it is important to ensure that the load will be stable when it is raised clear of the ground. It is dangerous if a load can tilt or swing in an uncontrolled manner, or if it can topple over.

A load will not tilt, if, before lifting, the sling(s) is (are) arranged so that the load is suspended with its centre of gravity aligned directly below the main point of attachment of the hook (see figure 1). (The centre of gravity is the point about which the parts of a body, when left free, exactly balance each other.)

### **Effect of “out of balance”**

If a load is out of balance when lifted, it will tilt and swing towards the position of balance, until the centre of gravity settles directly below the main point of attachment. This movement can give rise to hazardous situations, such as :

- a) the swinging load might strike persons or obstacles;
- b) the individual sling legs might become overloaded;
- c) the load might move within the sling;
- d) in severe cases, the load may topple or be displaced from the sling with consequent damage.

If there is uncertainty about the balance of a load, it may be necessary to have a series of trial lifts before the position of balance can be determined. The load shall be lifted only sufficiently for the degree and direction of any tilt and swing to be determined. The tendency to tilt and swing shall be corrected by moving the slinging points and the supporting hook a little at a time, each time making a trial lift until the position of balance is obtained (see figure 2).

### **Effect of a high centre of gravity**

To minimize the risk of toppling, the points of attachment of the sling legs shall, where practicable, be above the centre of gravity of the load (see figure 3).

Where the centre of gravity of the load is above the point of sling attachment a greater stability will result where the angle between the horizontal and the sling leg is substantially greater than the angle formed between the horizontal and a line between the centre of gravity and the attachment point (see figure 4).

## **15.2 Use of Lifting Gear**

Only slings and lifting gear for which a valid test certificate has been issued and which have been thoroughly examined within the previous six months should be used. Slings and lifting gear should clearly have marked with the safe working load and an identification number (for test record purposes). All slings and lifting gear should be visually inspected on each occasion before use. When not in use such lifting gear should be maintained in a serviceable condition in a suitable store. Lifting gear should be released from the store only on the instruction of a responsible person.

When use in connection with the handling of molten metal or slag the safe working load of all lifting gear should be de-rated to half the normal safe working load.

## **15.3 wire rope slings**

### **15.3.1 Before lifting a load**

- a) It is necessary to ensure that the load is suitable for lifting with a wire rope sling. The sling shall not be allowed to damage the load nor shall the sling itself be damaged. If the sling is to be attached to the load, the points used for attachment, e.g. lugs and eyebolts, should be suitable and adequate for the purpose of lifting the load.
- b) The mass of the load to be lifted shall be assessed. If the gross mass is not marked, the information may be obtained from the consignment notes, manuals, plans, etc. If there is no information, the mass should be assessed by the person responsible for the lifting.
- c) Once the slinging method has been decided on, a suitable sling shall be chosen and the working load limit (WLL) shall be adequate for the load to be lifted. As far as is reasonably practicable, the effective diameters of pins, hooks or other components over which soft eyes are used shall not be less than twice the rope diameter.

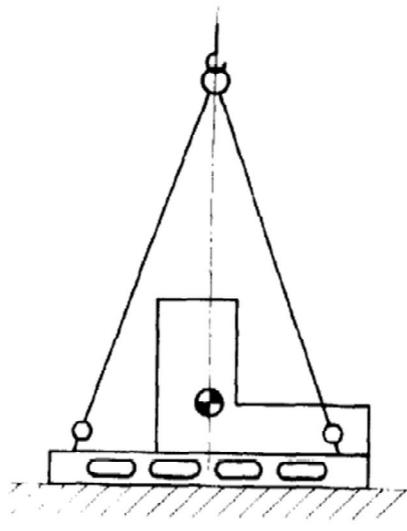


Figure 1 – Alignment of centre of gravity

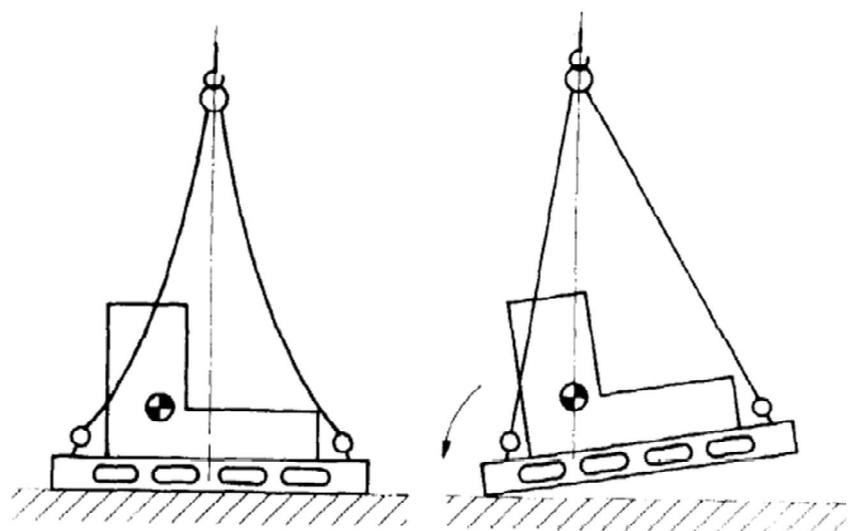


Figure 2 – Example showing effect of centre of gravity misalignment

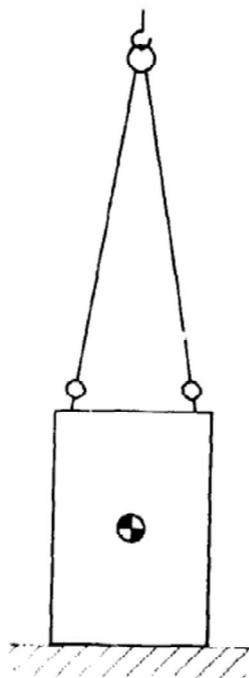


Figure 3 – Example of stable load

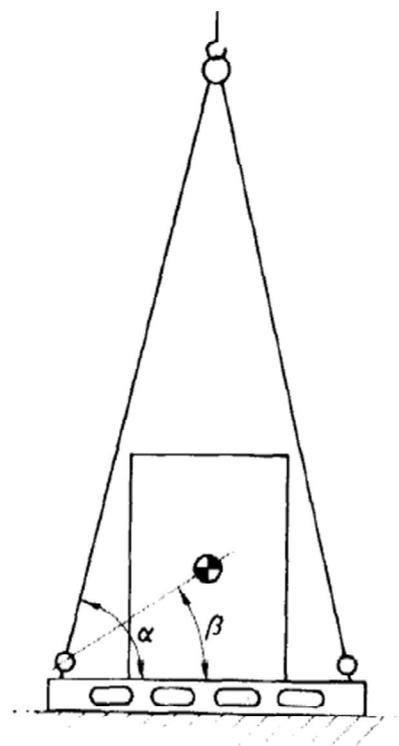


Figure 4 – Example of high centre of gravity relative to attachment points

- d) It is necessary to ensure that the sling is in good condition. Slings found to be damaged or to have deteriorated to
- e) such an extent that they are considered not safe for use shall be withdrawn from service immediately (see clause 15.3.5).
- f) It is necessary to ensure that the load will be balanced when lifted The slings shall be attached to designed lifting points, where provided. If lifting points are not marked on the load, the position of the centre of gravity shall be assessed. The type of sling and the slinging methods used shall ensure that the load will not topple or slip. The supporting hook shall be positioned directly above the centre of gravity. Where this is not practicable, particular care shall be taken when lifting the load (see 15.3.3)
- g) It is necessary to ensure that the load contains no loose accessories. If the load comprises a number of pieces, for instance a bundle of pipes, a slinging method shall be chosen which will secure all the pieces. The sling shall not be attached to banding or strapping unless they are designed for lifting purposes.
- h) If a sling leg is likely to rotate during lifting of the load, hand splices shall not be used.

### 15.3.2 Fitting the sling

When fitting the sling, it is necessary to ensure that

- a. sling legs are free of any tendency to kink;
- b. the terminations are properly seated without overcrowding;
- c. the relevant leg angle does not exceed that for which the sling is rated and marked;
- d. the sling is not bent around any sharp corners that might damage the sling or reduce its effective strength where necessary, suitable packing pieces should be used;

#### NOTES


- i. A sharp corner is considered to have a radius of curvature of less than the rope diameter.
  - ii. 2 When a rope is bent over Its own diameter, It can lose 50 % of its original strength.
- e. and, when using a choke hitch, to ensure that
    - i. the angle of choke is allowed to form itself naturally and is not forced,
    - ii. a thimble or stirrup is used, where practicable, at the eye to reduce damage to the rope and thereby prolong the life of both the eye and the main part of the rope;
  - f. sling in choke hitch is not used to turn, rotate or drag a load unless special precautions are taken to ensure that neither the sling nor the load is damaged - such special precautions may entail a reduction of the safe working load;
  - g. a tag line(s) or control rope(s) is available to assist in the control of the swing or rotation of the load.

**Table 5A SAFE WORKING LOADS FOR TWO-LEG SLING**


Safe Working Load of One-Leg Sling	Safe Working Load of Two-Leg Sling	Included Angle between Legs				
		0° kN	30° kN	60° kN	90° kN	120° kN
5	10	10	9.65	8.65	7.05	5.00
7.5	15	15	14.50	13.15	10.00	7.50
10	20	20	19.60	17.50	14.10	15.00
15	30	30	29.00	26.30	21.20	10.00
20	40	40	38.60	35.00	28.30	20.00
25	50	50	48.30	43.80	35.30	25.00
30	60	60	58.00	52.50	42.40	30.00
40	80	80	77.80	70.00	65.50	40.00
50	100	100	96.60	86.60	70.70	50.00
60	120	120	116.00	105.00	84.80	60.00
75	150	150	145.00	131.50	106.00	75.00
<b>Lower Reduction Factor</b>		1.00	0.966	0.866	0.707	0.500
<b>Approximate Reduction Percent</b>		0	3.5	13.5	29.5	50

**Note:** Safe working load is for vertical hitch.

**Table 5 B Mass and Breaking Force for 6 x 19 Ropes**

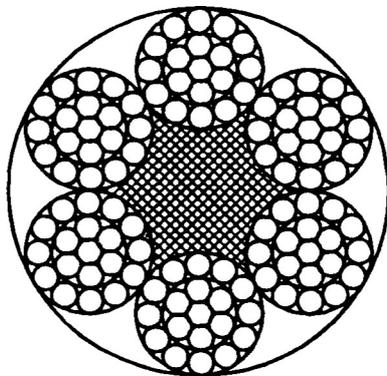


8 to 52 mm  
With Fibre Core (CF)

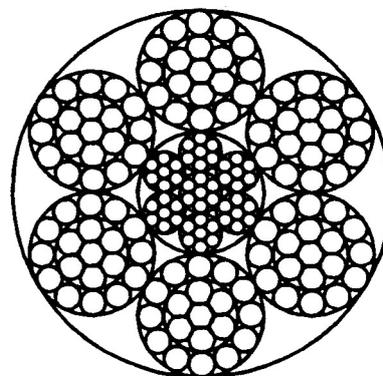


8 to 40 mm  
With Steel Core (CWR)

Nominal Diameter	Approximate Mass		Minimum Breaking Force Corresponding to Rope Grade of					
			1570		1770		1960	
	Fibre core	Steel core'	Fibre core	Steel core'	Fibre core	Steel core'	Fibre core	Steel core'
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)
mm	Kg/100m		kN	kN	kN	kN	kN	mm
	22.1	24.4	31	33	35	38	39	42
9	28.0	30.8	39	42	44	48	49	53
10	34.6	38.1	48	52	54	59	60	65
11	41.9	46.1	58	63	67	71	73	79
12	49.8	54.8	69	75	78	85	87	94
13	58.5	64.3	82	88	92	99	102	110
14	67.8	74.6	95	102	107	115	118	128
16	88.6	97.4	124	133	139	150	154	167
18	112	123	156	169	176	190	195	211
19	125	137	174	188	196	212	217	235
20	138	152	193	208	218	235	241	260
22	167	184	234	252	263	284	292	315
24	199	219	278	300	313	338	347	375
26	234	257	326	352	368	397	407	440
28	271	298	378	409	426	461	472	510
32	354	390	494	534	557	602	617	666
36	448	493	625	675	705	761	781	843
38	500	550	697	752	785	848	870	939
40	554	609	772	834	870	940	964	1041
44	670	--	934	--	1053	--	1166	--
48	797	--	1112	--	1253	--	1388	--
52	936	--	1305	--	1471	--	1629	--

**Table 5 C Mass and Breaking Force for 6 x 37 Ropes**

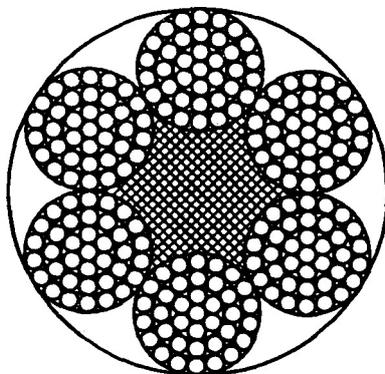

8 to 64 mm

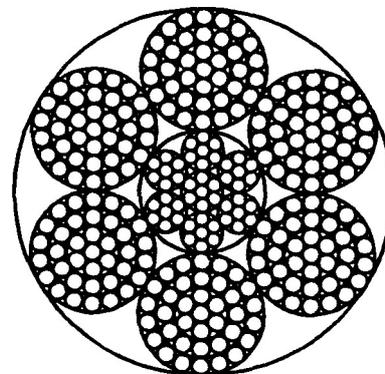

8 to 52 mm

Nominal Diameter	Approximate Mass		Minimum Breaking Force Corresponding to Rope Grade of					
			1570		1770		1960	
	Fibre core	Steel core'	Fibre core	Steel core'	Fibre core	Steel core'	Fibre core	Steel core'
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)
mm	Kg/100m		kN	kN	kN	kN	kN	mm
8	22.1	24.4	30	32	33	36	37	40
9	28.0	30.8	37	40	42	46	47	51
10	34.6	38.1	46	50	52	56	58	62
11	41.9	46.1	56	60	63	68	70	76
12	49.8	54.8	67	72	75	81	83	90
13	58.5	64.3	78	84	88	95	98	105
14	67.8	74.6	91	98	102	110	113	122
16	88.6	97.4	118	128	134	144	148	160
18	112	123	150	162	169	183	187	202
19	125	137	167	180	188	203	209	225
20	138	152	185	200	209	225	231	250
22	167	184	224	242	253	273	280	302
24	199	219	267	288	301	325	333	359
26	234	257	313	338	353	381	391	422
28	271	298	363	392	409	442	453	489
32	354	390	474	512	534	577	592	639
36	448	493	600	648	676	730	749	809
38	500	550	668	722	753	814	834	901
40	554	609	741	800	835	902	924	999
44	670	737	986	968	1010	109	1119	1208
48	797	887	1066	1152	1202	1298	1331	1438
52	936	1029	1252	1352	1411	1524	1562	1687
56	1085	--	1451	--	1636	--	1812	--
60	1246	--	1666	--	1878	--	2080	--
64	1417	--	1896	--	2137	--	2367	--

With Fibre Core (CF)

With Steel Core (CWR)

**Note:**

For sling legs up to about 20 mm diameter, a rope in the 6 x 19 Group will generally provide sufficient flexibility and will offer good wearing properties. For larger size 6x37 Group is generally preferred on account of its increased flexibility.

Safe Working Load- For normal conditions of service, the safe working load shall not exceed

- one-sixth of the minimum breaking strength for Single Part Spliced Sling Legs and,
- one-eighth of the minimum breaking strength for Double-Part Spliced Endless Sling Legs

of 6 X37 construction wire rope with wires of tensile designation 1770 conforming to IS: 2266-1977.

Please refer IS:2762 and IS 2266-1977 for more information about rope specifications and wire rope slings specifications

### 15.3.3 Raising or lowering the load

When raising or lowering the load, it is necessary to ensure that

- a) a recognized code of signals is used which is fully understood by all concerned;
- b) there is nothing to prevent the free movement of the load, e.g. bolts holding down the load or jointing
- c) there are no obstacles, such as cables or pipes, which can be fouled, and there is sufficient height for the lift.
- d) every person concerned with the operation can see and/or communicate with all other persons concerned
- e) all personnel are clear of the load;

NOTE If a person has to be near the load, special care during starting the hoisting and control of the movement of the load should be taken.

- f) the load is balanced
- g) the load is raised or lowered steadily avoiding snatch loading;
- h) the sling is not trapped under the load it necessary, place suitable battens, etc. In positions so that the load can be put down without damage to itself and without trapping the sling;
- i) there are no free swinging legs; even when hooked back these might constitute a danger and should be careful control.

### 15.3.4 Precautions

The following precautions shall be taken :

- a) no one shall be allowed to ride on the load;
- b) the load shall not be allowed to be carried over anyone without due care being exercised;
- c) a suspended load shall not be left unattended;
- d) slings shall not be dragged along the floor;
- e) the slings shall not be unnecessarily exposed to corrosive liquids, solids or vapours;
- f) if the sling is to be used in an environment where the temperature exceeds 100 deg centigrade, advice of the sling manufacturer shall be sought.

### 15.3.5 Inspection, thorough examination and discard criteria

#### 15.3.5.1 General

During service, slings are subjected to conditions which affect their safe working characteristics. It is necessary therefore to ensure, as far as is reasonably practicable, that the sling is safe for continued use.

The sling shall be inspected for damage or deterioration before each period of use and thereafter shall be checked for obvious defects at suitable intervals during service. In addition, thorough routine examinations shall be carried out by a competent person.

If at any time there is reason to doubt the safe condition of the sling, it shall be withdrawn from service and subjected to a thorough examination (see 15.3.5.3).

#### 15.3.5.2 Inspection (for details, see 15.3.5.4)

An inspection is a visual check on the condition of the sling to identify damage or deterioration which might affect its fitness for use, such as:

- a) broken wires;
- b) distortion of the rope (crushing, kinking, etc.);
- c) distortion of ferrules, splicing or fittings;
- d) excessive wear:
- e) heat damage;
- f) corrosion

#### 15.3.5.3 Thorough examination

A thorough examination is a visual examination carried out by a competent person and, where necessary, supplemented by other means, such as non-destructive testing, in order to detect damage or deterioration which might affect the fitness for use of the sling.

A thorough routine examination shall be carried out at intervals not exceeding six months and this interval shall be less where deemed necessary in the light of service conditions or where required by statutory requirements.

Records of such tests shall be kept in accordance with national standards and regulations.

#### 15.3.5.4 Assessment of the condition of the sling and discard criteria

##### A Broken wires

###### A.1 General

Broken wires are detrimental because of

- a) the possibility of injury to user's hands;
- b) the loss of strength in the rope.

Broken wires are usually caused by mechanical damage, although corrosion may be a significant factor.

The appearance of well distributed broken wires may have no marked effect on the strength of the sling, but it might be indicative of mechanical or corrosive damage. In general, the loss of strength caused by the mechanical or corrosive action on the rope as a whole is more critical than the loss in strength resulting from the actual wire breaks.

To prevent injury to the user's hands, protruding wires shall be broken off in the gusset by reverse bending until fracture occurs.

###### A.2 Randomly distributed breaks

If the total number of visible broken wires in any length of six rope diameters exceeds 5 % of the number of wires in the rope, the sling shall be withdrawn from service and referred to a competent person for thorough examination.

###### A.3 Localized breaks

If there are three or more broken wires closely grouped, the sling shall be **discarded**.

###### A.4 Excessive wear

If surface wear reduces the measured diameter of the rope at any point to less than 90 % of the nominal diameter, the sling shall be discarded.

###### A.5 Corrosion

Corrosion may occur where slings have been improperly stored or have been used in particularly corrosive conditions, such as in moving loads in and out of acid/alkali baths. The effect is readily identified through the loss of flexibility and roughness to the touch. While slight surface rusting is

unlikely to affect the rope strength, it may be indicative of internal corrosion, the effect of which is not predictable.

Where internal corrosion or corrosion beneath the serving of a hand splice is suspected, the sling shall be withdrawn from service and referred to a competent person for thorough examination.

#### **A.6 Significant distortion of the rope**

The sling shall be **discarded** when distortion due to kinking, crushing, core collapse, or knotting is identified. However, in certain circumstances, permanent deformation may occur without necessarily affecting the strength of the sling, e.g. flattening when the rope is bent around a small diameter under heavy loading.

In cases where it is difficult to distinguish between detrimental distortion and acceptable deformation, the sling shall be withdrawn from service and referred to a competent person for examination.

#### **A.7 Heat damage**

Discolouration of the wires and other evidence of overheating, such as loss of lubrication or pitting of the wires caused by electrical arcing, etc., may be detrimental.

A sling which has been exposed to excessive temperatures for an excessive length of time may have a significantly reduced strength.

Where such conditions are identified, the sling shall be withdrawn from service and referred to a competent person for examination.

#### **A.8 Damaged or defective fittings, ferrules or splices:**

Particular attention shall be paid to signs of

- a) opening up, distortion or cracking of the hook;
- b) distortion and wear of links or closing of the thimble;
- c) cracks in the ferrule;
- d) severe crushing or abrasion of the ferrule or hand splice;
- e) pulling out of splice or ferrule;
- f) concentrations of broken wires near to the ferrule or splice, or in the splice;
- g) the effect of bursting stress at the throat of the eye due to the use of a pin of excessive diameter or certain types of thimble;
- h) fractured wires on the outside surface of the eye, e.g. where a soft eye has been used with an excessively small pin;
- i) effect of friction on bearing surface of a soft eye


The conditions described under items a) and b) may be an indication of overloading and will usually be justification for withdrawing the sling from service.

#### **15.4 Chain Slings**


Chain(s) should not be joined by means of bolts or wire and when shackles are used it is essential that the proper pins be fitted. Under no circumstances should chains be knotted. Chains and slings should never be dragged along the ground or floor.

##### **Designation of chain slings**


The following designations shall be used in specifying slings conforming to this standard.

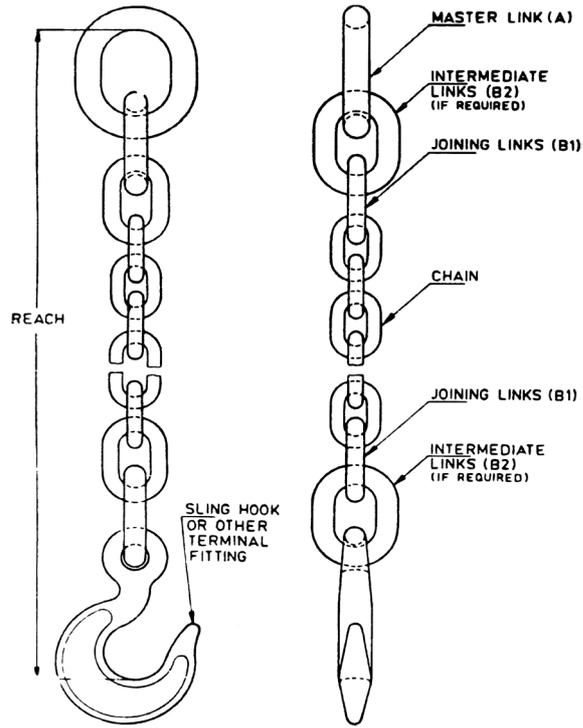


**SINGLE-LEG SLING**

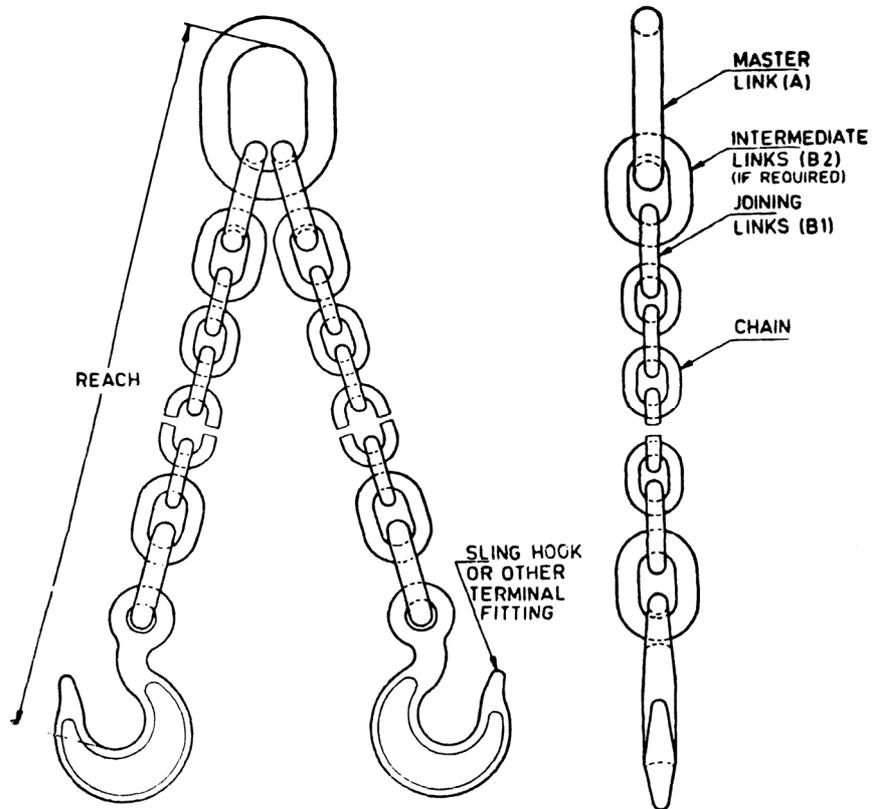


**TWO-LEG SLING**

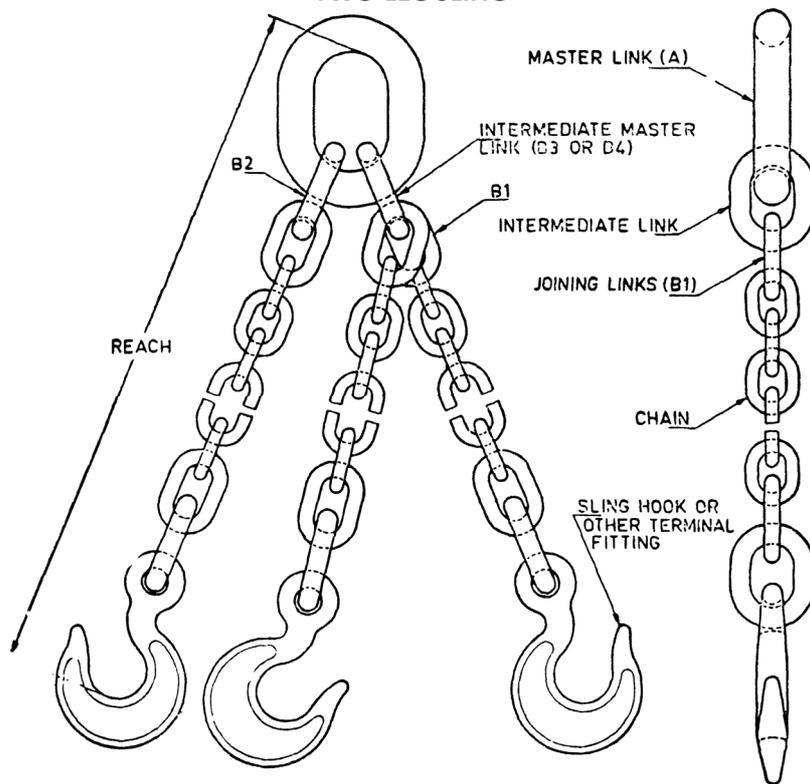

**THREE-LEG SLING**

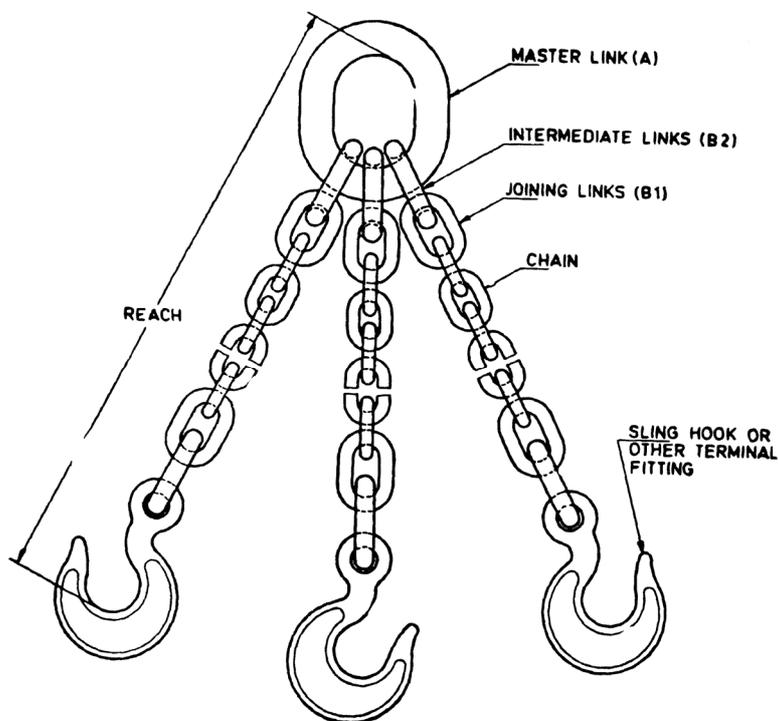

**ALTERNATIVE CONSTRUCTION OF THREE-LEG SLING**

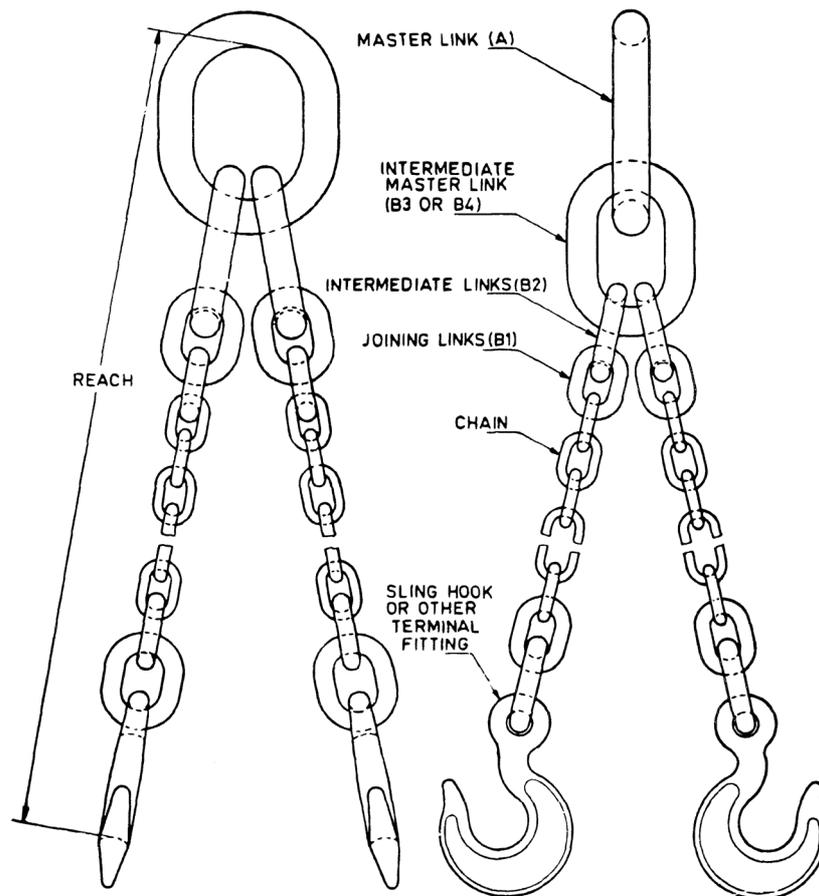

#### FOUR-LEG SLING

**Nominal Size** — The nominal size of a chain sling is the nominal size (dn) of the short link chain used in its manufacture.

The nominal size of each individual master link, joining or intermediate link is the nominal diameter of the material from which it is made.


**Nominal Reach of Sling ( L )** — The nominal reach of the finished sling is the effective length from the inside of the lower terminal fitting to the inside of the upper terminal fitting ( see Fig. 4 ).

**The Grade of a Sling** — The grade of a sling shall be the same as the grade of the chain used, that is, L, M, S or T corresponding to Grades 30, 40, 63 and 80 chains respectively. All components used in the construction of a sling shall be made from the same grade.

#### Rating

**Single Branch Sling** — Single branch slings shall have a working load limit equal to that of the Chain used in their construction.

**Multi-Branch Slings** — Multi-branch slings shall be rated at a uniform working load limit for any angle between branches of 0-90° (0-45° to the vertical) or additionally at a uniform working load limit for any angle between branches of 90-120° (45-60° to the vertical).

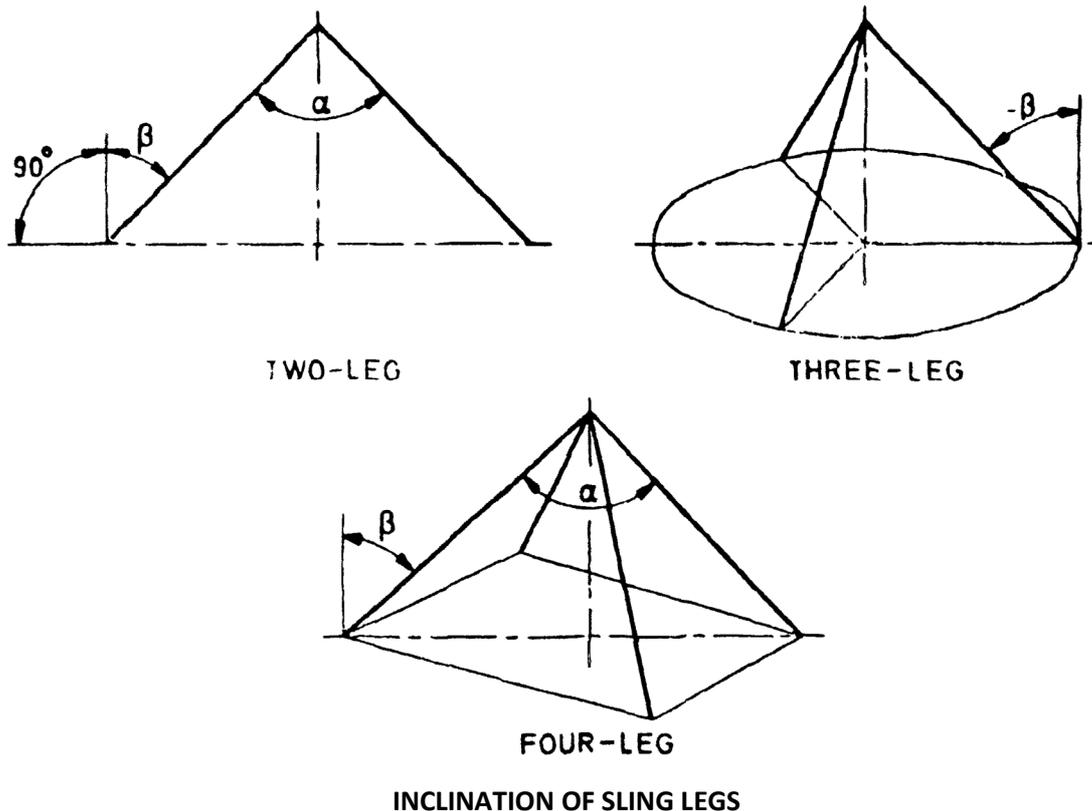

#### Uniform Load Method

##### a) Double branch slings:

For all angles between branches from 0-90° (0-45° to the vertical)

WLL = 1.4 × WLL of a single branch made from similar chain.

When additionally marked for angles between branches of 90-120° (45-60° to the vertical)

WLL = 1 × WLL of a single branch made from similar chain.

##### b) Three and four branch slings:

For all angles between branches from 0-90° (0-45° to the vertical)

WLL = 2.1 × WLL of a single branch made from similar chain.

When additionally marked for angles between branches of 90-120° (45-60° to the vertical)

WLL = 1.5 × WLL of a single branch made from similar chain.

NOTE — In the case of a three branch sling the angle between branches shall be taken as twice the angle to the vertical, that is, 2 ×.

In the case of a four branch sling the angle between branches shall be that between diagonally opposite branches.

**Nominal Rating** — The nominal rating of any multi-branch sling whether rated by the uniform load method shall be the WLL for that sling when used at an angle of 90° between the branches (45° to the vertical).


#### Handling the Load

4.1 A lifting chain is usually attached to the load and the lifting device by means of terminal fittings, such as hooks and links. Chains should be straight, without twists, knots or kinks. The load should be seated well down in a hook, never on the point or wedged in the opening; the hook should be free to incline in any direction so as to avoid bending. For the same reason, the master link should be free to incline in any direction on the lifting device hook. Egg or pear-shaped links should not be used as master links or as lower terminals in any situation where the link could be inverted leading to a wedging action and subsequent distortion of the link.




**Avoided point loading of hook**


- a. The chain may be passed under the load in a basket hitch or choke hitch. It is necessary that in the case of a basket hitch where there is a danger of the load tilting, more than one chain sling be applied to the load, preferably in conjunction with a spreader beam.

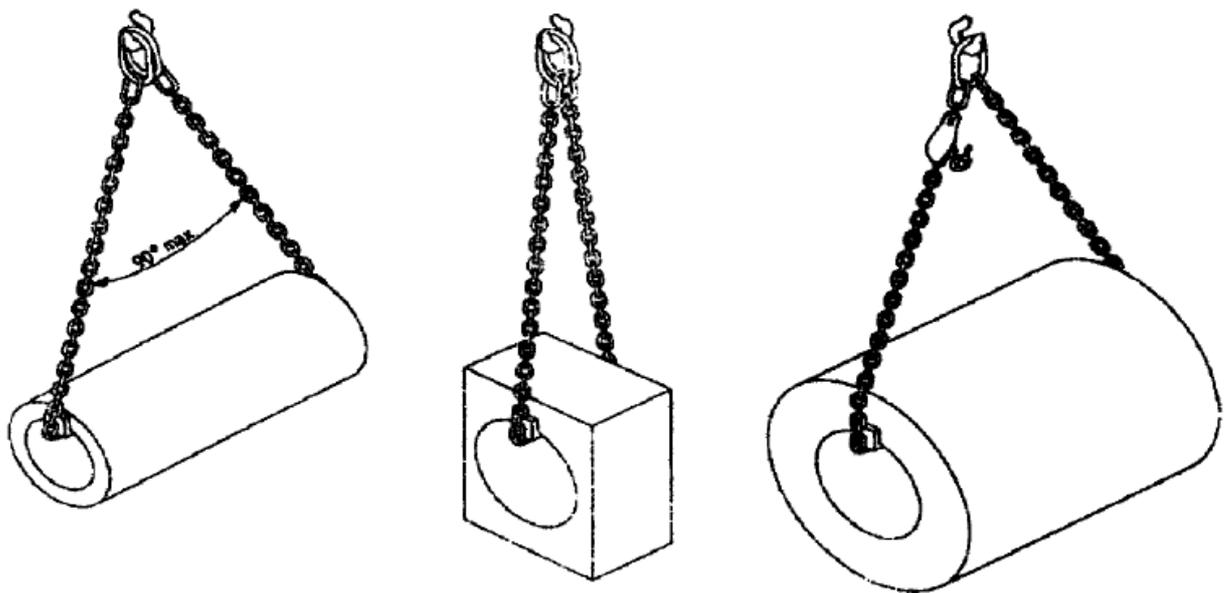

**Basket Hitch**

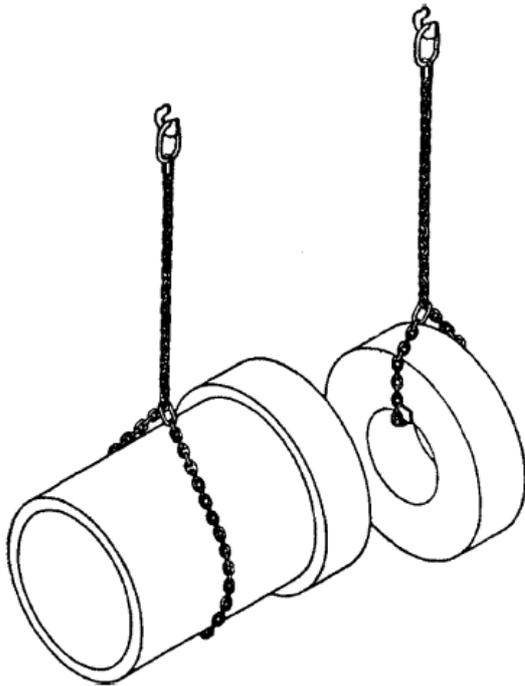


**Choke Hitch**

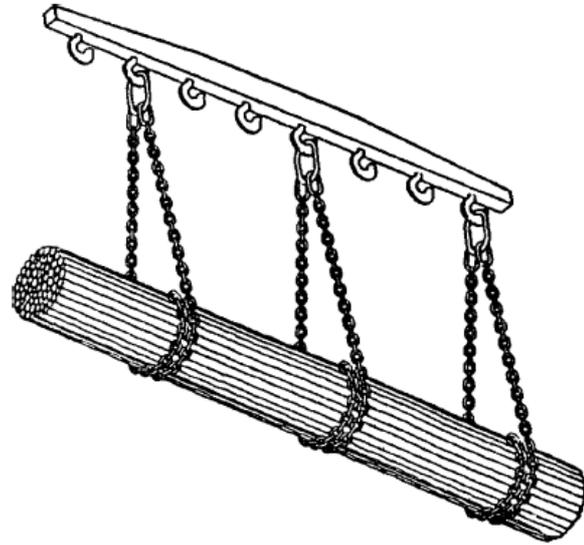

**Use of spreader beam**

- b. Damage to a chain may be caused by dragging it from under the load or by rolling a load on to it; these practices should be avoided.
- c. When a choke hitch is employed, very high tensile forces are imposed and the use of a larger chain for a given load may be necessary. Alternatively, the sling should be de-rated as recommended by the manufacturer, or national legislation or standards. In the absence of such recommendations or requirements, the WL should not exceed 80 percent of WLL. Care should also be taken to avoid repeated engagement of the terminal fitting in the same link, as this will eventually cause damage.
- d. All multi-branch slings exert a gripping force (see Fig. ) on the load which increases as the angle between the sling branches is increased. Where hooks or other fittings are threaded on a loop of chain, for example, case slings and drum slings, the gripping force is much greater and consequently, the angle between such branches should not exceed 60° (30° to the vertical). Care should always be taken to ensure that the load to be moved is able to resist the gripping force without being damaged.
- e. Packing may be required where a chain contacts a load, to protect either the chain or the load or both. A sharp corner of the hard material may bend or damage the chain links. Conversely, the chain may damage the load because of high contact pressure. Packing, such as wooden blocks, may be used to prevent such damage. Hands and other parts of the body should be kept away from the chain to prevent injury as the slack is taken up.
- f. A tag line is recommended to prevent swaying or rotation of a load and to position it for landing.

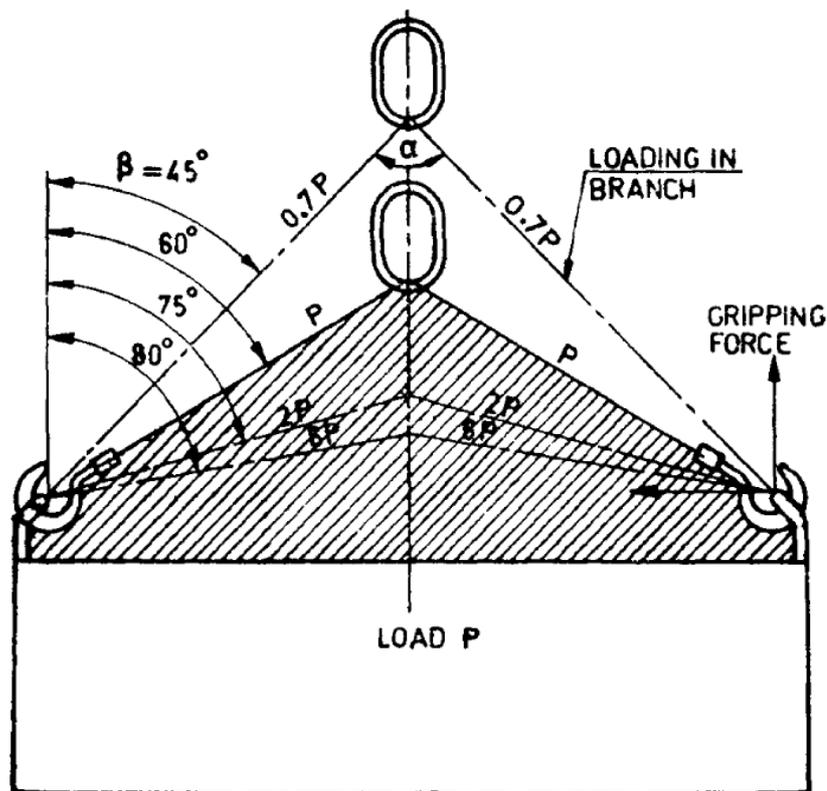

Shaded portion indicates included angles between branches of greater than  $120^\circ$  ( $60^\circ$  to the vertical) at which angles, slings should not be used.

#### VARIATION OF SLING BRANCH LOADING WITH BRANCH ANGLE FOR A GIVEN LOAD P

- g. When ready to lift, the slack should be carefully taken up until the chain is taut, the load raised slightly and a check made that the load is secure and remains level; this is specially important with basket or other loose hitches where friction retains the load. If the load tilts, it should be lowered and the lifting device hook re-positioned towards the low end. This can be accomplished by repositioning the lifting points or by the use of shortening devices in one or more legs. When all is in order, the lift can proceed.
- h. The load should be landed carefully. Before slackening the chain, a check should be made that the load is properly supported; this is specially important when several loose objects are in basket hitch and choke hitch.
- i. When loads are accelerated or decelerated quickly, high dynamic forces occur which increase the stresses in the chain. Such situations which should be avoided, arise from snatch or shock loading, for example, from not taking up the slack chain before starting to lift or by the impact of arresting falling loads

#### 15.4.1 Common Malpractices to be Avoided:


The following shall be particularly avoided:

- a) Overloading slings and continuing to use chain after it has been stretched by overloading,
- b) Using long link chain (that is, pitch  $> 3d$ ) for lifting,
- c) Using hoist chains as sling chains,
- d) Using components of lower grade than the chain,

- e) Using a sling with any broken or deformed links,
- f) Connecting chain links with bolts or wires (See below),
- g) Point loading of hooks
- h) Wrapping the chain several times around a hook (See below) and
- j) Using a worn out chain beyond the limits stated in (see 15.4.3.3)



Connection chain with bolt or wires

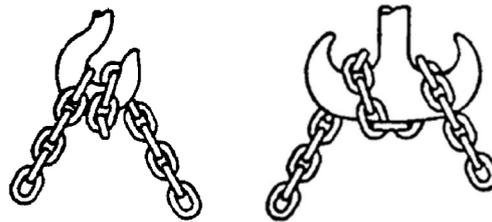

Wrapping the chain several times around a hook

## 15.4.2 Inspection

**15.4.2.1 Frequent Inspection** — This is a regular visual inspection by the operator or other designated personnel. No records need be kept of such inspections. The chain sling should be examined throughout its working length including all attachments to detect any evidence of wear, distortion or external damage. The frequency of these inspections should be related to severity of the service. If faults are found during this inspection, the procedure given in 5.2 should be followed.

**15.4.2.2 Periodic Inspection** — This is a thorough examination by a competent person of which records should be made to provide the basis for a continuing evaluation.

Chain slings should be thoroughly cleaned so as to be free from oil and dust prior to inspection. Any cleaning method which does not damage the parent metal is acceptable. Methods to avoid are those that may cause hydrogen embrittlement, overheating, removal of metal or movement of metal which may cover cracks or surface defects.

Adequate lighting, free from shadows, should be provided and the sling examined throughout its length to detect any evidence of wear, distortion or external damage.

The sling should be withdrawn from service for maintenance and repair if any of the following faults are observed:

- a) The sling markings are illegible, that is, information on the sling identification and/or the working load limit.
- b) Distortion of the upper or lower terminal fittings.
- c) Chain stretch — If the chain links are elongated or if there is any lack of free articulation between the links or noticeable difference in the branch length of multi-branched slings, the chain may have been stretched. Where possible, as an initial inspection procedure, it is recommended that the actual reach of the sling be measured and recorded. This procedure allows a rapid indication of major deviation from the original product.
- d) Wear — Wear by contact with other objects usually occurs on the outside of the straight portions of the links where it is easily seen and measured. Wear between adjoining links is


- hidden. The chain must be slack and the adjoining links rotated to expose the inner end of each link.
- e) Cuts, nicks, gouges, cracks, excessive corrosion, heat discolouration, bent or distorted links or any other defects in chain or fittings. Shallow and rounded indentations in areas of low tensile stress may not be significant but deep nicks in high tension areas and sharp transverse nicks are unacceptable.
  - f) Signs of opening out of hooks, that is, any noticeable increase in throat openings or any other form of distortion in the lower terminal fitting. The increases in throat opening should not exceed 10 percent of the nominal, or be such as to allow the safety catch, if fitted, to become disengaged.
  - g) In correct assembly of the mechanical joining devices in slings of non-welded construction (refer to manufacturer's instructions).

### 15.4.3 Maintenance and Repair

**15.4.3.1** The repair or replacement of individual links, fittings or lengths of chain should only be carried out by the manufacturer or by those organizations which have the necessary knowledge and equipment (such as welding, heat-treatment, proof testing and crack detection facilities).

**15.4.3.2** Links that are cracked, visibly bent or twisted, severely corroded or have deposits which cannot be removed should be discarded and replaced, as should visibly distorted components.

**15.4.3.3** Inter-link wear may be tolerated until the thickness of the material at the point of contact has been reduced to 80 percent of the nominal diameter ( $0.8 d_n$ ). In those cases where wear occurs at more than one point on the same cross-section, the mean diameter should be measured and such wear may be tolerated until the mean diameter has been reduced to 90 percent of the nominal diameter ( $0.9 d_n$ ).

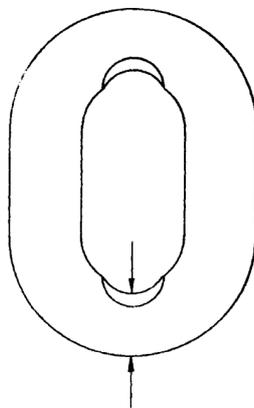

**Inter-Link Wear on Links**

**15.4.3.3.4** Where appropriate, for example, in the case of large hooks and sling fittings, minor defects, such as nicks and gouges, may be removed by careful grinding or filing. Following repair, the surface should blend smoothly into the adjacent material without abrupt change of section. The complete removal of the defect should not reduce the thickness of the section at that point by more than 10 percent.

**15.4.3.5** In the case of slings whose repair has involved welding, each repaired sling shall be proof tested and inspected before it is returned to use. However, where repair is accomplished by the insertion of a mechanically assembled component, proof testing is not required provided that the component has already been proof tested by the manufacturer.

A proof force has been established for each size and grade of chain sling. These are given in the relevant Indian Standards which should be consulted.

**15.4.3.6** If the tag or label identifying the sling and its Working Load Limit (WLL) becomes detached and the necessary information is not marked on the master link itself, or by some other means, the sling should be withdrawn from service.

#### **15.4.4. Storage and Care of Chain Slings**

**15.4.4.1** Chain slings should normally be kept on a properly designed rack. They should not be left lying on the ground after use where they may be damaged.

**15.4.4.2** If the chain slings are to be left suspended from a crane hook, the sling hooks should be engaged in an upper link.

**15.4.4.3** If chain slings are expected to be out of use for some time they should be cleaned (see **15.4.2.2**), dried and protected from corrosion for example, lightly oiled.

**Note** — Chain slings should not be galvanized or subjected to any plating processes without the approval of the manufacturer.

#### **15.4.5. Record Keeping**

**15.4.5.1** Adequate records are essential for the proper use and maintenance of lifting equipment. The record is a continuous history of the chain sling and should show dates of inspection, testing and maintenance.

**15.4.5.2** The initial record is a description of the chain sling and its identification markings. Inspection periods and test intervals should be determined and entered in the record.


**15.4.5.3** After each periodic inspection, the condition of the chain sling should be noted in the record, The results of each proof test should be recorded.

**15.4.5.4** Each time the sling is repaired the reasons for, and the details of the repairs should be entered in the record.

### **16. RECOMMENDATIONS FOR SAFE USE AND MAINTENANCE OF HAND-OPERATED CHAIN PULLEY BLOCKS**

- a) Never lift a load in excess of the safe working load marked on the block. The block has been proof-loaded to one- and-a-half times the safe working load, but this has been done under carefully controlled conditions. Use of the block at any load greater than the safe working load may result in damage.
- b) Never use a load chain as a sling, that is, by back hooking.
- c) Before use, examine the load chain to ensure that there is no twist. In the case of a block lifting on two falls, twist can arise from the bottom block being accidentally turned over.
- d) Keep load chains well lubricated along their whole length and especially at the contact points between the links. In special circumstances, chain may be used dry, but their life will be considerably reduced.
- e) If the load chain jumps, does not work smoothly or marks in use, it is probably out of pitch and should be replaced.
- f) Do not allow, dirt and hard grease together in the pockets of the load or hand chain wheels.
- g) Do not store, or leave the pulley blocks lying on the ground where they can collect dirt.
- h) Chain pulley blocks are designed for lifting loads vertically and should not be used for pulling horizontally or at an angle.
- i) Never lift with the point of the hook.

- j) Never run the load chain out too far. When the block is run, out beyond the extended dimensions, an excessive and dangerous load is imposed at the load chain slack end anchorage.
- k) All pulley blocks shall be registered and, at periodic intervals, should be thoroughly cleaned, inspected and lubricated.
- l) Care shall be taken when replacing the chains
- m) Check the suspension fixture for top hook for that the same grade of chain is fitted. Blocks shall be adequate strength to support the load being lifted and marked with the grade of chain. the weight of the chain pulley block.

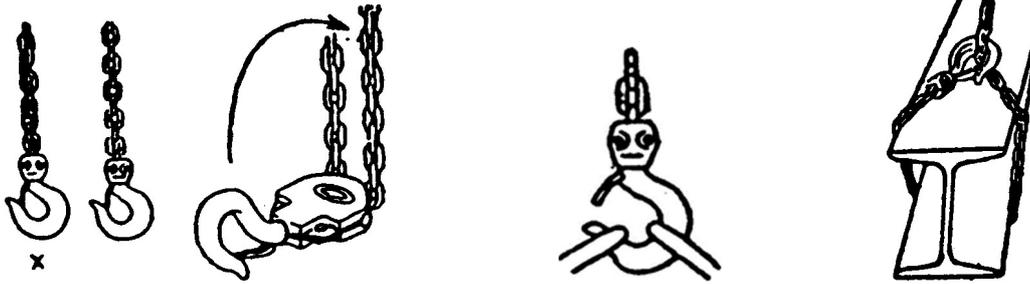

1. No Twisting No capsizing

2. Sling load from the  
Centre of hook


3. No direct binding  
of load with load chain





4. No overloading




5. No extreme slant slinging

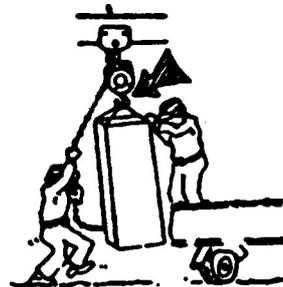

6. No over lifting No over lowering

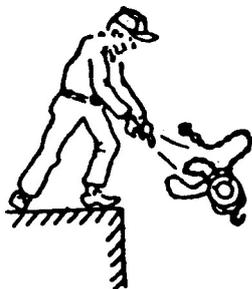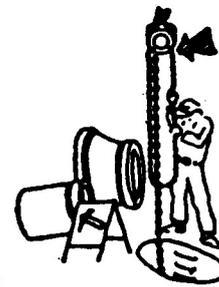

7. No rough handling

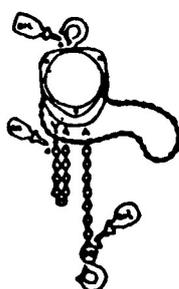

8. Don't forget to oil the  
Load chain after use

**Illustrations for the safe use of hand-operated chain pulley block**

## Schedule I

### Register of periodic test & examination of lifting appliances and gears

Part I – A: Initial and periodic load tests of lifting appliances						
1 Situation and description of lifting appliances tested with distinguishing number/ marks, if any	2 Number of certificate of test and examination of competent person	3 I certify that on the date I have appended my signature, the lifting appliances shown in column I was tested and no defects affecting its safe working condition were found other than those shown in column 4			4 Remarks, to be signed and dated with seal	
1 2 3						
Part I – B: Annual thorough examination						
I certify that on the date on which I have appended my signature, the lifting appliance shown in column 1 was thoroughly examined and no defects affecting its safe working conditions were found other than those shown in column 11						
5 Date & signature with seal	6 Date and signature with seal	7 Date and signature with seal	8 Date and signature with seal	9 Date and signature with seal	10 Date and Signature with seal	11 Date and signature with seal
1 2						

## Part II

### Initial and periodical load test of loose gear and annual thorough examination List of loose gears:

The following classes of loose gear, namely –



Page 69 of 71

Chains made of malleable cast iron;  
 Plate link chains;  
 Chains, rings, hooks, shackles and swivels made of steel;  
 Pitched chains;  
 Rings, hooks, shackle and swivels permanently attached to pitched chains;  
 Pulley blocks, containers, spreaders, trays, slings, baskets, etc. and any other similar gears;  
 Hooks and swivels having screw threaded parts or ball bearings or other casehardened parts;  
 Bordeaux connections.

<b>Initial test and periodical load test of loose gears</b>				
<b>1</b> Distinguishing number or marks	<b>2</b> Description of loose gear tested and examined	<b>3</b> Number of certificate of test and examination of competent person	I certify that on the date to which I have appended my signature, the loose gears shown in column 1 and 2 were tested and no defects affecting the safe working condition were found other than those shown in the remark column 6	
			<b>4</b> Date and signature with seal	<b>5</b> Date and signature with seal
1 2 3				
<b>Annual thorough examination of loose gears</b>				
<b>6</b> Remarks, to signed & dated	I certify that on the date to which I have appended my signature the loose gear shown in column 1 and 2 were thorough examined by me and no defects affecting their safe working condition were found other those shown column 10			
	<b>7</b> Date and signature with seal	<b>8</b> Date and signature with seal	<b>9</b> Date and signature with seal	<b>10</b> Date and signature with seal
<b>Part III</b> <b>Annealing of chains, rings, hooks, shackles and swivels (other than those exempted)</b>				




1 Distinguishing number or marks	2 Description of gear annealed	3 No, of certificate of test & examination	I certify that on the date on which I have appended my signature, the gear described in column 1 & 2, was effectively annealed under my supervision; that after being so annealed, every article was carefully inspected and that no defects affecting its safe work condition were found other those shown in column 7	7 Remarks, signed and sealed
-------------------------------------	-----------------------------------	---	---	---------------------------------

\*\*\*\*\*

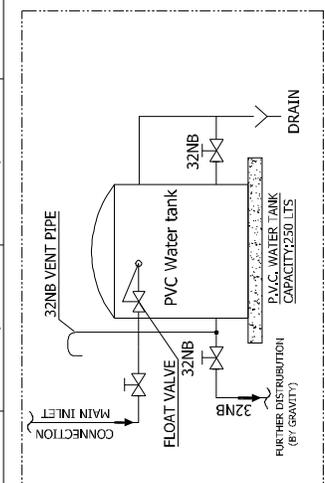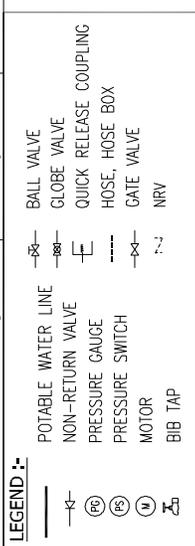

**BIBING & FITTING SPECIFICATION**

- PIPE TO PIPE - PIPE SIZE-50NB & BELOW : SCREWED BUTT WELDING. PIPE TO VALVES - UP TO 50NB & ABOVE : BUTT WELDING.
- MATERIAL FOR PIPES : 60NB & ABOVE : FLANGED. 60NB & BELOW : ERW CARBON STEEL GALVANIZED.
- PIPES TO S : IS 1239 (PART-1) HEAVY GRADE. PIPES TO C : IS 1239 (PART-1) HEAVY GRADE.
- MATERIAL FOR FITTINGS : ERW CARBON STEEL BLACK PIPE PIPES TO IS-5089. ALL FITTINGS SHALL BE WALLEABLE CAST IRON WITH SCREWED ENDS AS PER IS-5089. FITTINGS SHALL BE AS PER IS-5089. ALL FITTINGS SHALL BE AS PER IS-5089. ALL FITTINGS SHALL BE AS PER IS-5089.
- IS 1239(PART-1) CARBON STEEL WITH BUTT WELDING ENDS.

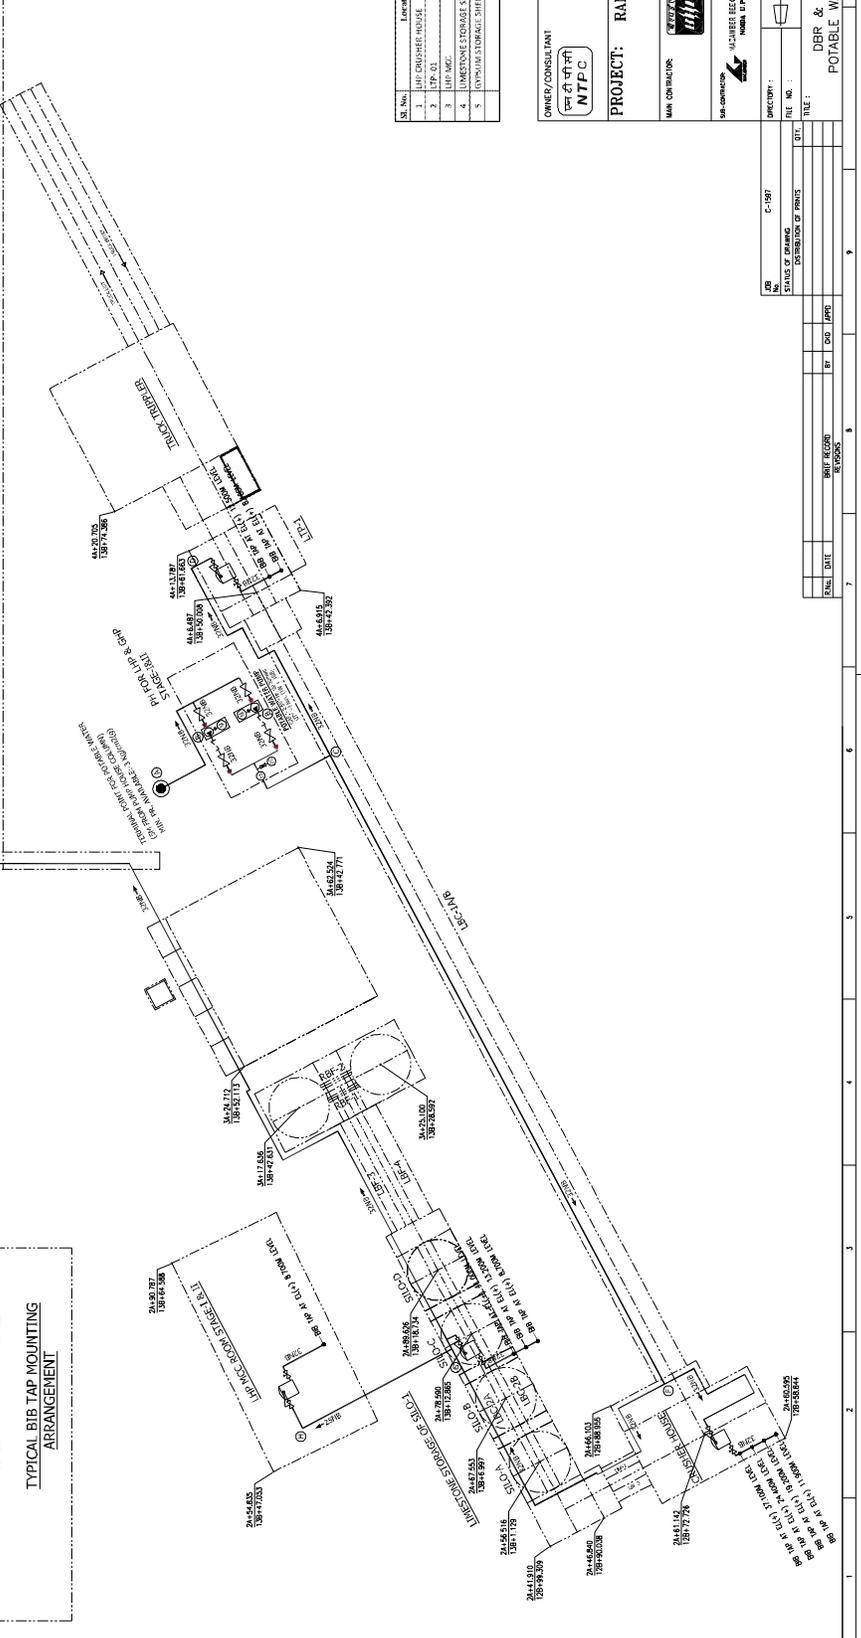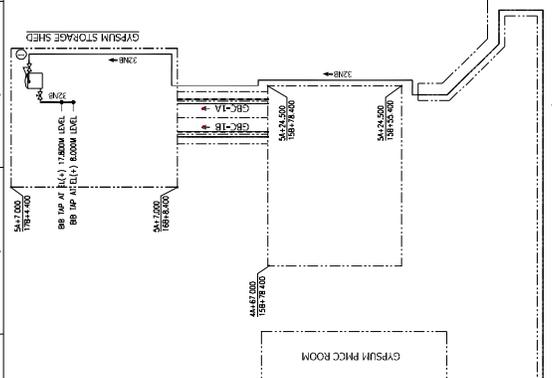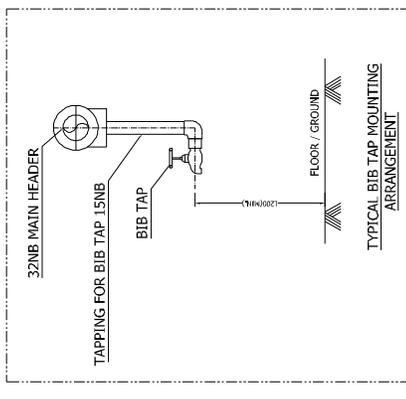

Sl. No.	Location	No. of Tap points	Proposed/Actual Tank Capacity (LIT)
1	01. GYPHUM PHCC ROOM	5	250
2	02. GYPHUM STORAGE TANK	1	250
3	03. LIMESTONE STORAGE TANK	1	250
4	04. LIMESTONE STORAGE TANK	3	250
5	05. GYPHUM STORAGE TANK	2	250
TOTAL		12	5

**OWNER/CONSULTANT**  
**NTPC Limited**  
 (A CORPORATION OF INDIA)

**PROJECT:** RAMAGUNDAM I & II (3X200MW+3X500MW)  
 FGD - (LHP & GHP PACKAGE)





**MAIN CONTRACTOR:** BHARAT HEAVY ELECTRICALS LTD.  
 INDUSTRIAL SYSTEMS GROUP, BANGALORE

**SCALE:** N.T.S.  
**DATE:** 02.02.2021  
**BY:** [Signature]  
**CHECKED BY:** [Signature]  
**DATE:** 02.02.2021

**PROJECT NO.:** 3130-109-PVM-S-085  
**REVISION NO.:** MBS/C-1697/DS-4195\_00

**REVISIONS:**

NO.	DATE	DESCRIPTION OF REV.	BY	CHKD BY

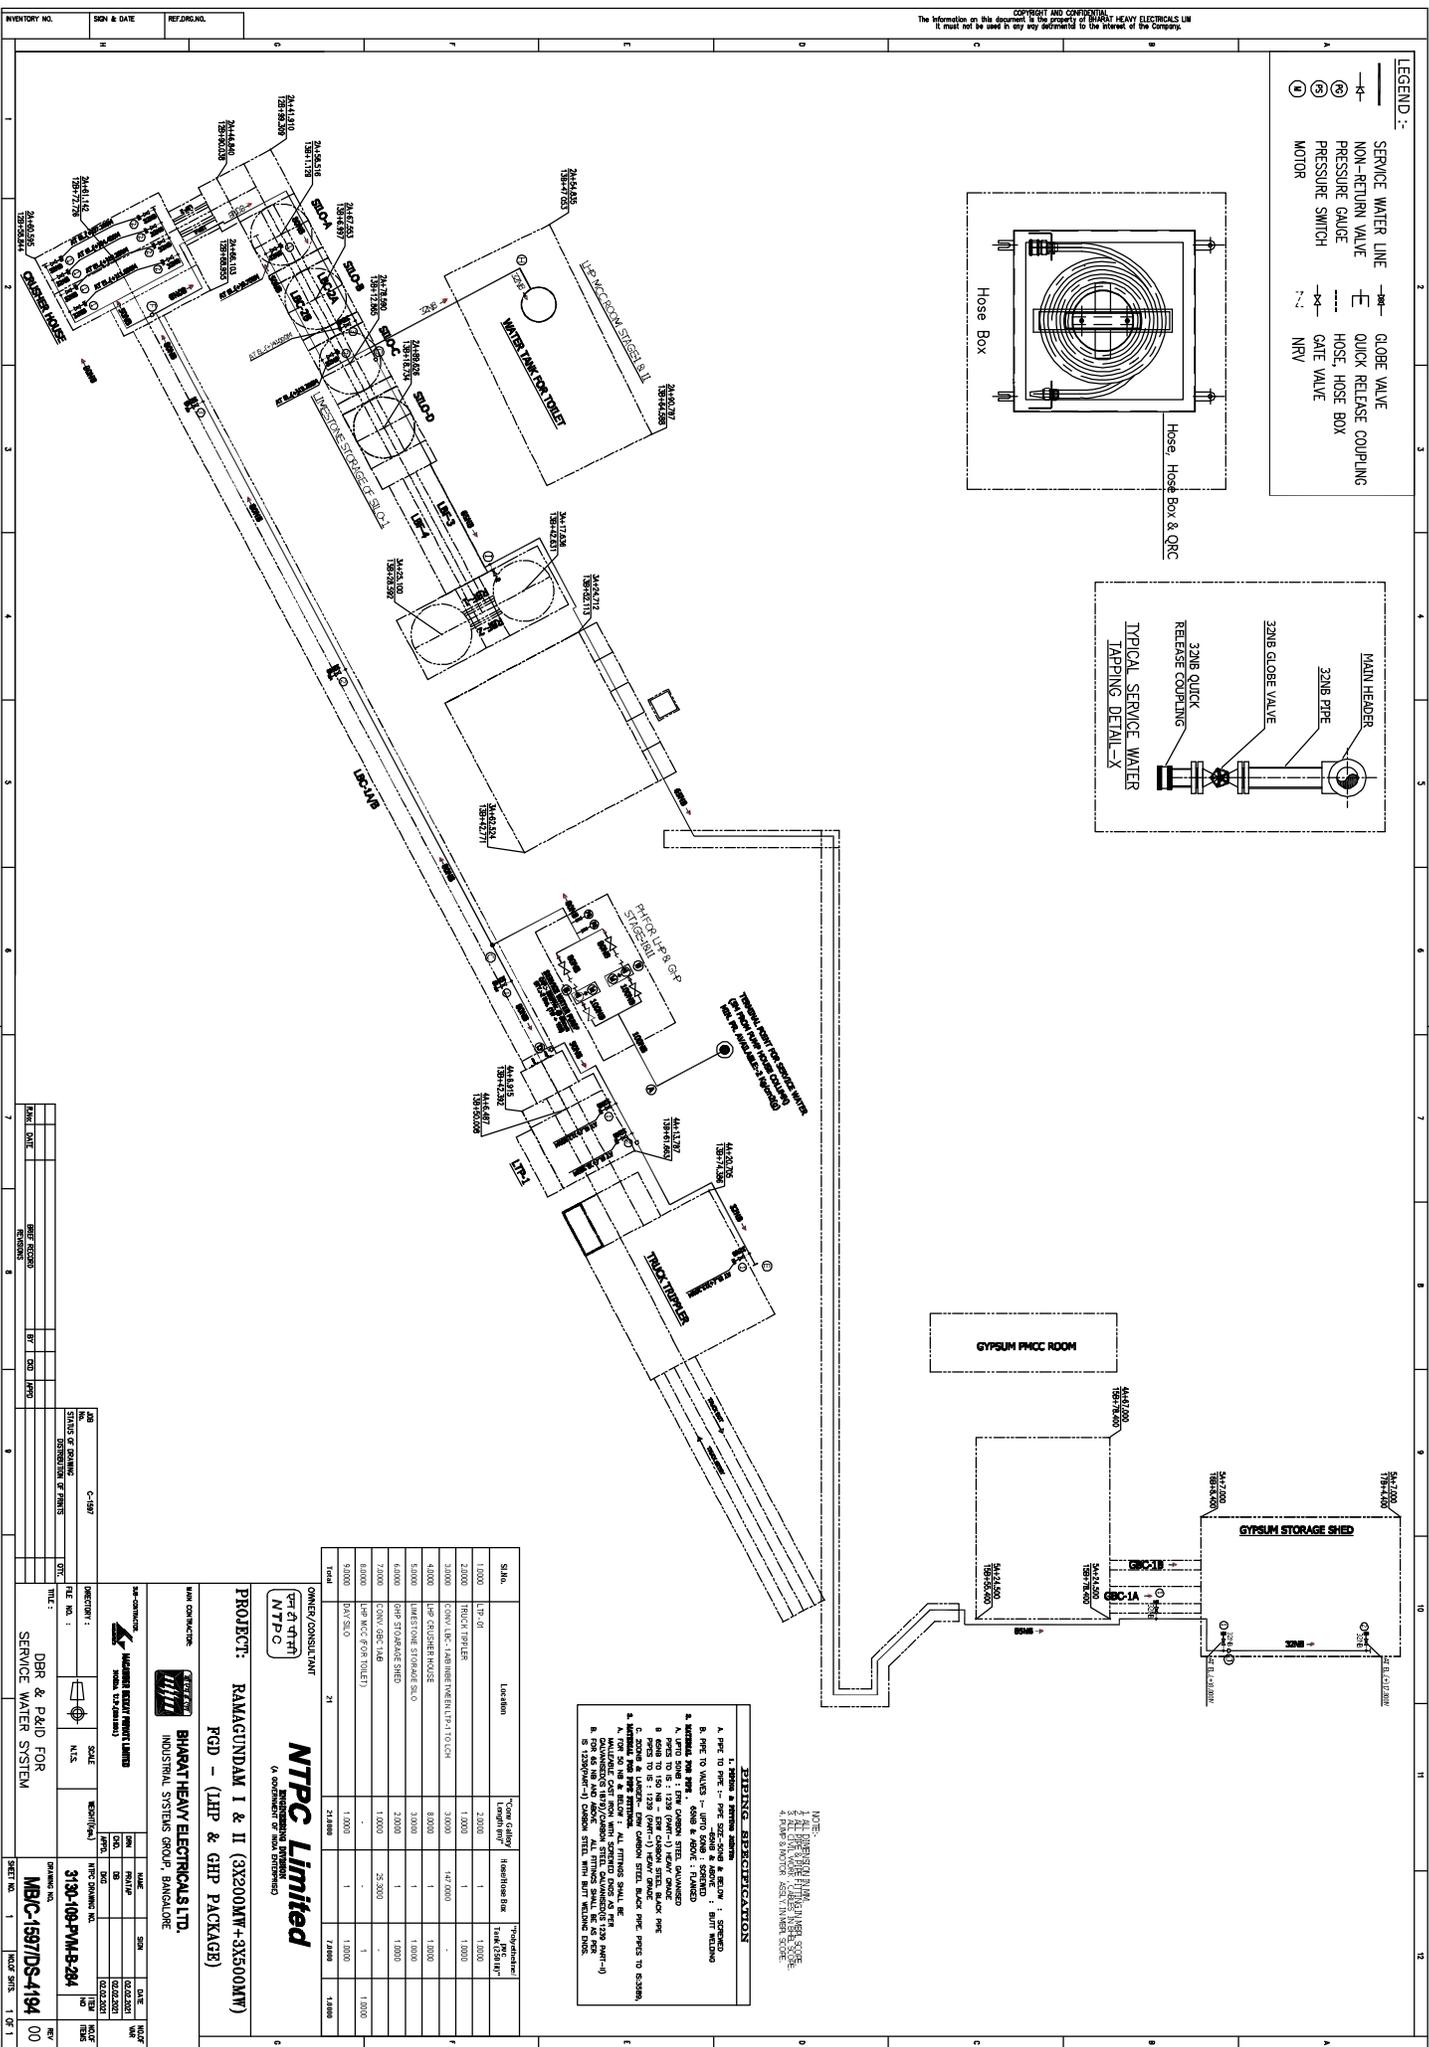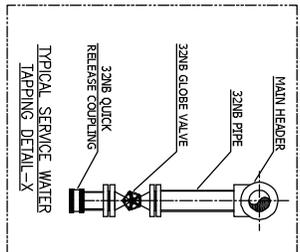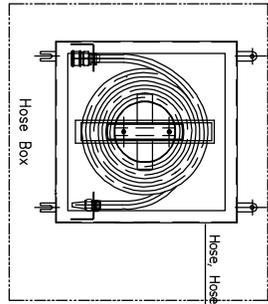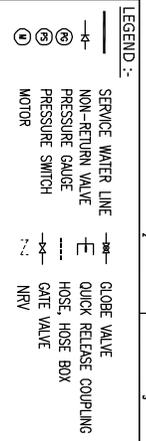

**NOTES:**

1. MATERIALS TO BE USED IN THE WORK SHALL BE AS SPECIFIED IN THE BIDDING DOCUMENTS.
2. ALL MATERIALS SHALL BE SUPPLIED TO THE WORK SITE BY THE CONTRACTOR.
3. THE CONTRACTOR SHALL BE RESPONSIBLE FOR OBTAINING ALL NECESSARY PERMITS AND APPROVALS FROM THE LOCAL AUTHORITIES.
4. THE CONTRACTOR SHALL MAINTAIN ACCESS TO ALL EXISTING SERVICES AND STRUCTURES AT ALL TIMES.
5. THE CONTRACTOR SHALL BE RESPONSIBLE FOR PROTECTING ALL EXISTING UTILITIES AND STRUCTURES.
6. THE CONTRACTOR SHALL MAINTAIN A SAFE WORKING ENVIRONMENT AT ALL TIMES.
7. THE CONTRACTOR SHALL BE RESPONSIBLE FOR DISPOSING OF ALL WASTE MATERIALS IN AN APPROPRIATE MANNER.
8. THE CONTRACTOR SHALL BE RESPONSIBLE FOR OBTAINING ALL NECESSARY INSURANCE COVERAGE.
9. THE CONTRACTOR SHALL BE RESPONSIBLE FOR OBTAINING ALL NECESSARY BONDS.
10. THE CONTRACTOR SHALL BE RESPONSIBLE FOR OBTAINING ALL NECESSARY REFERENCES.

Sl. No.	Location	Quantity	Unit	Remarks
1	PH-01	1.000	1	PH-01
2	PH-02	1.000	1	PH-02
3	PH-03	1.000	1	PH-03
4	PH-04	1.000	1	PH-04
5	PH-05	1.000	1	PH-05
6	PH-06	1.000	1	PH-06
7	PH-07	1.000	1	PH-07
8	PH-08	1.000	1	PH-08
9	PH-09	1.000	1	PH-09
10	PH-10	1.000	1	PH-10
11	PH-11	1.000	1	PH-11
12	PH-12	1.000	1	PH-12
13	PH-13	1.000	1	PH-13
14	PH-14	1.000	1	PH-14
15	PH-15	1.000	1	PH-15
16	PH-16	1.000	1	PH-16
17	PH-17	1.000	1	PH-17
18	PH-18	1.000	1	PH-18
19	PH-19	1.000	1	PH-19
20	PH-20	1.000	1	PH-20
21	PH-21	1.000	1	PH-21
22	PH-22	1.000	1	PH-22
23	PH-23	1.000	1	PH-23
24	PH-24	1.000	1	PH-24
25	PH-25	1.000	1	PH-25
26	PH-26	1.000	1	PH-26
27	PH-27	1.000	1	PH-27
28	PH-28	1.000	1	PH-28
29	PH-29	1.000	1	PH-29
30	PH-30	1.000	1	PH-30
31	PH-31	1.000	1	PH-31
32	PH-32	1.000	1	PH-32
33	PH-33	1.000	1	PH-33
34	PH-34	1.000	1	PH-34
35	PH-35	1.000	1	PH-35
36	PH-36	1.000	1	PH-36
37	PH-37	1.000	1	PH-37
38	PH-38	1.000	1	PH-38
39	PH-39	1.000	1	PH-39
40	PH-40	1.000	1	PH-40
41	PH-41	1.000	1	PH-41
42	PH-42	1.000	1	PH-42
43	PH-43	1.000	1	PH-43
44	PH-44	1.000	1	PH-44
45	PH-45	1.000	1	PH-45
46	PH-46	1.000	1	PH-46
47	PH-47	1.000	1	PH-47
48	PH-48	1.000	1	PH-48
49	PH-49	1.000	1	PH-49
50	PH-50	1.000	1	PH-50
51	PH-51	1.000	1	PH-51
52	PH-52	1.000	1	PH-52
53	PH-53	1.000	1	PH-53
54	PH-54	1.000	1	PH-54
55	PH-55	1.000	1	PH-55
56	PH-56	1.000	1	PH-56
57	PH-57	1.000	1	PH-57
58	PH-58	1.000	1	PH-58
59	PH-59	1.000	1	PH-59
60	PH-60	1.000	1	PH-60
61	PH-61	1.000	1	PH-61
62	PH-62	1.000	1	PH-62
63	PH-63	1.000	1	PH-63
64	PH-64	1.000	1	PH-64
65	PH-65	1.000	1	PH-65
66	PH-66	1.000	1	PH-66
67	PH-67	1.000	1	PH-67
68	PH-68	1.000	1	PH-68
69	PH-69	1.000	1	PH-69
70	PH-70	1.000	1	PH-70
71	PH-71	1.000	1	PH-71
72	PH-72	1.000	1	PH-72
73	PH-73	1.000	1	PH-73
74	PH-74	1.000	1	PH-74
75	PH-75	1.000	1	PH-75
76	PH-76	1.000	1	PH-76
77	PH-77	1.000	1	PH-77
78	PH-78	1.000	1	PH-78
79	PH-79	1.000	1	PH-79
80	PH-80	1.000	1	PH-80
81	PH-81	1.000	1	PH-81
82	PH-82	1.000	1	PH-82
83	PH-83	1.000	1	PH-83
84	PH-84	1.000	1	PH-84
85	PH-85	1.000	1	PH-85
86	PH-86	1.000	1	PH-86
87	PH-87	1.000	1	PH-87
88	PH-88	1.000	1	PH-88
89	PH-89	1.000	1	PH-89
90	PH-90	1.000	1	PH-90
91	PH-91	1.000	1	PH-91
92	PH-92	1.000	1	PH-92
93	PH-93	1.000	1	PH-93
94	PH-94	1.000	1	PH-94
95	PH-95	1.000	1	PH-95
96	PH-96	1.000	1	PH-96
97	PH-97	1.000	1	PH-97
98	PH-98	1.000	1	PH-98
99	PH-99	1.000	1	PH-99
100	PH-100	1.000	1	PH-100

**OWNER/CONSULTANT**  
NTPC Limited  
(A GOVERNMENT OF INDIA ENTERPRISE)

**PROJECT:** RAMAGUNDAM I & II (3X200MW+3X500MW)  
FGD - (IHP & GHP PACKAGE)

**MAIN CONTRACTOR:** BHAVAT HEAVY ELECTRICALS LTD.  
INDUSTRIAL SYSTEMS GROUP, BANGALORE


**DR & P&ID FOR SERVICE WATER SYSTEM**

DATE: 02/02/2023  
SCALE: 1:100  
SHEET NO: 1 OF 1

DESIGNED BY: M.B.C. (1587)DS-4194  
CHECKED BY: M.B.C. (1587)DS-4194

**LEGEND :-**

- PLAIN WATER DS PUMP
- ⊗ GATE VALVE
- ⊗ NON-RETURN VALVE
- ⊗ SPRINKLER
- ⊗ PRESSURE GAUGE
- ⊗ GLOBE VALVE
- ⊗ PRESSURE SWITCH
- ⊗ BALL VALVE
- ⊗ MOTOR
- ⊗ DUPLEX STRAINER
- ⊗ DIF. PRESSURE SWITCH WITH BALL VALVE
- ⊗ COMPOUND GAUGE
- ⊗ SAFETY RELIEF VALVE

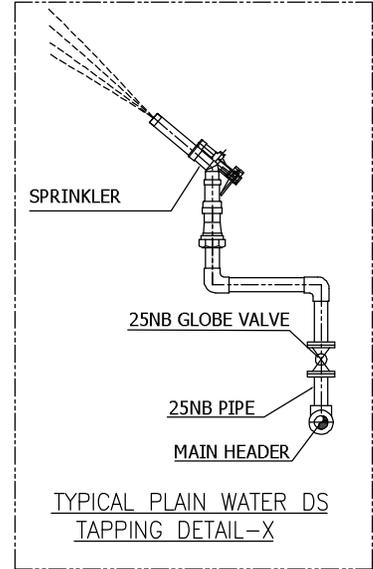

**NOTE:-**

1. ALL DIMENSION IN MM.
2. ALL PIPE & PIPE FITTING IN MBPL SCOPE.
3. ALL CIVIL WORK / CABLES IN BHE SCOPE.
4. COMMON R.C.C. WATER TANK IN BHE SCOPE.
5. PUMP & MOTOR ASSLY. IN MBPL SCOPE.
6. SPRINKLER IS CONSIDERED AT 18 MTR INTERVAL.

**PIPING SPECIFICATION**

- 1. PIPING & FITTING JOINTS:**
  - A. PIPE TO PIPE :- PIPE SIZE-50NB & BELOW : SCREWED  
-65NB & ABOVE : BUTT WELDING
  - B. PIPE TO VALVES :- UPTO 50NB : SCREWED  
65NB & ABOVE : FLANGED
- 2. MATERIAL FOR PIPE .**
  - A. UPTO 50NB : ERW CARBON STEEL GALVANISED  
PIPES TO IS : 1239 (PART-1) HEAVY GRADE.
  - B. 65NB TO 150 NB - ERW CARBON STEEL BLACK PIPE.  
PIPES TO IS : 1239 (PART-1) HEAVY GRADE.
  - C. 200NB & LARGER- ERW CARBON STEEL BLACK PIPE. PIPES TO IS:3589.
- 3. MATERIAL FOR PIPE FITTINGS.**
  - A. FOR 50 NB & BELOW : ALL FITTINGS SHALL BE MALLEABLE CAST IRON WITH SCREWED ENDS AS PER GALVANISED(S:1879)/CARBON STEEL GALVANISED(S:1239 PART-II)
  - B. FOR 65 NB AND ABOVE : ALL FITTINGS SHALL BE AS PER IS 1239(PART-II) CARBON STEEL WITH BUTT WELDING ENDS.

OWNER/CONSULTANT  
**NTPC Limited**  
INDUSTRIAL SYSTEMS GROUP, BANGALORE  
(A GOVERNMENT OF INDIA ENTERPRISE)


PROJECT: **RAMAGUNDAM I & II (3X200MW+3X500MW) FGD - (LHP & GHP PACKAGE)**

MAIN CONTRACTOR: **BHARAT HEAVY ELECTRICALS LTD.**  
INDUSTRIAL SYSTEMS GROUP, BANGALORE

DATE	NAME	SIGN	DATE	NO. OF REV.
08.02.2021	PRATAP		08.02.2021	
08.02.2021	CHD.	ONG	08.02.2021	
08.02.2021	APRD.	ONG	08.02.2021	

SCALE: N.T.S. WEIGHT(Kg):  
 DIRECTORY : NTPC DRAWING NO. 3130-108-P/M-B-284  
 FILE NO. : \_\_\_\_\_

TITLE: **DBR & SCHEMATIC DIAGRAM FOR PLAIN WATER SYSTEM**  
 DRAWING NO. MBPL-MBC-1667/DS-4184  
 SHEET NO. 1 NO. OF SHEETS 1 OF 1

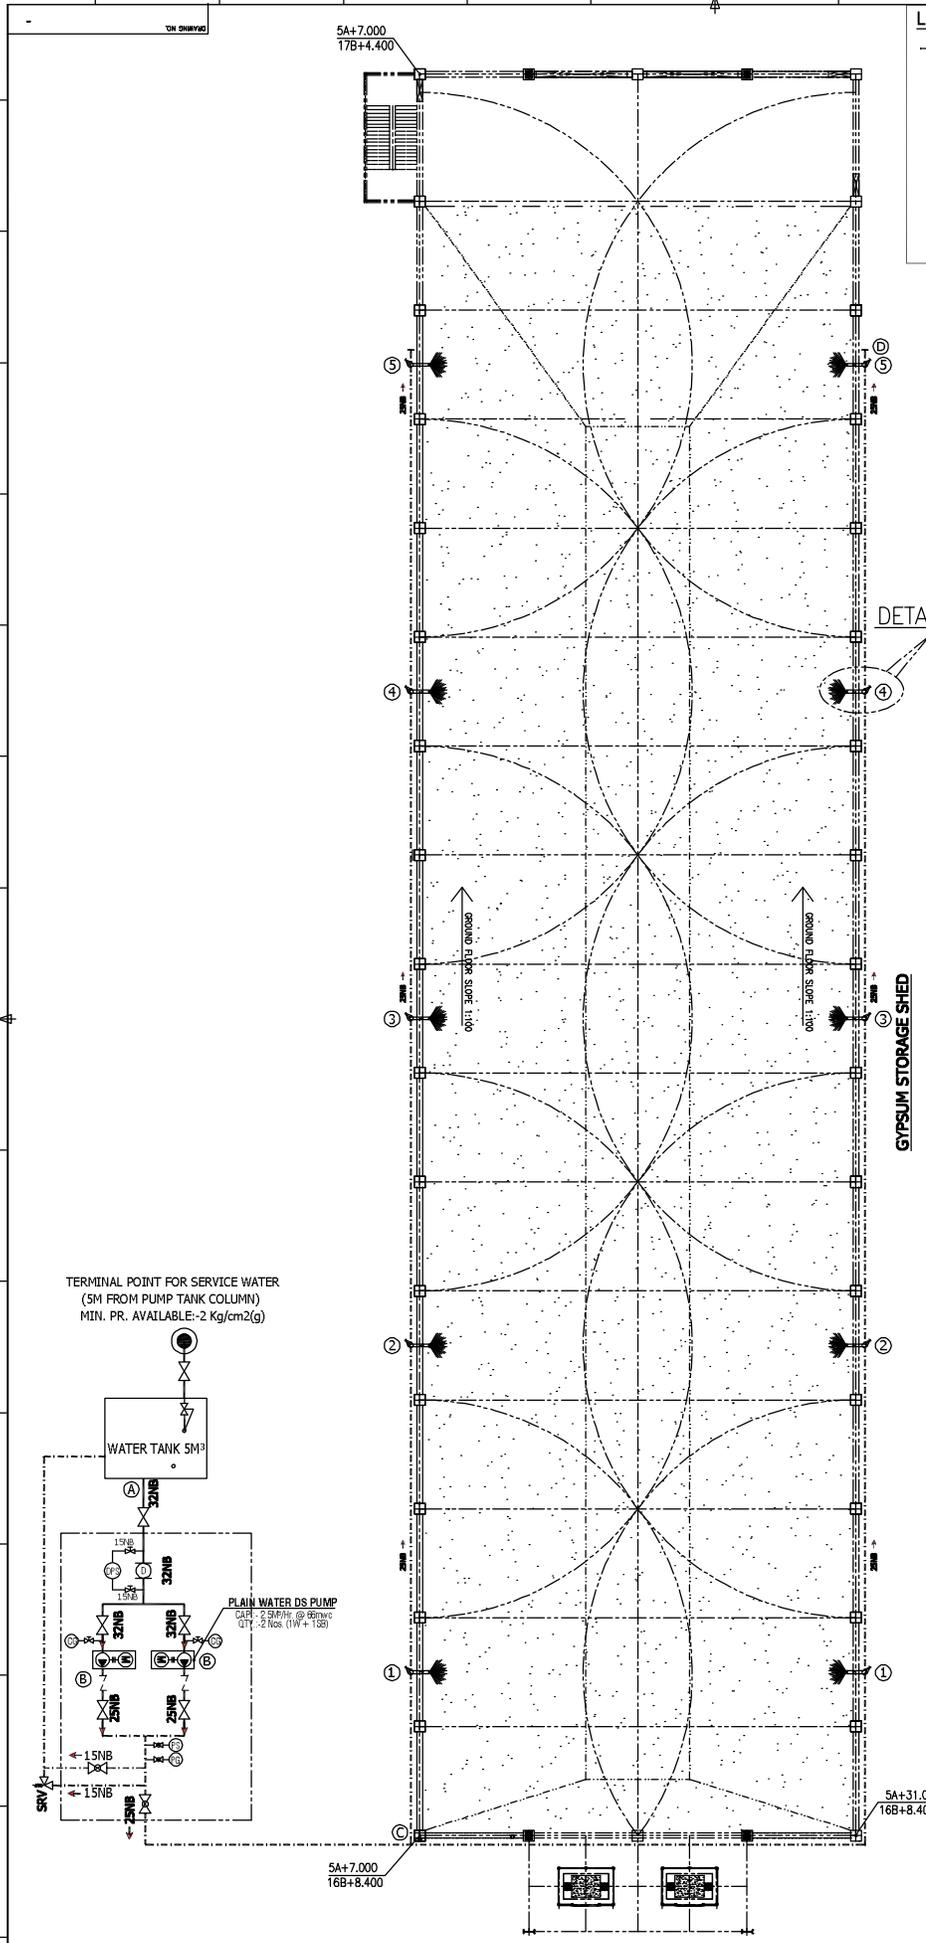

TERMINAL POINT FOR SERVICE WATER  
 (5M FROM PUMP TANK COLUMN)  
 MIN. PR. AVAILABLE:-2 Kg/cm2(g)



PLAIN WATER DS PUMP  
 CAP: 2 SM/HR @ 65mwc  
 QT: 2 Nos. (1W+1B)

GYPSUM STORAGE SHED

DATE	REV.	BY	CHKD.	APPD.